

BEECHCRAFT DUCHESS 76
Pilot's Operating Handbook
and
FAA Approved Airplane Flight Manual

A7 September, 1983

LOG OF REVISIONS

PAGE	DESCRIPTION
Title Page	Added Revision Date
Page A (A7)	Updated
a	Revised "Introduction"
b	Shifted Material and Revised "Introduction"
c and d	Added
1-1	Revised: "Table of Contents"
1-5	Revised "Use of the Handbook"
1-6 and 1-6A	Shifted Material
1-10	Revised "Oil"
1-17	Revised "Demonstrated Crosswind Velocity"
2-1	Revised "Table of Contents"
2-5	Revised "Oil"
2-9	Shifted Material
2-10	Revised "Required Equipment for Various Conditions of Flight"
2-11 thru 2-20	Shifted Material and Revised "Required Equipment for Various Conditions of Flight"
3-1	Revised: "Table of Contents"
3-3	Revised "Emergency Airspeeds"
4-1	Revised: "Table of Contents"
4-3	Revised: "Speeds for Safe Operation"
4-9	Added "Hot Start" procedure
4-11	Revised: "Before Takeoff"
4-12	Revised: "Climb"

LOG OF REVISIONS

Page	Description
4-13	Revised: "Leaning Mixture Using The Exhaust Gas Temperature Indicator (EGT)"
4-14	Revised: "Descent."
4-14A	Revised: "Shutdown"
4-14B	Added
4-15	Revised: "Electric Elevator Trim"
5-6 thru 5-8	Revised: "Introduction to Performance and Flight Planning"
5-21	Upgraded quality of chart
5-26	Revised: "Take-off Distance" Graph
5-29	Revised: "Accelerate-Go Distance" Graph
5-31	Revised: "Take-off Climb Gradient - One Engine Inoperative" Example
8-16	Revised: "Oil" and "Battery"
A7	

BEECHCRAFT DUCHESS 76
Pilot's Operating Handbook
and
FAA Approved Airplane Flight Manual

A6 January, 1982

LOG OF REVISIONS

Page	Description
Title Page	Added Revision Date
Logo Page	Added
Page A (A6)	Updated
2-20	Revised "Structural Life"
3-1	Revised "Table of Contents"
3-3	Shifted Material
3-4	Shifted Material
3-5	Shifted Material
3-6 and 3-7	Shifted Material and Revised "Air Start"
5-2	Revised "Table of Contents"
5-35	Revised "Cruise Speeds" Graph
5-39	Revised "Cruise Power" Chart
5-40	Added New "Cruise Power" Chart
5-40A	Added "Intentionally Left Blank"
5-40B	Revised "Range Profile"
5-41	Revised "Endurance Profile"
7-9	Revised "Flight Instruments"
7-30 and 7-31	Revised "External Power" and Shifted Material
8-2	Revised "Table of Contents"
8-11	Revised "External Power"
8-46 and 8-47	Added Preamble to "Consumable Materials" and Shifted Material

A6

98-38307

LOG OF REVISIONS

Page	Description
8-53	Deleted "Landing Gear" and Revised "Power Plant"
8-54	Shifted Material and Revised "Fuel System", "Electrical System", and "Utility System" and Deleted "Instruments" and "Flaps and Flight Controls"
8-55	Added "Wing Structure Inspection Schedule" and Shifted Material

A6

98-38307

BEEHCRAFT DUCHESS 76
Pilot's Operating Handbook
and
FAA Approved Airplane Flight Manual

A5August, 1980

LOG OF REVISIONS

Page	Description
Title Page	Added Revision Date
Page A (A5)	Updated
1-1 and 1-2	Revised "Table of Contents"
1-4 and 1-5	Revised "Use of Handbook"
1-6 thru 1-6B	Shifted Material
2-13	Added "Starter Engaged Warning Light"
3-1	Revised "Table of Contents"
3-12B	Added "Starter Engaged Warning Light Illuminated"
4-1	Revised "Table of Contents"
4-9	Shifted Material
4-10 and 4-10A	Revised "Starting"
4-10B	Revised "After Starting and Taxi" and "Before Takeoff"
4-11	Shifted Material
5-23	Revised "Take-Off Weight" Graph
5-42	Revised "Holding Time" Graph
5-46	Revised "Landing Distance - Flaps Up"
5-47	Revised "Landing Distance - Grass Surface - Flaps Down (DN)" Graph
6-1	Revised "Table of Contents"
6-8	Shifted Material
6-11	Revised "Loading Instructions"
7-1 thru 7-3	Revised "Table of Contents"
7-12	Added "Warning Horn "Q" Switch"
7-12A	Added "Warning Horn Silence Button"
7-19	Shifted Material
7-20 and 7-21	Revised "Starters"

A5

98-38307

LOG OF REVISIONS

Page	Description
7-29	Shifted Material
7-30	Added "Starter Engaged Warning Light"
7-31	Shifted Material
8-8	Revised "Jacking"
8-18	Revised "Tires"
8-36	Revised "Lubrication Diagrams"
8-42	Revised "Recommended Servicing Schedule"
8-46 and 8-47	Revised "Consumable Materials"
8-54	Revised "Power Plant"
10-1 Thru 10-67 Revised Safety Section Dated March 1981.	
A5	

98-38307

**BEECHCRAFT Duchess 76
Pilot's Operating Handbook
and
FAA Approved Airplane Flight Manual**

A4April, 1980

LOG OF REVISIONS

Page	Description
Title Page	Update
Page A (A4)	Update
7-16 7-16A 7-16B 7-17	Revised "Control Lock"

98-38307

A4

Page A

**BEEHCRAFT Duchess 76
Pilot's Operating Handbook
and
FAA Approved Airplane Flight Manual**

A3 October 1979

LOG OF REVISIONS

Page	Description
Title Page	Update
"A" Page	Update
2-1	Revise "Table of Contents"
2-4	Rearrange Material
2-5	Add "Fuel Additives"
2-21	Revise "Placards"
2-26	Revise "Placards"
4-19	Revise "Noise Characteristics"
8-47	Revise "Consumable Materials"
A3	

BEECHCRAFT Duchess 76
Pilots Operating Handbook
and
FAA Approved Airplane Flight Manual

A2April 1979

LOG OF REVISIONS

Page	Description
Title Page	Update
"A" Page	Update
1-1 & 1-2	Revise "Table of Contents"
1-3 thru 1-6	Rearrange Material and Revise Introduction
1-13	Revise "Airspeed Terminology"
1-15	Revise "Meteorological Terminology"
1-17	Revise "Airplane Performance and Flight Planning Terminology"
2-9	Revise "Required Equipment"
3-1 & 3-2	Revise "Table of Contents"
3-3	Revise Information
3-5	Revise Procedures
3-6 & 3-7	Revise "Air Start"
3-11	Revise "Warning"
3-12A	Revise "Illumination of Alternator-out Light"
3-12B	Rearrange Material
3-15	Remove "Practice Demonstration of V_{MCA} "
3-16	Rearrange Material
4-1	Revise "Table of Contents"
4-3	Revise "Airspeeds"
4-8 & 4-9	Revise "Starting Engines Using APU"
4-10	Revise "Starting" and "Caution"
4-11	Revise "Before Takeoff"
4-12	Revise "Takeoff"
4-14	Revise "Balked Landing"
4-16	Revise "Warning"
4-17	Rearrange Material
4-18	Add "Practice Demonstration of V_{MCA} "
4-19	Revise "Noise Characteristics"

A2

LOG OF REVISIONS

Page	Description
5-14	Revise "Comments"
5-44	Revise "Climb Speed"
5-47	Revise "Associated Conditions"
6-17	Revise "Table"
7-1 thru 7-3	Revise "Table of Contents"
7-9	Revise "Engine Instrumentation"
7-11	Add "Time-Delay Relay"
7-12	Rearrange Material
7-20 & 7-21	Rearrange Material
7-22	Add "Fuel Selector Valves"
7-24 & 7-25	Rearrange Material
7-26	Revise "Battery"
7-27	Revise "Power Distribution Schematic"
7-28 & 7-29	Revise "Alternators"
7-30	Revise "External Power"
7-31 thru 7-33	Delete "Charts"
7-39	Revise "Pilot System"
7-40	Revise "Static System"
7-41	Revise "Stall Warning"
8-3	Revise "Introduction"
8-4	Revise "Publications"
8-8 thru 8-10	Revise "Prolonged Out-of-Service Care"
8-11 & 8-12	Revise "External Power"
8-16 & 8-17	Revise "Battery"
8-18	Revise "Shock Struts"
8-20	Revise "Brakes"
8-26 & 8-27	Revise "Cleaning"
8-46 & 8-47	Revise "Consumable Materials"
8-51	Revise "Bulb Replacement Guide"
8-53	Revise "Overhaul and Replacement Guide"

A2

BEECHCRAFT Duchess 76
Pilot's Operating Handbook
and
FAA Approved Airplane Flight Manual

A1 Revision.....March 1979

LOG OF REVISIONS

Page	Description
Title Page	Update
"A" Page	Update
2-12 & 2-13	Revise "Electrical Power"
3-1	Revise "Table of Contents"
3-12	Add "Complete Loss of Electrical Power"
3-12A & 3-12B	Rearrange Material
4-1	Revise "Table of Contents"
4-9 & 4-10	Revise "Starting" Procedures
4-10A & 4-10B	Rearrange Material
A1	

BEECHCRAFT Duchess 76
Pilot's Operating Handbook
and
FAA Approved Airplane Flight Manual

A-Original Issue January 1978

LOG OF REVISIONS

Page	Description
Title Page	—
"A" Page	—
a and b	—
1-1 thru 1-20	—
2-1 thru 2-28	—
3-1 thru 3-17	—
4-1 thru 4-18	—
5-1 thru 5-47	—
6-1 thru 6-18	—
7-1 thru 7-41	—
8-1 thru 8-56	—
9-1 and 9-2	—
Supplements	See Log of Supplements
10-1 thru 10-37	—
A	

BI
DI

INTRODUCTION

The format and contents of this Pilot's Operating Handbook and FAA Approved Airplane Flight Manual conform to GAMA (General Aviation Manufacturers Association) Handbook Specification Number 1. Use of this specification by all manufacturers will provide the pilot with the same type of data in the same place in all handbooks.

Attention is called to Section X (SAFETY INFORMATION). BEEHCRAFT feels that it is very important to have Safety Information in a condensed form in the hands of the pilots. The Safety Information should be read and studied. Periodic review will serve as a reminder of good piloting techniques.

WARNING

Use only genuine BEEHCRAFT or BEEHCRAFT approved parts obtained from BEEHCRAFT approved sources, in connection with the maintenance and repair of Beech airplanes.

Genuine BEEHCRAFT parts are produced and inspected under rigorous procedures to insure airworthiness and suitability for use in Beech airplane applications. Parts purchased from sources other than BEEHCRAFT, even though outwardly identical in appearance, may not have had the required tests and inspections performed, may be different in fabrication

BEECHCRAFT
Duchess 76

techniques and materials, and may be dangerous when installed in an airplane.

Salvaged airplane parts, reworked parts obtained from non-BEECHCRAFT approved sources, or parts, components, or structural assemblies, the service history of which is unknown or cannot be authenticated, may have been subjected to unacceptable stresses or temperatures or have other hidden damage, not discernible through routine visual or usual nondestructive testing techniques. This may render the part, component or structural assembly, even though originally manufactured by BEECHCRAFT, unsuitable and unsafe for airplane use.

BEECHCRAFT expressly disclaims any responsibility for malfunctions, failures, damage or injury caused by use of non-BEECHCRAFT approved parts.

DUCHESS 76
PILOT'S OPERATING HANDBOOK
AND
FAA APPROVED AIRPLANE FLIGHT MANUAL
TABLE OF DIVISIONS

SECTION I	GENERAL
SECTION II	LIMITATIONS
SECTION III	EMERGENCY PROCEDURES
SECTION IV	NORMAL PROCEDURES
SECTION V	PERFORMANCE
SECTION VI	WEIGHT AND BALANCE/ EQUIPMENT LIST
SECTION VII	SYSTEMS DESCRIPTION
SECTION VIII	HANDLING, SERVICING AND MAINTENANCE
SECTION IX	SUPPLEMENTS
SECTION X	SAFETY INFORMATION

BEECHCRAFT
Duchess 76

INTENTIONALLY LEFT BLANK

BEECHCRAFT
Duchess 76

SECTION I

GENERAL

TABLE OF CONTENTS

<i>SUBJECT</i>	<i>PAGE</i>
Important Notice	1-3
Use of the Handbook	1-4
Revising the Handbook.....	1-6
Airplane Flight Manual Supplements	
Revision Record.....	1-6A
Vendor-Issued STC Supplements	1-6A
Airplane Three View.....	1-7
Ground Turning Clearance	1-8
DESCRIPTIVE DATA	1-9
Engines.....	1-9
Propellers.....	1-9
Fuel	1-10
Oil.....	1-10
Maximum Certificated Weights.....	1-10
Standard Airplane Weights.....	1-11
Cabin and Entry Dimensions	1-11
Baggage Space and Entry Dimensions	1-11
Specific Loadings.....	1-11
SYMBOLS, ABBREVIATIONS, AND TERMINOLOGY...	1-11
Airspeed Terminology	1-12
Meteorological Terminology	1-14
Power Terminology	1-15
Engine Controls and Instruments Terminology.....	1-16
Airplane Performance and Flight	
Planning Terminology.....	1-17
Weight and Balance Terminology.....	1-18

Section I
General

BEECHCRAFT
Duchess 76

INTENTIONALLY LEFT BLANK

THANK YOU . . .

for displaying confidence in us by selecting a BEECHCRAFT airplane. Our design engineers, assemblers, and inspectors have utilized their skills and years of experience to ensure that the new BEECHCRAFT meets the high standards of quality and performance for which BEECHCRAFT airplanes have become famous throughout the world.

IMPORTANT NOTICE

This handbook should be read carefully by the owner and the operator in order to become familiar with the operation of the airplane. Suggestions and recommendations have been made within it to aid in obtaining maximum performance without sacrificing economy. Be familiar with, and operate the airplane in accordance with, the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual, and/or placards which are located in the airplane.

As a further reminder, the owner and the operator should also be familiar with the Federal Aviation Regulations applicable to the operation and maintenance of the airplane, and FAR Part 91, General Operating and Flight Rules. Further, the airplane must be operated and maintained in accordance with FAA Airworthiness Directives which may be issued against it.

The Federal Aviation Regulations place the responsibility for the maintenance of this airplane on the owner and the operator, who should ensure that all maintenance is done by qualified mechanics in conformity with all airworthiness requirements established for this airplane.

All limits, procedures, safety practices, time limits, servicing, and maintenance requirements contained in this handbook

Section I
General

BEEHCRAFT
Duchess 76

are considered mandatory for continued airworthiness to maintain the airplane in a condition equal to that of its original manufacture.

Authorized BEEHCRAFT Aero or Aviation Centers or International Distributors or Dealers can provide recommended modification, service, and operating procedures issued by both the FAA and Beech Aircraft Corporation, which are designed to get maximum utility and safety from the airplane.

USE OF THE HANDBOOK

The Pilot's Operating Handbook is designed to facilitate maintaining the documents necessary for the safe and efficient operation of the airplane. The handbook has been prepared in loose leaf form for ease in maintenance and in a convenient size for storage. The handbook has been arranged with quick reference tabs imprinted with the title of each section and contains ten basic divisions.

Section 1	General
Section 2	Limitations
Section 3	Emergency Procedures
Section 4	Normal Procedures
Section 5	Performance
Section 6	Weight and Balance/Equipment List
Section 7	Systems Description
Section 8	Handling, Servicing, and Maintenance
Section 9	Supplements
Section 10	Safety Information

NOTE

The owner/operator should always refer to all supplements, whether STC Supplements or Beech Supplements, for possible placards, limitations, normal, emergency and other operational procedures for proper operation of the airplane with optional equipment installed.

The following information may be provided to the holder of this manual automatically:

1. Original issues and revisions of Class I and Class II Service Instructions
2. Original issues and revisions of FAA Approved Airplane Flight Manual Supplements
3. Reissues and revisions of FAA Approved Airplane Flight Manuals, Flight Handbooks, Owner's Manuals, Pilot's Operating Manuals, and Pilot's Operating Handbooks

This service is free and will be provided only to airplane owners who are listed on the FAA Aircraft Registration Branch List or the BEECHCRAFT International Owners Notification Service List, and then only if listed by airplane serial number for the model for which this handbook is applicable. For detailed information on how to obtain "Revision Service" applicable to this handbook or other BEECHCRAFT Service Publications consult any BEECHCRAFT Aero or Aviation Center, International Distributor, or International Dealer, or refer to the latest revision of BEECHCRAFT Service Instructions No. 0250-010.

Section I
General

BEECHCRAFT
Duchess 76

Due to the large variety of airplane configurations available through optional equipment, it should be noted that where information pertaining to optional equipment appears in the handbook, the optional equipment will not normally be designated as such. Due to custom design variations, the illustrations in this handbook will not be typical of every airplane.

Beech Aircraft Corporation expressly reserves the right to supersede, cancel, and/or declare obsolete, without prior notice, any part, part number, kit, or publication that may be referenced in this handbook.

REVISING THE HANDBOOK

Immediately following the Title Page is the "Log of Revisions" page(s). The Log of Revisions pages are used for maintaining a listing of all effective pages in the handbook (except the SUPPLEMENTS section), and as a record of revisions to these pages. In the lower right corner of the outlined portion is a box containing a capital letter which denotes the issue or reissue of the handbook. It will be advanced one letter, alphabetically, per reissue. This letter will be suffixed by a number whenever the handbook is revised. When a revision to the handbook is made, a new Log of Revisions will be issued. All Logs of Revisions must be retained in the handbook to provide a complete record of material status until a reissue is made.

WARNING

When this handbook is used for airplane operational purposes it is the pilot's responsibility to maintain it in current status.

AIRPLANE FLIGHT MANUAL SUPPLEMENTS REVISION RECORD

Section IX contains the FAA Approved Airplane Flight Manual Supplements headed by a Log of Supplements page. On the "Log" page is a listing of the FAA Approved Supplemental Equipment available for installation on the airplane. When new supplements are received or existing supplements are revised, a new "Log" page will replace the previous one, since it contains a listing of all previous approvals, plus the new approval. The supplemental material will be added to the grouping in accordance with the descriptive listing.

NOTE

Upon receipt of a new or revised supplement, compare the "Log" page just received with the existing "Log" page in the manual. Retain the "Log" page with the latest date on the bottom of the page and discard the other log.

VENDOR-ISSUED STC SUPPLEMENTS

When a new airplane is delivered from the factory, the handbook delivered with it contains either an STC (Supplemental Type Certificate) Supplement or a Beech Flight Manual Supplement for every installed item requiring a supplement. If a new handbook for operation of the airplane is obtained at a later date, it is the responsibility of the owner/operator to ensure that all required STC Supplements (as well as weight and balance and other pertinent data) are transferred into the new handbook.


Section I
General

BEEHCRAFT
Duchess 76

INTENTIONALLY LEFT BLANK

BEECHCRAFT
Duchess 76


Section I
General

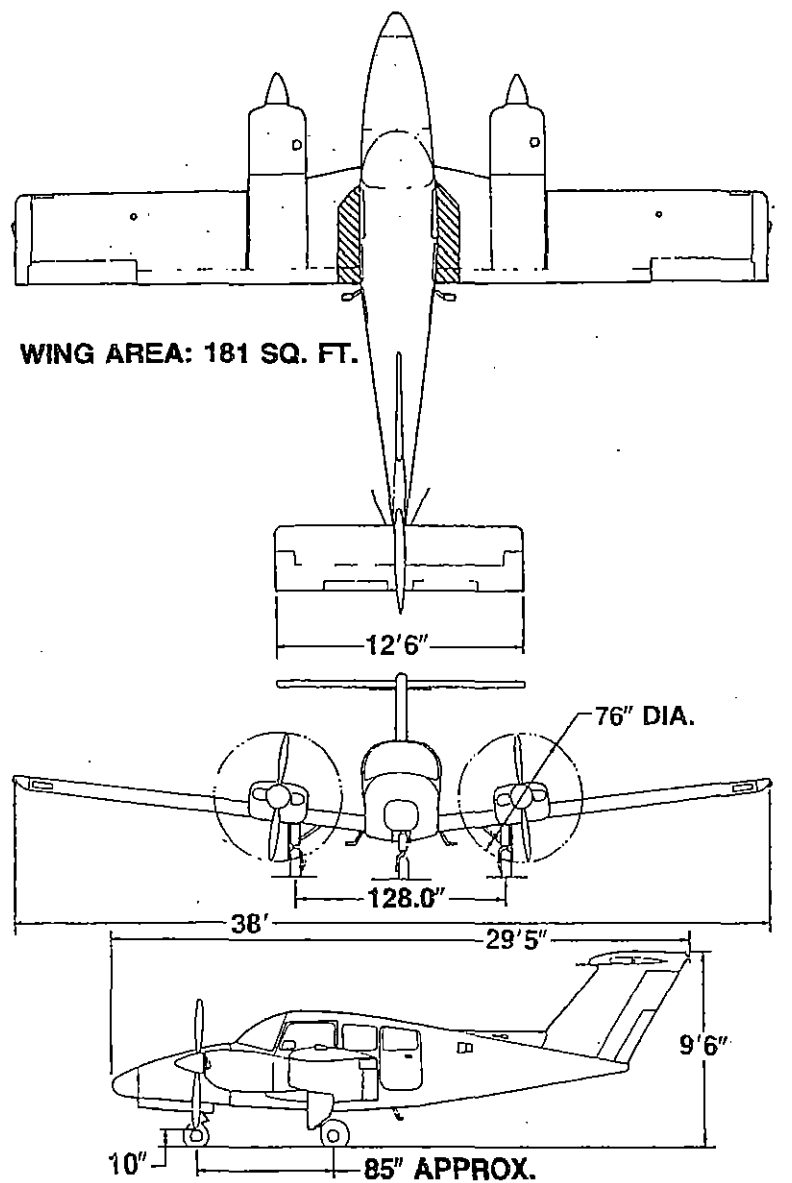

THREE-VIEW

January 1978

1-7

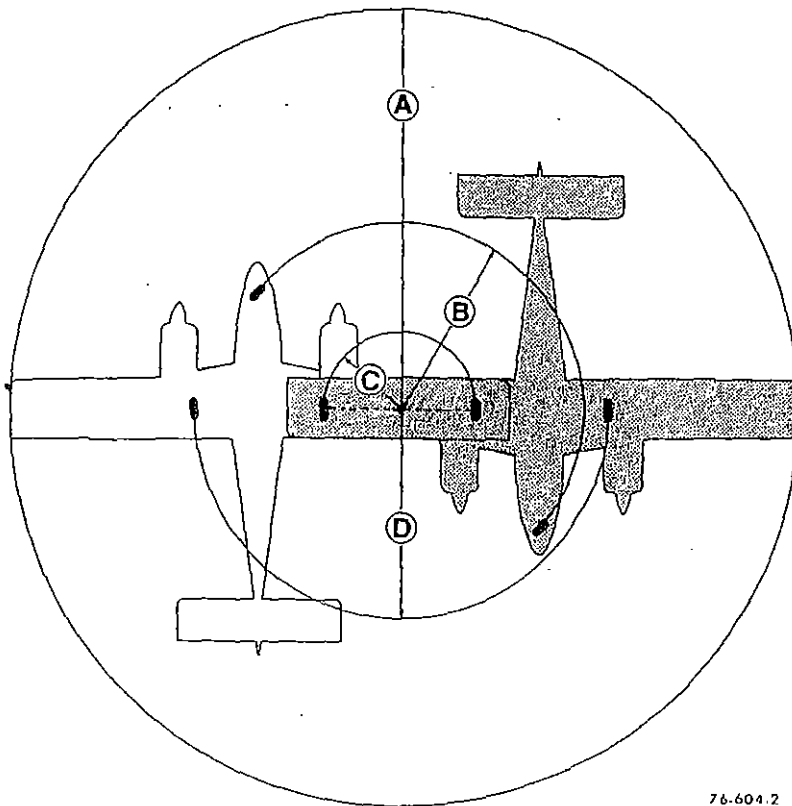

76-604.2

GROUND TURNING CLEARANCE

- (A) Radius for Wing Tip27 feet 2 inches
- (B) Radius for Nose Wheel9 feet 10 inches
- (C) Radius for Inside Gear3 feet 1 inch
- (D) Radius for Outside Gear13 feet 8 inches

TURNING RADII ARE PREDICATED ON THE USE OF PARTIAL
BRAKING ACTION AND DIFFERENTIAL POWER.

DESCRIPTIVE DATA

ENGINES

Two Avco Lycoming engines are installed; one O-360-A1G6D (clockwise rotating) located on the left wing, and one LO-360-A1G6D (counterclockwise rotating) located on the right wing. The engines are four-cylinder, direct-drive, horizontally opposed, and each rated at 180 horsepower at 2700 rpm.

Take-off and Maximum

Continuous Power Full throttle, 2700 rpm

Recommended Maximum

Cruise Power 24 in. Hg, 2700 rpm

PROPELLERS

The airplane is equipped with two Hartzell, constant-speed, full-feathering, two-blade propellers: the left engine (clockwise rotating) has an HC-M2YR-2CEUF hub with FC 7666A blades and a C2285-3P spinner; the right engine (counterclockwise rotating) incorporates an HC-M2YR-2CLEUF hub with FJC 7666A blades and a C2285-3LP spinner.

Pitch settings at the 30 inch station: Low, $12.1^{\circ} \pm .1^{\circ}$;
High, 17° to 20° ; Feathered, $81^{\circ} \pm 1^{\circ}$.

Diameter is 76 inches, with cut-off permitted to 74.0 inches.

Section I
General

BEECHCRAFT
Duchess 76

FUEL

Aviation Gasoline, grade 100 (green) or grade 100 LL (blue).

Total Capacity 103 gallons
Total Usable 100 gallons

OIL

Engine oils must meet Avco Lycoming Specification No. 301F and be used in accordance with Avco Lycoming Service Instructions No. 1014J or subsequent revisions. Refer to HANDLING, SERVICING, AND MAINTENANCE section for a list of oils meeting this specification.

Average Ambient Air Temperature	MIL-L-6082 Grades	MIL-L-22851 Ashless Dispersant Grades
Above 60°F	SAE 50	SAE 40 or SAE 50
30° to 90°F	SAE 40	SAE 40
0° to 70°F	SAE 30	SAE 40, SAE 30 or SAE 20W40
Below 10°F	SAE 20	SAE 30 or SAE 20W30

Oil Capacity8 quarts each engine

MAXIMUM CERTIFICATED WEIGHTS

Maximum Ramp Weight 3916 lbs
Maximum Take-off Weight 3900 lbs
Maximum Landing Weight 3900 lbs
Maximum Zero Fuel Weight 3500 lbs
Maximum Weight in Baggage Compartment 200 lbs

BEECHCRAFT
Duchess 76

Section I
General

STANDARD AIRPLANE WEIGHTS

Standard Empty Weight	2446 lbs
Maximum Useful Load	1470 lbs

CABIN AND ENTRY DIMENSIONS

Cabin Width (maximum)	3 ft 8 in.
Cabin Length (maximum)	7 ft 11 in.
Cabin Height (maximum)	4 ft
Cabin Door	36 in. x 38 in.
Door Sill Height	2 in.

BAGGAGE SPACE AND ENTRY DIMENSIONS

Compartment Volume	19.5 cu ft
Compartment Width (nominal)	38 in.
Compartment Length (nominal)	26 in.
Compartment Height (nominal)	37 in.
Door Width (minimum)	22 in.
Door Height (minimum)	33 in.

SPECIFIC LOADINGS

Wing Loading at Maximum Take-off Weight . .	21.5 lbs/sq ft
Power Loading at Maximum Take-off Weight . .	10.8 lbs/hp

SYMBOLS, ABBREVIATIONS, AND TERMINOLOGY

The following Abbreviations and Terminologies have been listed for convenience and ready interpretation where used within this handbook. Whenever possible, they have been categorized for ready reference.

Section I
General

BEECHCRAFT
Duchess 76

AIRSPEED TERMINOLOGY

IAS	Indicated Airspeed is the speed of an airplane as shown on its airspeed indicator. As used within this handbook IAS assumes no instrument error.
CAS	Calibrated Airspeed is the indicated airspeed of an airplane, corrected for position and instrument error. Calibrated airspeed is equal to true airspeed in standard atmosphere at sea level.
TAS	True Airspeed is the airspeed of an airplane relative to undisturbed air which is the CAS corrected for altitude, temperature, and compressibility.
GS	Ground Speed is the speed of an airplane relative to the ground.
V_{MCA}	Air Minimum Control Speed is the minimum flight speed at which the airplane is directionally controllable as determined in accordance with Federal Aviation Regulations. The airplane certification conditions include one engine becoming inoperative and windmilling, a 5-degree bank towards the operative engine, take-off power on operative engine, landing gear up, flaps in take-off position, and most rearward C.G. For some conditions of weight and altitude, stall can be encountered at speeds above V_{MCA} as established by the certification procedure described above, in which event stall speed must be regarded as the limit of effective directional control.

V_{SSE}	The Intentional One-Engine-Inoperative Speed is a speed above both V_{MCA} and stall speed, selected to provide a margin of lateral and directional control when one engine is suddenly rendered inoperative. Intentional failing of one engine below this speed is not recommended.
V_A	Maneuvering Speed is the maximum speed at which application of full available aerodynamic control will not overstress the airplane.
V_F	Design Flap Speed is the highest speed permissible at which wing flaps may be actuated.
V_{FE}	Maximum Flap Extended Speed is the highest speed permissible with wing flaps in a prescribed extended position.
V_{LE}	Maximum Landing Gear Extended Speed is the maximum speed at which an airplane can be safely flown with the landing gear extended.
V_{LO}	Maximum Landing Gear Operating Speed is the maximum speed at which the landing gear can be safely extended or retracted.
V_{NE}	Never Exceed Speed is the speed limit that may not be exceeded at any time.

Section I
General

BEECHCRAFT
Duchess 76

V_{NO}	Maximum Structural Cruising Speed is the speed that should not be exceeded except in smooth air and then only with caution.
V_S	Stalling Speed or the minimum steady flight speed at which the airplane is controllable.
V_{SO}	Stalling Speed or the minimum steady flight speed at which the airplane is controllable in the landing configuration.
V_X	Best Angle-of-Climb Speed is the air-speed which delivers the greatest gain of altitude in the shortest possible horizontal distance.
V_Y	Best Rate-Of-Climb Speed is the air-speed which delivers the greatest gain in altitude in the shortest possible time.

METEOROLOGICAL TERMINOLOGY

ISA	International Standard Atmosphere in which: (1) The air is a dry perfect gas; (2) The temperature at sea level is 15° Celsius (59° Fahrenheit); (3) The pressure at sea level is 29.92 in. Hg (1013.2 millibars); (4) The temperature gradient from sea level to the altitude at which the temperature is -56.5°C (-69.7°F) is -0.00198°C (-0.003566°F) per foot and zero above that altitude.
-----	---

**BEECHCRAFT
Duchess 76**

**Section I
General**

OAT	Outside Air Temperature is the free air static temperature, obtained either from inflight temperature indications adjusted for instrument error and compressibility effects, or ground meteorological sources.
Indicated Pressure Altitude	The number actually read from an altimeter when the barometric subscale has been set to 29.92 in. Hg (1013.2 millibars).
Pressure Altitude	Altitude measured from standard sea level pressure (29.92 in. Hg) by a pressure or barometric altimeter. It is the indicated pressure altitude corrected for position and instrument error. In this handbook, altimeter instrument errors are assumed to be zero. Position errors may be obtained from the Altimeter Correction graph.
Station Pressure	Actual atmospheric pressure at field elevation.
Wind	The wind velocities recorded as variables on the charts of this handbook are to be understood as the headwind or tailwind components of the reported winds.

POWER TERMINOLOGY

Take-off and Maximum Continuous	Highest power rating not limited by time.
Cruise Climb	Power recommended for cruise climb.

ENGINE CONTROLS AND INSTRUMENTS
TERMINOLOGY

Throttle Control	The lever used to control power by introducing fuel-air mixture into the intake passages of the engine. Settings are reflected by readings on the manifold pressure gage.
Propeller Control	This lever requests the governor to maintain rpm at a selected value and, in the maximum decrease rpm position, feathers the propeller.
Mixture Control	This lever is used to set fuel flow in all modes of operation and cuts off fuel completely for engine shutdown.
Tachometer	Indicates the rotational speed of the engine/propeller in revolutions per minute (rpm).
Propeller Governor	Regulates the rpm of the engine/propeller by increasing or decreasing the propeller pitch through a pitch change mechanism in the propeller hub.
Manifold Pressure	An instrument that measures the absolute pressure in the intake manifold of an engine, expressed in inches of mercury (in. Hg).
EGT	The Exhaust Gas Temperature Indicator is used to identify the lean and best-power fuel flow mixtures for various power settings during cruise.

**AIRPLANE PERFORMANCE AND FLIGHT
PLANNING TERMINOLOGY**

Climb Gradient	The ratio of the change in height during a portion of a climb, to the horizontal distance traversed, in the same time interval.
Demonstrated Crosswind Velocity	The demonstrated crosswind velocity is the velocity of the crosswind component for which adequate control of the airplane during takeoff and landing was actually demonstrated during certification tests. The value shown is not limiting.
Accelerate- Stop Distance	The distance required to accelerate an airplane to a specified speed and, assuming failure of an engine at the instant that speed is attained, to bring the airplane to a stop.
Accelerate- Go Distance	The distance required to accelerate an airplane to a specified speed and, assuming failure of an engine at the instant that speed is attained, feather in-operative propeller and continue takeoff on the remaining engine to a height of 50 feet.
MEA	Minimum Enroute IFR Altitude.
Route Segment	A part of a route. Each end of that part is identified by: (1) A geographical location; or (2) A point at which a definite radio fix can be established.

Section I
General

BEECHCRAFT
Duchess 76

WEIGHT AND BALANCE TERMINOLOGY

Standard Empty Weight	Weight of a standard airplane including unusable fuel, full operating fluids, and full oil.
Basic Empty Weight	Standard empty weight plus optional equipment.
Usable Fuel	Fuel available for flight planning.
Unusable Fuel	Fuel remaining after a runout test has been completed in accordance with governmental regulations.
Payload	Weight of occupants, cargo, and baggage.
Useful Load	Difference between ramp weight and basic empty weight.
Maximum Ramp Weight	Maximum weight approved for ground maneuvering. (It includes weight of start, taxi, and run-up fuel.)
Maximum Take-Off Weight	Maximum weight approved for the start of the take-off run.
Maximum Landing Weight	Maximum weight approved for the landing touchdown.
Maximum Zero Fuel Weight	Maximum weight exclusive of usable fuel.

**BEECHCRAFT
Duchess 76**

**Section I
General**

Loading Condition	That combination of airplane weight and corresponding moment applicable to the various loadings computed for weight and balance purposes.
Reference Datum	An imaginary vertical plane from which all horizontal distances are measured for balance purposes.
Station	A location along the airplane fuselage usually given in terms of distance from the reference datum.
Arm	The horizontal distance from the reference datum to the center of gravity (CG) of an item.
Moment	The product of the weight of an item multiplied by its arm. (Moment divided by a constant is used to simplify balance calculations by reducing the number of digits.)
Airplane Center of Gravity (CG)	The point at which an airplane would balance if suspended. Its distance from the reference datum is found by dividing the total moment by the total weight of the airplane.
CG Arm	The arm obtained by adding the airplane's individual moments and dividing the sum by the total weight.
CG Limits	The extreme center of gravity locations within which the airplane must be operated at a given weight.

Section I
General

BEECHCRAFT
Duchess 76

Tare	The apparent weight which may be indicated by a scales before any load is applied.
Leveling Points	Those points which are used during the weighing process to level the airplane.
Jack Points	Points on the airplane identified by the manufacturer as suitable for supporting the airplane for weighing or other purposes.

**BEECHCRAFT
Duchess 76**

**Section II
Limitations**

The limitations included in this section have been approved by the Federal Aviation Administration.

The following limitations in this section must be observed in the operation of this airplane:

AIRSPEED LIMITATIONS

SPEED	CAS KTS	IAS KTS	REMARKS
Never Exceed VNE	194	194	Do Not Exceed This Speed in Any Operation.
Maximum Structural Cruising VNO	154	154	Do Not Exceed This Speed Except in Smooth Air and Then Only With Caution.
Maneuvering VA	132	132	Do Not Make Full or Abrupt Control Movements Above This Speed.
Maximum Flap Extension/Extended V _F and V _{FE} (Full Down 35°)	110	110	Do Not Extend Flaps or Operate With Flaps Extended Above This Speed.
Maximum Landing Gear Extended VLE	140	140	Do Not Exceed This Speed With Landing Gear Extended.
Maximum Landing Gear Operating VLO Extension Retraction	140 113	140 112	Do Not Extend or Retract Landing Gear Above This Speed.
Air Minimum Control VMCA	67	65	Minimum Speed for Directional Controllability After Sudden Loss of Engine.

**Section II
Limitations**

**BEECHCRAFT
Duchess 76**

***AIRSPEED INDICATOR MARKINGS**

MARK- ING	CAS VALUE OR RANGE KTS	IAS VALUE OR RANGE KTS	SIGNIFICANCE
White Arc	58-110	60-110	Full Flap Operating Range
Blue Radial	86	85	Single-Engine Best Rate- of-Climb
Red Radial	67	65	Minimum Single-Engine Control (VMCA)
Green Arc	68-154	70-154	Normal Operat- ing Range
Yellow Arc	154-194	154-194	Operate With Caution, Only In Smooth Air
Red Radial	194	194	Maximum Speed For All Operations (Never Exceed)

*The airspeed indicator is marked in IAS values.

POWER PLANT LIMITATIONS

ENGINES

Two Avco Lycoming engines installed; one O-360-A1G6D (clockwise rotating) located on the left wing, and one LO-360-A1G6D (counterclockwise rotating) located on the right wing. The engines are four-cylinder, direct-drive, horizontally opposed, and each rated at 180 horsepower at 2700 rpm.

Take-off and Maximum

Continuous Power Full Throttle, 2700 RPM
Maximum Oil Temperature 245°F
Maximum Cylinder Head Temperature 500°F

**BEECHCRAFT
Duchess 76**

**Section II
Limitations**

Minimum Oil Pressure (Idle).....	25 psi
Maximum Oil Pressure.....	100 psi
Minimum Fuel Pressure.....	0.5 psi
Maximum Fuel Pressure	8.0 psi

FUEL

Aviation Gasoline, grade 100 (green) or grade 100 LL (blue).

FUEL ADDITIVES

ALCOR TCP Concentrate, mixed according to the instructions provided by Alcor, Inc.

OIL

Engine oils must meet Avco Lycoming Specification No. 301F and be used in accordance with Avco Lycoming Service Instruction No. 1014J or subsequent revisions. Refer to the Approved Engine Oils, Section VIII, SERVICING.

PROPELLERS

Two Hartzell, constant-speed, full-feathering, two-blade propellers: the left engine (clockwise rotating) has an HC-M2YR-2CEUF hub with FC 7666A blades and C2285-3P spinner; the right engine (counterclockwise rotating) incorporates an HC-M2YR-2CLEUF hub with FJC 7666A blades and a C2285-3LP spinner.

Pitch settings at the 30-inch station: Low, $12.1^{\circ} \pm .1^{\circ}$;
High, 17° to 20° ; Feathered, $81^{\circ} \pm 1^{\circ}$.
Diameter is 76 inches, with cut-off permitted to 74.0 inches.

**Section II
Limitations**

**BEECHCRAFT
Duchess 76**

POWER PLANT INSTRUMENT MARKINGS

Oil Temperature

Caution Range (Yellow Arc).....60 to 120°F
Normal Operating Range (Green Arc).....120 to 245°F
Maximum (Red Radial) 245°F

Oil Pressure

Minimum Idle (Red Radial)..... 25 psi
Caution Range (Yellow Arc).....25 to 60 psi
Normal Operating Range (Green Arc).....60 to 100 psi
Maximum (Red Radial) 100 psi

Manifold Pressure

Normal Operating Range (Green Arc)..... 15 to 29.6 in. Hg

Tachometer

Normal Operating Range

(Green Arc) 2000 to 2700 rpm
Maximum (Red Radial)2700 rpm

Fuel Pressure

Minimum (Red Radial) 0.5 psi
Normal Operating Range (Green Arc).....0.5 to 8.0 psi
Maximum (Red Radial) 8.0 psi

Cylinder Head Temperature

Normal Operating Range (Green Arc).....200 to 500°F
Maximum (Red Radial) 500°F

MISCELLANEOUS INSTRUMENT MARKINGS

Instrument Pressure

Normal Operating Range (Green Arc)..... 4.3 to 5.9 in. Hg
Red Button Source Failure Indicators

**BEECHCRAFT
Duchess 76**

**Section II
Limitations**

Fuel Quantity

Yellow Arc.....E to 9 Gallons

WEIGHT LIMITS

Maximum Ramp Weight..... 3916 lbs
Maximum Take-off Weight..... 3900 lbs
Maximum Landing Weight 3900 lbs
Zero Fuel Weight 3500 lbs
Maximum Baggage Compartment Load 200 lbs

CENTER OF GRAVITY (Landing Gear Extended)

Forward Limits: 106.6 inches aft of datum at 3250 lbs and under, then straight line variation to 110.6 inches aft of datum at a weight of 3900 lbs.

Aft Limit: 117.5 inches aft of datum at all weights.

Reference Datum: 129.37 inches forward of the center of wing spar jack points.

MAC Leading Edge: 99.08 inches aft of datum.

MAC Length: 57.65 inches.

MANEUVERS

This is a normal category airplane. Acrobatic maneuvers, including spins, are prohibited.

Maximum slip duration..... 30 seconds

January 1978

2-7

**Section II
Limitations**

**BEECHCRAFT
Duchess 76**

FLIGHT LOAD FACTORS (3900 POUNDS)

Positive maneuvering load factors:

Flaps Up..... 3.8G
Flaps Down (DN)..... 2.0G

Negative maneuvering load factor:

Flaps Up..... -1.52G

MINIMUM FLIGHT CREW..... One pilot

KINDS OF OPERATION

This airplane is approved for the following type operations when the required equipment is installed and operational as defined herein:

1. VFR day and night
2. IFR day and night
3. FAR 91 operations when all pertinent limitations and performance considerations are complied with.

WARNING

FLIGHT IN ICING CONDITIONS PROHIBITED.

**BEECHCRAFT
Duchess 76**

**Section II
Limitations**

FUEL

TOTAL FUEL with left and right wing fuel systems full:

Capacity..... 103 gallons*
Usable 100 gallons

*Value given is nominal. Tank capacity will vary with temperature, and manufacturing tolerances.

FUEL MANAGEMENT

Do not take off when Fuel Quantity indicators indicate in the yellow band on either indicator.

Maximum slip duration is 30 seconds.

The fuel crossfeed system to be used during emergency conditions in level flight only.

SEATING

All occupied seats must be in the upright position for takeoff and landing.

STRUCTURAL LIFE

The basic wing structure has a substantiated life of 20,000 flight hours provided the mandatory inspection requirements of chapter four of the BEECHCRAFT DUCHESS 76 MAINTENANCE MANUAL are complied with.

**Section II
Limitations**

**BEECHCRAFT
Duchess 76**

**REQUIRED EQUIPMENT FOR VARIOUS CONDITIONS OF
FLIGHT**

Part 91 of the Federal Aviation Regulations specifies minimum numbers and types of airplane instruments and equipment which must be installed and operated for various kinds of flight conditions. This includes VFR day, VFR night, IFR day and IFR night.

Regulations also require that all airplanes be certified by the manufacturer for operations under various flight conditions. At certification, all required equipment must be in operating condition and should be maintained to assure continued airworthiness. If deviations from the installed equipment were not permitted, or if the operating rules did not provide for various flight conditions, the airplane could not be flown unless all equipment were operable. With appropriate limitations, the operation of every system or component installed in the airplane is not necessary when the remaining operative instruments and equipment provide for continued safe operation. Operation in accordance with limitations established to maintain airworthiness can permit continued or uninterrupted operation of the airplane.

For the sake of brevity, the Required Equipment Listing does not include obviously required items such as wings, rudder, flaps, engines, landing gear, etc. Also the list does not include items which do not affect the airworthiness of the airplane such as entertainment systems, passenger convenience items, etc. However, it is important to note that ALL ITEMS WHICH ARE RELATED TO THE AIRWORTHINESS OF THE AIRPLANE AND NOT INCLUDED ON THE LIST ARE AUTOMATICALLY REQUIRED TO BE OPERATIVE.

**BEECHCRAFT
Duchess 76**

**Section II
Limitations**

To enable the pilot to rapidly determine the FAA equipment requirements necessary for a flight into specific conditions, the following equipment requirements and exceptions are presented. It is the final responsibility of the pilot to determine whether the lack of, or inoperative status of a piece of equipment on the airplane, will limit the conditions under which the pilot may operate the airplane.

LEGEND

Numbers refer to quantities required to be operative for a specified condition.

- (-) Indicates that the item may be inoperative for the specified condition.
- (*) Refers to the REMARKS AND/OR EXCEPTIONS column for explicit information or reference.

2-12

September, 1983

SYSTEM and/or COMPONENT	VFR Day					Remarks and/or Exceptions
	VFR Night					
	IFR Day					
	IFR Night					
GENERAL OVERWATER FLIGHT	*	*	*	*	*	*Per FAR 91
COMMUNICATIONS						
VHF communications system	*	*	*	*	-	*Per FAR 91
ELECTRICAL POWER						
Battery system	1	1	1	1	-	
DC alternator	2	2	2	2	-	
DC loadmeter	2	2	2	2	-	

Section II
LimitationsBEECHCRAFT
Duchess 76

September, 1983

2-13

Alternator-out overvoltage indicator light	2	2	2	2	-
Alternator-out undervoltage indicator light	2	2	2	2	-
Starter Engaged Warning Light (ME-333, ME-346 and after)	1	1	1	1	- May be inoperative provided loadmeters are operative and monitored.
EQUIPMENT AND FURNISHINGS					
Seat belts and shoulder harnesses	1	1	1	1	- Per Person or Per FAR 91
Emergency locator transmitter	1	1	1	1	- Per FAR 91
FIRE PROTECTION					
Portable fire extinguisher	*	*	*	*	- *Optional

BEECHCRAFT
Duchess 76

Section II
Limitations

SYSTEM and/or COMPONENT	VFR Day				Remarks and/or Exceptions
	VFR Night				
	IFR Day				
	IFR Night				
FLIGHT CONTROLS					
Trim tab indicators - Rudder	1	1	1	1	- May be inoperative provided that tabs are visually checked in the neutral position prior to each takeoff and checked for full range of operation.
Elevator	1	1	1	1	
Flap position indicator	1	1	1	1	- May be inoperative provided flap travel is visually inspected prior to takeoff.
Stall warning system	1	1	1	1	-

Section II
Limitations

BEECHCRAFT
Duchess 76

September, 1983

2-15

FUEL EQUIPMENT					
Engine driven fuel pump	2	2	2	2	-
Electrically driven aux fuel pump	2	2	2	2	-
Fuel quantity indicator	2	2	2	2	-
					One may be inoperative provided other side is operational and amount of fuel on board can be established to be adequate for the intended flight.
Fuel pressure indicator	2	2	2	2	-
ICE AND RAIN PROTECTION					
Alternate static air source	1	1	1	1	-
Pitot heater	-	-	1	1	-

BEECHCRAFT
Duchess 76

Section II
Limitations

2-16

September, 1983

SYSTEM and/or COMPONENT	VFR Day				Remarks and/or Exceptions
	VFR Night				
	IFR Day				
	IFR Night				
LANDING GEAR					
Landing gear motor	1	1	1	1	
Landing gear position lights	4	4	4	4	
Landing gear warning horn	1	1	1	1	
LIGHTS					
Cockpit and instrument lights	-	*	-	*	*Lights must be operative
Taxi Light (2)	-	-	-	-	

Section II
LimitationsBEECHCRAFT
Duchess 76

**BEECHCRAFT
Duchess 76**

**Section II
Limitations**

Landing light (1)	-	*	-	*	-	*Per FAR 91
Strobe light	-	2	*	2	-	*Optional
Position light	-	3	-	3	-	
NAVIGATION INSTRUMENTS						
Altimeter	1	1	1	1	-	
Airspeed indicator	1	1	1	1	-	
Vertical speed	-	-	-	-	-	
Magnetic compass	1	1	1	1	-	
Attitude indicator	-	-	1	1	-	
Turn and slip indicator	-	-	1	1	-	
Directional gyro	-	-	1	1	-	
Clock	-	-	1	1	-	
Transponder	*	*	*	*	-	*Per FAR 91
Navigation equipment	-	-	*	*	-	*Per FAR 91

September, 1983

2-17

SYSTEM and/or COMPONENT	VFR Day					Remarks and/or Exceptions
	VFR Night					
	IFR Day					
	IFR Night					
PNEUMATIC						
Pressure system for instrument air	-	-	1	1	-	
Pressure gage	-	-	1	1	-	
ENGINE INDICATING INSTRUMENTS						
Engine tachometer indicator	2	2	2	2	-	
Exhaust gas temperature indicator	*	*	*	*	-	*Optional

Section II
LimitationsBEECHCRAFT
Duchess 76

Manifold pressure indicator	2	2	2	2	-
Cylinder head temperature indicator	2	2	2	2	-
ENGINE OIL INSTRUMENTS					
Oil pressure indicator	2	2	2	2	-
Oil temperature indicator	2	2	2	2	-

**Section II
Limitations**

**BEECHCRAFT
Duchess 76**

INTENTIONALLY LEFT BLANK

PLACARDS

On Left Cabin Door (ME-1 thru ME-282, ME-284 thru ME-286) or On Left Cabin Sidewall (ME-283, ME-287 and after):

+

OPERATION LIMITATIONS

THIS AIRPLANE MUST BE OPERATED AS A NORMAL CATEGORY AIRPLANE IN COMPLIANCE WITH THE OPERATING LIMITATION STATED IN THE FORM OF PLACARDS, MARKINGS AND MANUALS. MAXIMUM WEIGHT IS 3900 LBS. THIS AIRPLANE APPROVED FOR VFR, IFR, DAY AND NIGHT NON-ICING FLIGHT WHEN EQUIPPED IN ACCORDANCE WITH FAR 91 OR FAR 135.

NO ACROBATIC MANEUVERS INCLUDING SPINS APPROVED.

WARNING - TURN OFF STROBE LIGHTS WHEN TAXIING IN VICINITY OF OTHER AIRCRAFT OR DURING FLIGHT THROUGH CLOUD, FOG OR HAZE.

AIR SPEEDS

NEVER EXCEED	194 KNOTS
MAX. STRUCTURAL CRUISE	154 KNOTS
MAX. MANEUVERING	132 KNOTS
MAX. FLAPS 20°	120 KNOTS
MAX. FULL DOWN FLAPS 35°	110 KNOTS
MAX. LANDING GEAR EXTENSION	140 KNOTS
MAX. LANDING GEAR RETRACTION	113 KNOTS
ALTITUDE LOST IN ONE ENGINE INOP STALL & 10° PITCH DOWN	150 FEET

+

Lower Sidewall Adjacent to Pilot:

+

WARNING

ALTERNATE STATIC AIR SOURCE

ON
ALTERNATE

SEE PERFORMANCE
SECTION OF PILOTS
OPERATING HANDBOOK
FOR AIRSPEED & ALTIMETER
CALIBRATION ERROR

OFF
NORMAL


+

**Section II
Limitations**


**BEECHCRAFT
Duchess 76**

PLACARDS (Cont'd)

On Left Cabin Door:

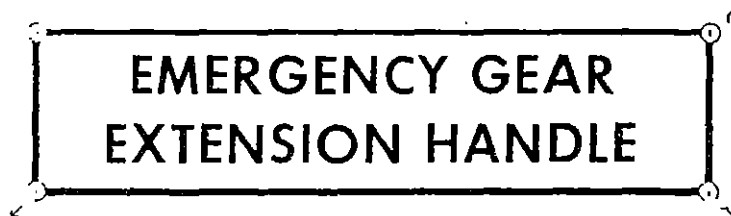


On Floorboard in Front of Pilot's Seat:

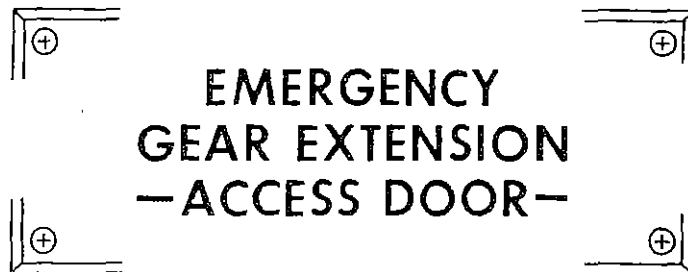

On Inside of Emergency Gear Extension Access Door:



 1. Landing Gear Motor Circuit Breaker - OFF (Pull)
2. Gear Position Switch - DOWN
3. Maximum Indicated Airspeed - 100 KNOTS



BEECHCRAFT
Duchess 76

Section II
Limitations

On Lower Left Sidewall Panel:

TO LEVEL AIRCRAFT – LEVEL
BAGGAGE COMPARTMENT FLOOR

On Left Side Panel:

DEFROST
PULL ON

CABIN AIR
PULL OFF

CABIN HEAT
PULL INCREASE

On Aft Cabin Bulkhead:


HAT SHELF
NO HEAVY OBJECTS

Section II
Limitations

BEECHCRAFT
Duchess 76

PLACARDS (Cont'd)

On Fuel Selector Panel:

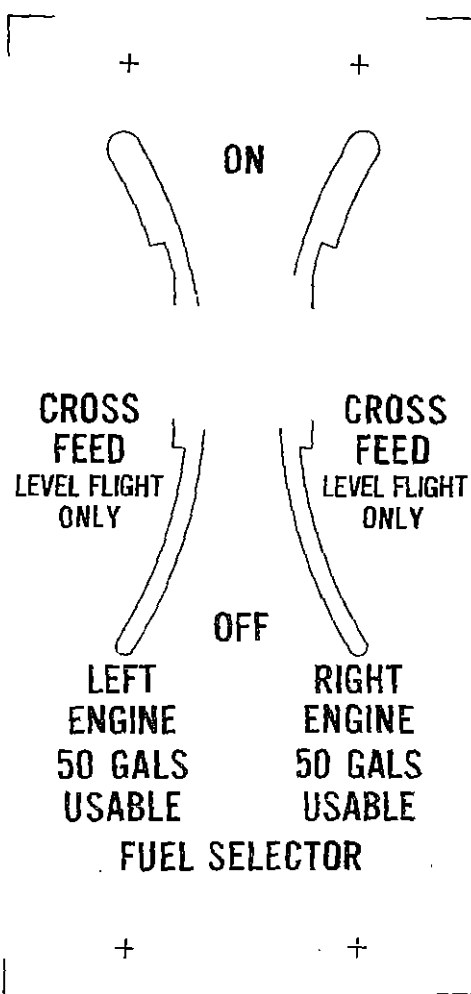

**BEECHCRAFT
Duchess 76**

**Section II
Limitations**

On Pedestal :

OFF
CARB
HEAT
ON

C
L
O
S
E

H
A
L
F

O
P
E
N

COWL
FLAP

MIC

+

PHONE

+




January 1978

Section II
Limitations

BEECHCRAFT
Duchess 76

PLACARDS (Cont'd)

On Pedestal Between Front Seats:

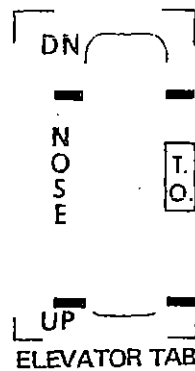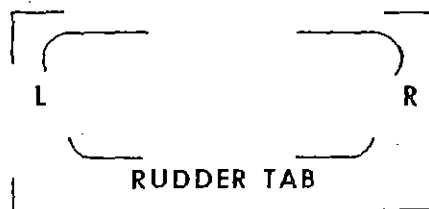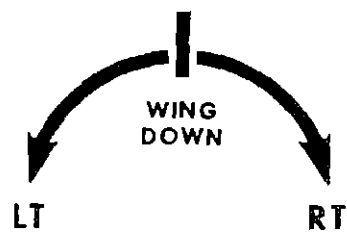

BEECHCRAFT
Duchess 76

Section II
Limitations

Adjacent to Each Seat:

INSTRUCTION-SHOULDER STRAP

1. OCCUPANTS SHORTER THAN
4 FT. 7 IN. **DO NOT** USE
SHOULDER STRAP.
2. PLACE SEAT BACK IN THE
UPRIGHT POSITION DURING
TAKEOFF AND LANDING.

On Baggage Door Adjacent to Handle:

PULL PIN
ROTATE
HANDLE
TO OPEN



**Section II
Limitations**

**BEECHCRAFT
Duchess 76**

On Baggage Compartment Door:

BAGGAGE COMPARTMENT

**LOAD IN ACCORDANCE
WITH WEIGHT AND BALANCE
INSTRUCTION**

**MAXIMUM STRUCTURAL
CAPACITY - 200 POUNDS**

BEECHCRAFT
Duchess 76

SECTION III

EMERGENCY PROCEDURES

TABLE OF CONTENTS

<i>SUBJECT</i>	<i>PAGE</i>
Emergency Airspeeds (3900 lbs)	3-3
One-engine Operation.....	3-3
Determining Inoperative Engine.....	3-4
One-engine-inoperative Procedures.....	3-4
Engine Failure During Ground Roll.....	3-4
Engine Failure After Lift-off and in Flight.....	3-5
Air Start.....	3-6
Engine Fire (Ground)	3-8
Engine Fire in Flight	3-8
Emergency Descent	3-8
Maximum Glide Configuration.....	3-8
Landing Emergencies	3-9
Gear-up Landing	3-9
One-engine-inoperative Landing.....	3-9
One-engine-inoperative Go-Around.....	3-10
Systems Emergencies	3-10
Operation on Crossfeed	3-10
Electrical Smoke or Fire	3-11
Complete Loss of Electrical Power	3-12
Illumination of Alternator-Out Light.....	3-12A
Starter Engaged Warning Light Illuminated.....	3-12B
Unscheduled Electric Elevator Trim	3-12B
Landing Gear Manual Extension	3-13
Landing Gear Retraction After	
Practice Manual Extension	3-13
Alternate Static Air Source	3-14
Emergency Exit	3-15

Section III
Emergency Procedures

BEEHCRAFT
Duchess 76

TABLE OF CONTENTS (Continued)

<i>SUBJECT</i>	<i>PAGE</i>
Simulated One-Engine Inoperative	3-15
Unlatched Door in Flight	3-15
Spins	3-16

All airspeeds quoted in this section are indicated airspeeds (IAS) and assume zero instrument error.

EMERGENCY AIRSPEEDS (3900 LBS)

One-Engine-Inoperative Best	
Angle-of-Climb (V_X)	85 kts
One-Engine-Inoperative Best	
Rate-of-Climb (V_Y)	85 kts
Air Minimum Control Speed (V_{MCA})	65 kts
One-Engine-Inoperative	
Enroute Climb	85 kts
Emergency Descent	140 kts
One-Engine-Inoperative Landing:	
Maneuvering to Final Approach	90 kts
Final Approach (Flaps Down)	85 kts
Intentional One-Engine-Inoperative	
Speed (V_{SSE})	71 kts
Maximum Glide Range	95 kts

Stall warning horn is inoperative when the Battery and Alternator Switches are turned off.

The following information is presented to enable the pilot to form, in advance, a definite plan of action for coping with the most probable emergency situations which could occur in the operation of the airplane. Where practicable, the emergencies requiring immediate corrective action are treated in check list form for easy reference and familiarization. Other situations, in which more time is usually permitted to decide on and execute a plan of action, are discussed at some length.

ONE-ENGINE OPERATION

Two major factors govern one engine operations; airspeed and directional control. The airplane can be safely maneuvered or trimmed for normal hands-off operation and sustained in this configuration by the operative engine AS LONG AS SUFFICIENT AIRSPEED IS MAINTAINED

**Section III
Emergency Procedures**

**BEECHCRAFT
Duchess 76**

DETERMINING INOPERATIVE ENGINE

The following checks will help determine which engine has failed:

1. **DEAD FOOT - DEAD ENGINE.** The rudder pressure required to maintain directional control will be on the side of the operative engine.
2. **THROTTLE.** Partially retard the throttle for the engine that is believed to be inoperative; there should be no change in control pressures or in the sound of the engine if the correct throttle has been selected. **AT LOW ALTITUDE AND AIRSPEED THIS CHECK MUST BE ACCOMPLISHED WITH EXTREME CAUTION.**

Do not attempt to determine the inoperative engine by means of the tachometers or the manifold pressure gages. These instruments often indicate near normal readings.

ONE-ENGINE-INOPERATIVE PROCEDURES

ENGINE FAILURE DURING GROUND ROLL

1. Throttles - IDLE
2. Braking - MAXIMUM
3. Fuel Selectors - OFF
4. Battery, Alternator, and Magneto/Start Switches - OFF

NOTE

Braking effectiveness is improved if the brakes are not locked.

ENGINE FAILURE AFTER LIFT-OFF AND IN FLIGHT

An immediate landing is advisable regardless of take-off weight. Continued flight can not be assured if take-off weight exceeds the weight determined from the TAKE-OFF WEIGHT graph. Higher take-off weights will result in a loss of altitude while retracting the landing gear and feathering the propeller. Continued flight requires immediate pilot response to the following procedures:

1. Landing Gear and Flaps - UP
2. Throttle (inoperative engine) - IDLE
3. Propeller (inoperative engine) - FEATHER
4. Power (operative engine) - AS REQUIRED
5. Airspeed - AT OR ABOVE THE 50-FT TAKE-OFF SPEED (80 KNOTS)

After positive control of the airplane is established:

6. Secure inoperative engine:
 - a. Mixture Control - IDLE CUT-OFF
 - b. Fuel Selector - OFF
 - c. Aux Fuel Pump - OFF
 - d. Magneto/Start Switch - OFF
 - e. Alternator Switch - OFF
 - f. Cowl Flap - CLOSE
7. Airspeed - ESTABLISH 85 KTS
8. Electrical Load - MONITOR (Maximum load of 100% on remaining engine)

NOTE

The most important aspect of engine failure is the necessity to maintain lateral and directional control. If airspeed is below 65 knots, reduce power on operative engine as required to maintain control. Refer to the SAFETY INFORMATION section for additional information regarding pilot technique.

**Section III
Emergency Procedures**

**BEECHCRAFT
Duchess 76**

AIR START

CAUTION

The pilot should determine the reason for engine failure before attempting an air start.

NOTE

Airspeed should be maintained at or above 100 KIAS to ensure the engine will windmill.

WITH UNFEATHERING ACCUMULATORS:

1. Fuel Selector - ON
2. Throttle - SET approximately 1/4 travel
3. Aux Fuel Pump - ON
4. Magneto/Start Switch - BOTH
5. Propeller Control - MOVE FULL FORWARD UNTIL ENGINE WINDMILLS, THEN BACK TO MIDRANGE. USE STARTER MOMENTARILY IF AIRSPEED IS BELOW 100 KTS.

If propeller does not unfeather or engine does not turn, proceed to WITHOUT UNFEATHERING ACCUMULATORS procedure.

6. Mixture - FULL RICH
7. If engine fails to run, clear engine by allowing it to windmill with mixture in the FULL LEAN position. When engine fires, advance mixture to FULL RICH.
8. When Engine Starts - ADJUST THROTTLE, PROPELLER, AND MIXTURE CONTROLS
9. Aux Fuel Pump - OFF (when reliable power has been regained)
10. Alternator Switch - ON
11. Oil Pressure and Oil Temperature - CHECK
12. Warm Up Engine (approximately 2000 rpm and 15 in. HG)
13. Set power as required and trim.

14. COWL FLAPS - - - adjust

WITHOUT UNFEATHERING ACCUMULATORS:

CAUTION

Numerous air starts without unfeathering accumulators can shorten engine-mount life.

1. Fuel Selector - ON
2. Throttle - SET approximately $\frac{1}{4}$ travel
3. Aux Fuel Pump - ON
4. Magneto/Start Switch - BOTH
5. Mixture - FULL RICH
6. Propeller Control - MOVE FORWARD OF FEATHERING DETENT TO MIDRANGE
7. Magneto/Start Switch - START and PUSH TO PRIME (hold on START until windmilling begins and continue to prime as required)

NOTE

If air start is unsuccessful, return propeller control to the FEATHER position and secure engine.

8. When Engine Starts - ADJUST THROTTLE, PROPELLER, AND MIXTURE CONTROLS
9. Aux Fuel Pump - OFF (when reliable power has been regained)
10. Alternator Switch - ON
11. Oil Pressure and Oil Temperature - CHECK
12. Warm Up Engine (approximately 2000 rpm and 15 in. Hg)
13. Set power as required and trim.

Section III
Emergency Procedures

BEECHCRAFT
Duchess 76

ENGINE FIRE (GROUND)

1. Mixture Controls - IDLE CUT-OFF
2. Continue to crank affected engine
3. Fuel Selectors - OFF
4. Battery and Alternator Switches - OFF
5. Extinguish fire with extinguisher

ENGINE FIRE IN FLIGHT

Shut down the affected engine according to the following procedure and land immediately. Follow the applicable single-engine procedures in this section.

1. Fuel Selector - OFF
2. Mixture Control - IDLE CUT-OFF
3. Propeller - FEATHER
4. Aux Fuel Pump - OFF
5. Magneto/Start Switch - OFF
6. Alternator Switch - OFF

EMERGENCY DESCENT

1. Propellers - 2700 RPM
2. Throttles - IDLE
3. Airspeed - 140 KTS
4. Landing Gear - DOWN

MAXIMUM GLIDE CONFIGURATION

1. Propellers - FEATHER
2. Wing Flaps - UP
3. Landing Gear - UP
4. Cowl Flaps - CLOSE
5. Airspeed - 95 KTS

**BEECHCRAFT
Duchess 76**

**Section III
Emergency Procedures**

The glide ratio in this configuration is approximately 2 nautical miles of gliding distance for each 1000 feet of altitude above the terrain.

LANDING EMERGENCIES

GEAR-UP LANDING

If possible, choose firm sod or foamed runway. When assured of reaching the landing site:

1. Cowl Flaps - CLOSE
2. Wing Flaps - FULL DOWN (DN)
3. Throttles - IDLE
4. Mixture Controls - IDLE CUT-OFF
5. Battery, Alternator, and Magneto/Start Switches - OFF
6. Fuel Selectors - OFF
7. Keep wings level during touchdown.
8. Get clear of the airplane as soon as possible after it stops.

NOTE

The gear-up landing procedures are based on the best available information and no actual tests have been conducted.

ONE-ENGINE-INOPERATIVE LANDING

On final approach and when it is certain that the field can be reached:

1. Landing Gear - DOWN
2. Airspeed - 85 KTS
3. Power - AS REQUIRED

Section III
Emergency Procedures

BEECHCRAFT
Duchess 76

When it is certain there is no possibility of go-around:

4. Wing Flaps - FULL DOWN (DN)
5. Execute normal landing.

ONE-ENGINE-INOPERATIVE GO-AROUND

WARNING

Level flight may not be possible for certain combinations of weight, temperature and altitude. In any event, DO NOT attempt a one-engine inoperative go-around after flaps have been fully extended.

1. Power - MAXIMUM ALLOWABLE
2. Landing Gear - UP
3. Wing Flaps - UP
4. Airspeed - MAINTAIN 85 KTS MINIMUM

SYSTEMS EMERGENCIES

OPERATION ON CROSSFEED

NOTE

The fuel crossfeed system is to be used during emergency conditions in level flight only.

Left Engine Inoperative:

1. Right Aux Fuel Pump - ON
2. Left Fuel Selector - OFF
3. Right Fuel Selector - CROSSFEED
4. Right Aux Fuel Pump - ON or OFF as required

Right Engine Inoperative:

1. Left Aux Fuel Pump - ON
2. Right Fuel Selector - OFF
3. Left Fuel Selector - CROSSFEED
4. Left Aux Fuel Pump - ON or OFF as required

ELECTRICAL SMOKE OR FIRE

Action to be taken must consider existing conditions and equipment installed:

1. Battery and Alternator Switches - OFF

WARNING

Electrically driven instruments and stall warning horn will become inoperative.

2. All Electrical Switches - OFF
3. Battery and Alternator Switches - ON
4. Essential Electrical Equipment - ON (Isolate defective equipment)

NOTE

Ensure fire is out and will not be aggravated by draft. Turn off CABIN HEAT switch and push in the CABIN AIR control. To aid in smoke evacuation, open pilot's storm window if required.

Section III
Emergency Procedures

BEECHCRAFT
Duchess 76

COMPLETE LOSS OF ELECTRICAL POWER

INDICATIONS

1. Dimming of lights, with loadmeters showing 100% or much greater than normal, or loadmeters showing 0% accompanied by no ALTERNATOR-OUT Lights.

ACTION

1. Both Alternator Switches - OFF
2. Battery Switch - OFF
3. Both BUS-ISO Circuit Breakers - PULL
4. Remove all electrical loads.
5. Both Alternator Switches - ON.
6. Minimize all electrical loads. Select only that electrical equipment which is essential for safe flight.
7. Extend landing gear with emergency system.
8. LAND AS SOON AS PRACTICAL; HAVE THE COMPLETE ELECTRICAL SYSTEM CHECKED BEFORE THE NEXT FLIGHT.

CAUTION

Since the battery is off line when this procedure is used, large changes in electrical load should be minimized in order to reduce the possibility of damage to electrical components.

ILLUMINATION OF ALTERNATOR-OUT LIGHT

In the event of the illumination of a single ALTERNATOR-OUT UNDERVOLTAGE light or a single ALTERNATOR-OUT OVERVOLTAGE light:

Check the respective loadmeter for load indication:

- a. No Load - Turn off affected alternator.
- b. Reduce load to single alternator capability.
- c. Reset the affected alternator with the alternator switch. Monitor overvoltage and undervoltage lights and loadmeter for proper operation.

CAUTION

If proper operation is not restored, turn alternator switch OFF.

In the event of the illumination of both ALTERNATOR-OUT UNDERVOLTAGE lights or both ALTERNATOR-OUT OVERVOLTAGE lights:

Check loadmeters for load indication. If condition indicates malfunction of both alternator circuits:

- a. Both ALT Switches - OFF
- b. Minimize electrical load since only battery power will be available.
- c. Reset the alternators with the alternator switches. Monitor overvoltage and undervoltage lights and loadmeters for proper operation.

CAUTION

If proper operation is not restored, turn alternator switches OFF.

Section III
Emergency Procedures

BEECHCRAFT
Duchess 76

STARTER ENGAGED WARNING LIGHT ILLUMINATED
(If installed)

After engine start, should the starter relay remain engaged, the starter will remain energized and the starter engaged warning light will remain illuminated. Continuing to supply power to the starter will result in eventual loss of electrical power.

Illuminated On the Ground:

1. Battery and Alternator Switches - OFF
2. Do not take off

Illuminated In Flight After Air Start:

1. Perform action for COMPLETE LOSS OF ELECTRICAL POWER (see this section)
2. Land as soon as practical

UNSCHEDULED ELECTRIC ELEVATOR TRIM

1. Airplane Attitude - MAINTAIN using elevator control.
2. Elevator Trim Thumb Switch (on control wheel) - DEPRESS AND MOVE IN DIRECTION OPPOSITE UNSCHEDULED PITCH TRIM.
3. Elevator Trim ON-OFF Switch (on instrument panel) - OFF
4. Manual Elevator Trim Control Wheel - RETRIM AS DESIRED

NOTE

Do not attempt to operate the electric trim system until the cause of the malfunction has been determined and corrected.

LANDING GEAR MANUAL EXTENSION

Reduce airspeed before attempting manual extension of the landing gear.

1. Landing GEAR MOTOR Circuit Breaker - OFF (pull out)
2. Landing Gear Switch Handle - DOWN position
3. Airspeed - 100 KTS MAXIMUM
4. Emergency Extension Valve - OPEN (Use Emergency Extension Wrench - Turn Counterclockwise)
5. If electrical system is operative, check landing gear position lights and warning horn. (Check Landing GEAR CONTROL circuit breaker engaged.)

WARNING

After emergency landing gear extension, do not move any landing gear controls or reset any switches or circuit breakers until airplane is on jacks, as failure may have been in the gear-up circuit and gear might retract with the airplane on the ground.

LANDING GEAR RETRACTION AFTER PRACTICE MANUAL EXTENSION

After practice manual extension of the landing gear, the gear can only be retracted electrically, as follows:

CAUTION

Do not operate landing gear electrically, or turn on landing light or taxi light, if battery is off the line.

Section III
Emergency Procedures

BEECHCRAFT
Duchess 76

1. Emergency Extension Valve - CLOSE (Use Emergency Extension Wrench - Turn Clockwise)
2. Landing GEAR MOTOR Circuit Breaker - ON (push in)
3. Landing Gear Switch Handle - UP

ALTERNATE STATIC AIR SOURCE

THE ALTERNATE STATIC AIR SOURCE SHOULD BE USED FOR CONDITIONS WHERE THE NORMAL STATIC SOURCE HAS BEEN OBSTRUCTED. When the airplane has been exposed to moisture and/or icing conditions (especially on the ground), the possibility of obstructed static ports should be considered. Partial obstruction will result in the rate-of-climb indication being sluggish during a climb or descent. Verification of suspected obstruction is possible by switching to the alternate system and noting a sudden sustained change in rate of climb. This may be accompanied by abnormal indicated airspeed and altitude changes beyond normal calibration differences.

Whenever any obstruction exists in the Normal Static Air System, or the Alternate Static Air System is desired for use:

1. Pilot's Alternate Static Air Source - Switch to ON ALTERNATE (lower sidewall adjacent to pilot)
2. For Airspeed Calibration and Altimeter Correction, refer to PERFORMANCE section.

NOTE

The alternate static air valve should remain in the OFF NORMAL position when system is not needed.

EMERGENCY EXIT

The forward cabin doors and/or the aft utility door may be used for egress if required.

SIMULATED ONE-ENGINE INOPERATIVE

ZERO THRUST (Simulated Feather)

Use the following power setting (only on one engine at a time) to establish zero thrust. Use of this power setting avoids the difficulties of restarting an engine and preserves the availability of power to counter potential hazards.

1. Throttle Lever - SET 8.0 in. Hg MANIFOLD PRESSURE
2. Propeller Lever - RETARD TO FEATHER DETENT

NOT IN

NOTE

This setting will approximate Zero Thrust using recommended one-engine-inoperative climb speeds.

UNLATCHED DOOR IN FLIGHT

If the cabin door is not secured it may come unlatched in flight. This usually occurs during or just after takeoff. The door will trail in a position approximately 3 inches open. A buffet may be encountered with the door open in flight. Return to the field in a normal manner. If practicable, during the landing flare-out have a passenger hold the door to prevent it from swinging open.

SPINS

If a Spin is Entered Inadvertently:

Immediately move the control column full forward, apply full rudder opposite to the direction of the spin and reduce power on both engines to idle. These three actions should be done as nearly simultaneously as possible; then continue to hold this control position until rotation stops and then neutralize all controls and execute a smooth pullout. Ailerons should be neutral during recovery.

NOTE

Federal Aviation Administration Regulations do not require spin demonstration of airplanes of this class; therefore, no spin tests have been conducted. The recovery technique is based on the best available information.

BEECHCRAFT
Duchess 76

SECTION IV

NORMAL PROCEDURES

TABLE OF CONTENTS

<i>SUBJECT</i>	<i>PAGE</i>
Speeds for Safe Operation (3900 lbs)	4-3
Preflight Inspection	4-3
Before Starting	4-7
External Power	4-7
Starting Engines Using Auxiliary Power Unit	4-8
Starting	4-9
After Starting, and Taxi	4-10A
Before Takeoff	4-10B
Takeoff	4-11
Climb	4-12
Cruise	4-12
Leaning Mixture Using EGT Indicator	4-13
Descent	4-13
Before Landing	4-13
Balked Landing	4-14
After Landing	4-14
Shutdown	4-15
Environmental Systems	4-15
Heating and Ventilation	4-15
Electric Elevator Trim	4-15
Cold Weather Operation	4-16
Preflight Inspection	4-16
Engines	4-16
Taxiing	4-17
Practice Demonstration of VMCA	4-18
Noise Characteristics	4-19
September, 1983	4-1

Section IV
Normal Procedures

BEEHCRAFT
Duchess 76

INTENTIONALLY LEFT BLANK

**BEECHCRAFT
Duchess 76**


**Section IV
Normal Procedures**

All airspeeds quoted in this section are indicated airspeeds (IAS) and assume zero instrument error.

SPEEDS FOR SAFE OPERATION (3900 LBS)

Maximum Demonstrated Crosswind Component.....	25 kts
Takeoff:	
Lift-off.....	71 kts
50-ft Speed.....	80 kts
Two-Engine Best Angle-of-Climb (V_X).....	71 kts
Two-Engine Best Rate-of-Climb (V_Y).....	85 kts
Cruise Climb	100 kts
Turbulent Air Penetration.....	132 kts
Landing Approach:	
Flaps UP	87 kts
Flaps DOWN (DN).....	76 kts
Balked Landing Climb	71 kts
Intentional One-Engine-Inoperative	
Speed (V_{SSE}).....	71 kts
Air Minimum Control Speed (V_{MCA}).....	65 kts

PREFLIGHT INSPECTION

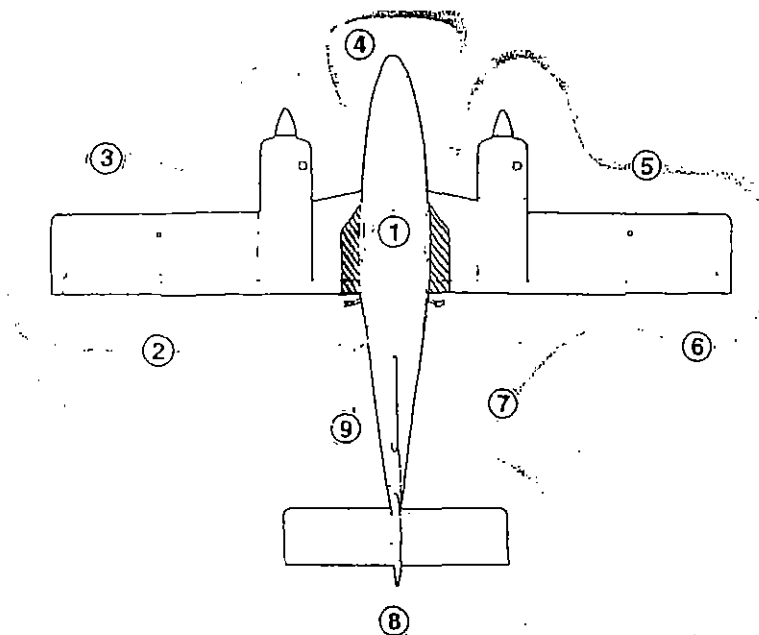

76-604-1

Section IV
Normal Procedures

BEECHCRAFT
Duchess 76

1. COCKPIT

- a. Control Lock - REMOVE AND STOW
- b. Parking Brake - SET
- c. All Switches - OFF
- d. Trim Tabs - SET TO ZERO
- e. Flush-type Fuel Drain/Emergency Gear Extension Tool - OBTAIN (refer to SYSTEMS section for information pertaining to flush-type fuel drains). This tool can also be used for opening the oil and fuel filler caps.

2. LEFT WING TRAILING EDGE

- a. Flap - CHECK GENERAL CONDITION
- b. Fuel Vent - CHECK, UNOBSTRUCTED
- c. Aileron - CHECK GENERAL CONDITION AND FREEDOM OF MOVEMENT
- d. Wing Tip - CHECK
- e. Position and Strobe Light - CHECK

3. LEFT WING LEADING EDGE

- a. Pitot - REMOVE COVER, EXAMINE FOR OBSTRUCTIONS
- b. Landing and Taxi Light - CHECK
- c. Stall Warning Vane - CHECK FREEDOM OF MOVEMENT
- d. Fuel Tank - CHECK QUANTITY; Cap - SECURE
- e. Tiedown and Chocks - REMOVE
- f. Flush-type Fuel Sump - DRAIN (use fuel-drain tool)
- g. Fuel Selector - DRAIN
- h. Engine Cowling - CHECK CONDITION AND SECURITY

**BEECHCRAFT
Duchess 76**

**Section IV
Normal Procedures**

- i. Air Intakes - CLEAR
- j. Propeller - EXAMINE FOR NICKS, SECURITY,
AND OIL LEAKS
- k. Engine Oil - CHECK QUANTITY; Cap and Door -
SECURE
- l. Cowl Flap - CHECK
- m. Wheel Well, Door, Tire, Brake Line, and Strut -
CHECK
- n. Flush-type Crossfeed Fuel Drains (2) - DRAIN (use
fuel-drain tool)

4. NOSE SECTION

- a. Nose Cowling and Nose Cone - CHECK CONDI-
TION AND SECURITY
- b. Heater Air Intake - CLEAR
- c. Heater Exhaust and Vents - CLEAR
- d. Wheel Well, Doors, Tire, and Strut - CHECK

5. RIGHT WING LEADING EDGE

- a. Flush-type Crossfeed Fuel Drains (2) - DRAIN (use
fuel-drain tool)
- b. Wheel Well, Door, Tire, Brake Line, and Strut -
CHECK
- c. Engine Cowling - CHECK CONDITION AND
SECURITY
- d. Air Intakes - CLEAR
- e. Propeller - EXAMINE FOR NICKS, SECURITY,
AND OIL LEAKS
- f. Engine Oil - CHECK QUANTITY; Cap and Door -
SECURE

Section IV
Normal Procedures

BEECHCRAFT
Duchess 76

- g. Cowl Flap - CHECK
- h. Fuel Selector - DRAIN
- i. Flush-type Fuel Sump - DRAIN
- j. Tiedown and Chocks - REMOVE
- k. Fuel Tank - CHECK QUANTITY; Cap - SECURE
- l. Stall Warning Vane - CHECK FREEDOM OF MOVEMENT
- m. Taxi Light - CHECK
- n. Wing Tip - CHECK
- o. Position and Strobe Light - CHECK

6. *RIGHT WING TRAILING EDGE*

- a. Aileron - CHECK CONDITION AND FREEDOM OF MOVEMENT
- b. Fuel Vent - CHECK, UNOBSTRUCTED
- c. Flap - CHECK GENERAL CONDITION

7. *FUSELAGE RIGHT SIDE*

- a. Battery Vents - CHECK, UNOBSTRUCTED
- b. Static Port - CLEAR OF OBSTRUCTIONS
- c. Emergency Locator Transmitter - ARMED

8. *EMPENNAGE*

- a. Control Surfaces and Trim Tabs - CHECK
- b. Tail Cone and Position Light - CHECK
- c. Tiedown - REMOVE
- d. Cabin Air Inlet - CHECK

**BEECHCRAFT
Duchess 76**

**Section IV
Normal Procedures**

9. FUSELAGE LEFT SIDE

- a. Static Port - CLEAR OF OBSTRUCTIONS
- b. Cabin Air Outlet - CHECK
- c. A1 Antennas - CHECK
- d. Load Distribution - CHECK AND SECURE
- e. Aft Utility Door - CHECK SECURE

NOTE

Check operation of lights, if night flight is anticipated.

BEFORE STARTING

- 1. Fuel Drain/Emergency Extension Tool - STOW
- 2. Seats - POSITION AND LOCK; Seat Backs - UPRIGHT
- 3. Seat Belts and Shoulder Harnesses - FASTEN
- 4. Parking Brake - SET
- 5. All Avionics - OFF
- 6. Circuit Breakers - IN
- 7. Landing Gear Handle - DOWN
- 8. Carburetor Heat - OFF (up position)
- 9. Cowl Flap Controls - OPEN (down position)
- 10. Fuel Selectors - CHECK OPERATION, THEN ON
- 11. Light Switches - OFF
- 12. Battery and Alternator Switches - ON
- 13. Fuel Quantity Indicators - CHECK QUANTITY (See LIMITATIONS for take-off fuel)
- 14. Landing Gear Position Lights - CHECK

EXTERNAL POWER

The following precautions shall be observed while using external power:

Section IV
Normal Procedures

BEECHCRAFT
Duchess 76

CAUTION

Exercise caution when connecting the external power cable to prevent shorting the battery to the airframe or arcing the clamps of the cable together.

1. Make certain the battery switch is ON and all avionics, and electrical switches are OFF, and a battery is in the system before connecting an external power unit. This protects the voltage regulators and associated electrical equipment from voltage transients (power fluctuations).
2. The airplane has a negative ground system. Be sure to connect the positive lead of the auxiliary power unit to the positive terminal of the airplane's external power receptacle and the negative lead of the auxiliary power unit to the negative terminal of the external power receptacle.
3. To prevent arcing, make certain no power is being supplied when the connection is made.

STARTING ENGINES USING AUXILIARY POWER UNIT

1. Battery Switch - ON
2. Alternators, Electrical and Avionics Equipment - OFF
3. Auxiliary Power Unit - CONNECT
4. Auxiliary Power Unit - SET OUTPUT 13.5 to 14.25 volts (If 28-volt system - SET OUTPUT 27.0 to 28.5 volts)

**BEECHCRAFT
Duchess 76**

**Section IV
Normal Procedures**

5. Auxiliary Power Unit - ON
6. Left Engine - START (use normal start procedures)
7. Auxiliary Power Unit - OFF (after engine has been started)
8. Auxiliary Power Unit - DISCONNECT (before starting right engine)
9. Alternator Switches - ON

STARTING

1. Battery Switch - ON; Both ALTERNATOR-OUT UNDERVOLTAGE Lights - ILLUMINATED
2. Mixture - FULL RICH
3. Propeller - HIGH RPM (Low Pitch)
4. Throttle - FAST IDLE (1/4 Travel)
5. Aux Fuel Pump - ON
6. Magneto/Start Switch - Engage starter - PUSH TO PRIME as engine is cranking - Release to BOTH position when engine starts.

WARNING

Do not pump throttles during starting procedures.

Hot Start (Engine Hot)

- a. Mixture - FULL RICH
- b. Throttle - FAST IDLE (1/4 Travel)
- c. Fuel Boost Pump - OFF
- d. Starter - ENGAGE (Do Not Prime)

Flooded Engine:

- a. Mixture - IDLE CUT-OFF
- b. Throttle - FAST IDLE (1/4 Travel)

Section IV
Normal Procedures

BEECHCRAFT
Duchess 76

- c. Starter - ENGAGE (After 2 to 3 seconds prime briefly, intermittently)
- d. Mixture - ADVANCE TO FULL RICH when engine starts.

CAUTION

Maximum starter engage duty cycle is 30 seconds ON, followed by a minimum of two minutes OFF.

- 7. Engine Warm-up - 1000 to 1200 RPM
- 8. Oil Pressure - ABOVE RED RADIAL WITHIN 30 SECONDS
- 9. External Power (if used).- DISCONNECT
- 10. Alternator Switch - ON; CHECK FOR CHARGING
- 11. Starter Engaged Warning Light (if installed) - CHECK; should be illuminated during start and extinguished after start.
- 12. Using same procedure, start other engine.
- 13. Left Alternator Switch and Battery Switch - OFF. Check for Left ALTERNATOR-OUT UNDERVOLTAGE Light illuminated, and an indication of less than 75% (14-volt system) or 40% (28-volt system) on the right loadmeter.
- 14. Left Alternator Switch and Battery Switch - ON.
- 15. Right Alternator Switch and Battery Switch - OFF. Check for Right ALTERNATOR-OUT UNDERVOLTAGE Light illuminated, and an indication of less than 75% (14-volt system) or 40% (28-volt system) on the left loadmeter.
- 16. Right Alternator Switch and Battery Switch - ON.

CAUTION

If the starter engaged warning light remains illuminated after starting, or the loadmeters and/or ALTERNATOR-OUT UNDERVOLTAGE lights do not indicate/illuminate properly, an electrical malfunction is indicated. The battery switch and both alternator switches should be placed in the OFF position. Do not take off.

If the starter engaged warning light is not installed or is inoperative, and the loadmeters and/or ALTERNATOR-OUT UNDERVOLTAGE lights do not indicate/illuminate properly, an electrical malfunction is indicated. The battery switch and both alternator switches should be placed in the OFF position. Do not take off.

AFTER STARTING, AND TAXI

CAUTION

Never taxi with a flat tire or flat shock strut. During taxi operations, particular attention should be given to propeller tip clearance. Extreme caution is required when operating on unimproved or irregular surfaces or when high winds exist.

1. Avionics - ON, AS REQUIRED
2. Lights - AS REQUIRED

Section IV
Normal Procedures

BEECHCRAFT
Duchess 76

NOTE

Turn strobe lights off when taxiing in the vicinity of other aircraft or when flying in fog or clouds. Standard position lights are to be used for all night operations.

3. Annunciator Warning Lights - PRESS-TO-TEST
4. Aux Fuel Pumps - OFF, THEN ON (check fuel pressure indicators to verify operation of engine-driven pumps)
5. All Engine Instruments - CHECK
6. Brakes - RELEASE AND CHECK

CAUTION

Detuning the counterweight system of the engine can occur by rapid throttle operation, high rpm (low pitch) and low manifold pressure, or propeller feathering. (See latest revision of Lycoming Service Bulletin No. 245.)

BEFORE TAKEOFF

1. Seat Belts and Shoulder Harnesses - CHECK
2. Parking Brake - SET
3. Radios - CHECK
4. Flight Instruments - CHECK AND SET
5. Engine Instruments - CHECK
6. Starter Engaged Warning Light (if installed) - CHECK (should not be lit). If light is not installed or is inoperative, monitor loadmeters for proper indications.
7. Fuel Selectors - ON
8. Flight Controls - CHECK PROPER DIRECTION AND FREEDOM OF MOVEMENT

**BEECHCRAFT
Duchess 76**

**Section IV
Normal Procedures**

9. Wing Flaps - CHECK OPERATION
10. Electric Trim - CHECK OPERATION
11. Trim - SET TO TAKE-OFF RANGE
12. Throttles - 2200 RPM
13. Propellers - EXERCISE (100-200 rpm drop)
14. Magnetos - CHECK (175 rpm maximum drop, within 50 rpm of each other)

NOTE

Avoid operation on one magneto for more than 5 to 10 seconds. If rpm drop is excessive, lean to smooth operation and recheck.

15. Carburetor Heat - CHECK and set OFF (cold) for takeoff
16. Throttles - 1500 RPM
17. Propellers - FEATHER CHECK (Do not exceed 500 rpm drop.) Repeat 3 or 4 times in cold weather.
18. Gyro Pressure and Loadmeters - CHECK
19. Throttles - IDLE
20. Aux Fuel Pumps - CHECK ON
21. Doors and Window - SECURE
22. Parking Brake - RELEASE
23. Engine Instruments - CHECK

TAKEOFF

Take-off Power Full Throttle, 2700 rpm

1. Power - SET TAKE-OFF POWER (before brake release)
2. Mixtures - FULL RICH or lean to smooth operation as required by field elevation
3. Airspeed - ACCELERATE TO AND MAINTAIN TAKE-OFF SPEED

Section IV
Normal Procedures

BEECHCRAFT
Duchess 76

4. Landing Gear - RETRACT when airplane is positively airborne

NOTE

If red in-transit light remains illuminated after 30 seconds, place landing gear switch handle in the down position, make a normal landing and have the landing gear system checked.

5. Airspeed - ESTABLISH DESIRED CLIMB SPEED when clear of obstacles

CLIMB

Maximum Climb Full Throttle, 2700 RPM

■ Cruise Climb Full Throttle, 2600 RPM

1. Engine Temperatures - MONITOR
2. Power - SET
3. Mixtures - LEAN AS REQUIRED
4. Cowl Flaps - AS REQUIRED
5. Aux Fuel Pumps - OFF

CRUISE

Maximum Cruise Power 24.0 in. Hg or
full throttle, at 2700 rpm

Recommended Cruise Power 24.0 in. Hg or
full throttle, at 2500 rpm

Recommended Cruise Power 24.0 in. Hg or
full throttle, at 2300 rpm

Economy Cruise Power 20.0 in. Hg or
full throttle, at 2300 rpm

1. Power - SET AS DESIRED (Use Tables in PERFORMANCE section)
2. Mixtures - LEAN AS REQUIRED
3. Cowl Flaps - AS REQUIRED

**LEANING MIXTURE USING THE EXHAUST GAS
TEMPERATURE INDICATOR (EGT)**

For level flight at 75% power or less, the EGT unit should be used in the following manner:

1. Lean the mixture and note the point on the indicator at which the temperature peaks and starts to fall.
 - a. CRUISE (LEAN) MIXTURE - Enrich mixture (push mixture control forward) until EGT indicator shows a drop of 25°F to 50°F on rich side of peak.
 - b. BEST POWER MIXTURE - Enrich mixture (push mixture control forward) until EGT indicator shows a drop of 75°F to 100°F on rich side of peak.

CAUTION

Do not continue to lean mixture beyond the point necessary to establish peak temperature. Continuous operation is recommended at 25°F or below peak EGT only on rich side of peak.

2. Changes in altitude and power setting require EGT to be rechecked and mixture reset.
3. A mixture resulting in an EGT 25°F on the rich side of peak should also result in fuel flow and TAS values approximately equal to those presented in the Cruise Power Settings tables in the PERFORMANCE Section. If not, the values derived from the Range, Endurance, and Cruise Speeds charts must be revised accordingly. In very cold weather, EGT's 25°F rich of peak may not be obtainable.

Section IV
Normal Procedures

BEECHCRAFT
Duchess 76

DESCENT

1. Altimeter - SET
2. Cowl Flaps - CLOSE
3. Windshield Defroster - AS REQUIRED
4. Carburetor Heat - FULL ON or FULL OFF, AS REQUIRED
5. Power - AS REQUIRED (avoid prolonged idle settings and low cylinder head temperatures)
6. Mixtures - ENRICH AS REQUIRED

BEFORE LANDING

1. Seat Belts and Shoulder Harnesses - FASTENED, SEAT BACKS UPRIGHT
2. Fuel Selectors - CHECK ON
3. Aux Fuel Pumps - ON
4. Mixture Controls - FULL RICH (or as required by field elevation)
5. Carburetor Heat - FULL ON or FULL OFF AS REQUIRED

NOTE

In the event of a go-around, Carburetor Heat shall be in the full OFF (cold) position after full throttle application.

6. Cowl Flaps - AS REQUIRED
7. Landing Gear - DOWN (140 KTS Maximum)
8. Landing and Taxi Lights - AS REQUIRED
9. Wing Flaps - FULL DOWN (DN) (110 KTS Maximum)
10. Airspeed - ESTABLISH LANDING APPROACH SPEED
11. Propellers - HIGH RPM

BEECHCRAFT
Duchess 76

Section IV
Normal Procedures

BALKED LANDING

1. Propellers - HIGH RPM
2. Throttles - FULL FORWARD
3. Airspeed - 71 KTS
4. Wing Flaps - UP
5. Landing Gear - UP
6. Cowl Flaps - AS REQUIRED

AFTER LANDING

1. Landing and Taxi Lights - AS REQUIRED
2. Wing Flaps - UP , *Cowl Flaps open*
3. Trim Tabs - SET TO TAKE-OFF RANGE - *Elevator - Down*
4. Cowl Flaps - OPEN

SHUTDOWN

1. Parking Brake - SET
2. Aux Fuel Pumps - OFF
3. Electrical and Avionics Equipment - OFF
4. Propellers - HIGH RPM
5. Throttles - 1000 RPM
6. Mixtures - IDLE CUT-OFF
7. Magneto/Start Switches - OFF, after engines stop
8. Battery and Alternator Switches - OFF
9. Controls - LOCKED
10. Install wheel chocks and release brakes if the airplane is to be left unattended.

NOTE

TRIM NOSE DOWN
TO PREVENT RUDDER
DAMAGE

September 1983

INSTALL CONTROLS

4-14A

Section IV
Normal Procedures

BEEHCRAFT
Duchess 76

INTENTIONALLY LEFT BLANK

ENVIRONMENTAL SYSTEMS

HEATING AND VENTILATION

Refer to the SYSTEMS DESCRIPTION section for operation of heating and ventilation controls.

ELECTRIC ELEVATOR TRIM

1. On/Off Switch - ON
2. Control Wheel Trim Switch - Depress and move forward for nose down, aft for nose up, and when released, the switch returns to the center (OFF) position.

Procedure for UNSCHEDULED ELECTRIC ELEVATOR TRIM is given in EMERGENCY PROCEDURES Section.

COLD WEATHER OPERATION

PREFLIGHT INSPECTION

All accumulations of ice, snow and frost must be removed from the wings, tail, control surfaces and hinges, propellers, windshield, fuel cell filler caps, crankcase vents, and fuel vents. If such accumulations are not removed completely, the airplane shall not be flown. The deposits will not blow off in flight. While an adverse weight factor is clearly involved in the case of heavy deposits, it is less obvious that even slight accumulations will disturb or completely destroy the designed aerodynamic properties of the airfoils.

The normal preflight procedures should then be completed, with particular attention given to check of flight controls for complete freedom of movement.

ENGINES

Use engine oil in accordance with Consumable Materials in the HANDLING, SERVICING AND MAINTENANCE section.

WARNING

■ Ascertain that magneto/start switches and battery master switch are OFF before moving propeller by hand.

Always pull the propeller through by hand, opposite the direction of rotation, several times to clear the engine and "limber up" the cold, heavy oil before using the starter. This will also lessen the load on the battery if external power is not used.

Under very cold conditions, it may be necessary to preheat the engines prior to a start. Particular attention should be given to the oil cooler, engine sump and propeller hub to

**BEECHCRAFT
Duchess 76**

**Section IV
Normal Procedures**

ensure proper preheat. A start with congealed oil in the system may produce an indication of normal pressure immediately after the start, but then the oil pressure may decrease when residual oil in the engine is pumped back with the congealed oil in the sump. If an engine heater capable of heating both the engine sump and cooler is not available, the oil should be drained while the engine is hot and stored in a warm area until the next flight.

If there is no oil pressure within the first 30 seconds of running, or if oil pressure drops after a few minutes of ground operation, shut down and check for broken oil lines, oil cooler leaks or the possibility of congealed oil.

NOTE

It is advisable to use external power for starting in cold weather.

During warm-up, monitor engine temperatures closely, since it is quite possible to exceed the cylinder head temperature limit in trying to bring up the oil temperature. Exercise the propellers several times to remove cold oil from the pitch change mechanism. The propellers should also be cycled occasionally in flight.

During letdown and landing, give special attention to engine temperatures, since the engines will have a tendency toward overcooling.

TAXIING

Avoid taxiing through water, slush, or muddy surfaces if possible. In cold weather, water, slush, or mud, when splashed onto landing gear mechanisms or control surface hinges may freeze, preventing free movement and resulting in structural damage.

PRACTICE DEMONSTRATION OF VMCA

VMCA demonstration may be required for multi-engine pilot certification. The following procedure shall be used at a safe altitude of at least 5000 feet above the ground in clear air only.

WARNING

INFLIGHT ENGINE CUTS BELOW VSSE
SPEED OF 71 KTS ARE PROHIBITED.

1. Landing Gear - UP
2. Wing Flaps - UP
3. Airspeed - ABOVE 71 KTS (VSSE)
4. Propeller Levers - HIGH RPM
5. Throttle (simulated inoperative engine) - IDLE
6. Throttle (other engine) - FULL FORWARD
7. Airspeed - REDUCE approximately 1 knot per second until either VMCA or stall warning is obtained.

CAUTION

Use rudder to maintain directional control (heading) and ailerons to maintain 5° bank towards the operative engine (lateral attitude). At the first sign of either VMCA or stall warning (which may be evidenced by: inability to maintain heading or lateral attitude, aerodynamic stall buffet, or stall warning horn sound) immediately initiate recovery: reduce power to idle on the operative engine and immediately lower the nose to regain VSSE.

NOISE CHARACTERISTICS

Approach to and departure from an airport should be made so as to avoid prolonged flight at low altitude near noise-sensitive areas. Avoidance of noise-sensitive areas, if practical, is preferable to overflight at relatively low altitudes.

For VFR operations over outdoor assemblies of persons, recreational and park areas, and other noise-sensitive areas, pilots should make every effort to fly not less than 2000 feet above the surface, weather permitting, even though flight at a lower level may be consistent with the provisions of government regulations.

NOTE

The preceding recommended procedures do not apply where they would conflict with Air Traffic Control clearances or instructions, or where, in the pilot's judgement, an altitude of less than 2000 feet is necessary to adequately exercise his duty to see and avoid other airplanes.

Flyover noise level established in compliance with FAR 36 is:

78.7 dB(A)

No determination has been made by the Federal Aviation Administration that the noise level of this airplane is or should be acceptable or unacceptable for operation at, into, or out of any airport.

BEECHCRAFT
Duchess 76

SECTION V

PERFORMANCE

TABLE OF CONTENTS

<i>SUBJECT</i>	<i>PAGE</i>
Introduction to Performance and	
Flight Planning	5-3
Conditions	5-3 – 5-13
Comments Pertinent to the Use of	
Performance Graphs.....	5-14
Airspeed Calibration – Normal System.....	5-16
Altimeter Correction – Normal System	5-17
Airspeed Calibration – Alternate System.....	5-18
Altimeter Correction – Alternate System.....	5-19
Fahrenheit to Celsius Temperature Conversion.....	5-20
ISA Conversion.....	5-21
Manifold Pressure vs RPM.....	5-22
Take-Off Weight.....	5-23
Stall Speeds – Power Idle.....	5-24
Wind Components	5-25
Take-Off Distance.....	5-26
Take-Off Distance – Grass Surface.....	5-27
Accelerate-Stop Distance	5-28
Accelerate-Go Distance.....	5-29
Climb – Two Engine	5-30
Take-Off Climb Gradient, One	
Engine Inoperative	5-31
Time, Fuel, and Distance to Climb	5-32
Climb – One Engine Inoperative.....	5-33
Service Ceiling – One Engine Inoperative	5-34

Section V
Performance

BEECHCRAFT
Duchess 76

TABLE OF CONTENTS (Continued)

<i>SUBJECT</i>	<i>PAGE</i>
Cruise Speeds	5-35
Cruise Power Settings	5-36 - 5-40
Maximum Cruise Power	5-36
Recommended Cruise Power	5-37
Recommended Cruise Power	5-38
Recommended Cruise Power	5-39
Economy Cruise Power	5-40
Range Profile - 100 Gallons.....	5-40B
Endurance Profile - 100 Gallons	5-41
Holding Time.....	5-42
Time, Fuel, and Distance to Descend	5-43
Climb - Balked Landing.....	5-44
Landing Distance - Flaps Down (DN).....	5-45
Landing Distance - Flaps Up.....	5-46
Landing Distance - Grass Surface - Flaps Down (DN).....	5-47

**INTRODUCTION TO PERFORMANCE
AND FLIGHT PLANNING**

All airspeeds quoted in this section are indicated airspeeds (IAS) except as noted and assume zero instrument error.

The graphs and tables in this section present performance information for takeoff, climb, landing and flight planning at various parameters of weight, power, altitude, and temperature. FAA approved performance information is included in this section. Examples are presented on all performance graphs. In addition, the calculations for flight time, block speed, and fuel required are presented using the conditions listed.

CONDITIONS

At Denver:

Outside Air Temperature 15°C (59°F)
Field Elevation 5330 ft
Altimeter Setting 29.60 in. Hg
Wind 270° at 10 kts
Runway 26L length 10,010 ft

Route of Trip

DEN-V81-AMA

For VFR Cruise at 11,500 feet

Section V
Performance

BEECHCRAFT
Duchess 76

ROUTE SEGMENT	MAGNETIC COURSE	DIST NM	WIND 11,500 FEET DIR/KTS	OAT 11,500 FEET °C	ALT SETTING IN. HG
DEN-COS	161°	55	010/30	-5	29.60
COS-PUB	153°	40	010/30	-5	29.60
PUB-TBE	134°	74	100/20	0	29.56
TBE-DHT	132°	87	200/20	9	29.56
DHT-AMA	125°	65	200/20	10	29.56

REFERENCE: Enroute Low Altitude Chart L-6

At Amarillo:

Outside Air Temperature 25°C (77°F)
 Field Elevation 3605 ft
 Altimeter Setting 29.56 in. Hg
 Wind 180° at 10 kts
 Runway 21 Length 10,000 ft

To determine pressure altitude at origin and destination airports, add 100 feet to field elevation for each .1 in. Hg below 29.92, and subtract 100 feet from field elevation for each .1 in. Hg above 29.92.

Pressure Altitude at DEN:

$$29.92 - 29.60 = .32 \text{ in. Hg}$$

The pressure altitude at DEN is 320 feet above the field elevation.

$$5330 + 320 = 5650 \text{ ft}$$

**BEECHCRAFT
Duchess 76**

**Section V
Performance**

Pressure Altitude at AMA:

$$29.92 - 29.56 = .36 \text{ in. Hg}$$

The pressure altitude at AMA is 360 feet above the field elevation.

$$3605 + 360 = 3965 \text{ ft}$$

NOTE

For flight planning, the difference between cruise altitude and cruise pressure altitude has been ignored.

Maximum Allowable Take-off Weight = 3900 lbs

$$\text{Ramp Weight} = 3900 + 16 = 3916 \text{ lbs}$$

NOTE

Fuel for start, taxi, and takeoff is normally 16 pounds.

Enter the Take-Off Weight graph at 5650 feet pressure altitude and 15°C.

The take-off weight to achieve a positive rate-of-climb at lift-off for one engine inoperative is:

$$\text{Take-off Weight} = 2925 \text{ pounds}$$

Section V
Performance

BEECHCRAFT
Duchess 76

Enter the Take-Off Distance graph at 15°C, 5650 feet pressure altitude, 3900 pounds, and 9.5 knots headwind component.

Ground Roll.....1680 ft
Total Distance over 50-ft Obstacle3670 ft

Enter the Accelerate-Stop graph at 15°C, 5650 feet pressure altitude, 3900 pounds, and 9.5 knots headwind component:

Accelerate-Stop Distance3250 ft

NOTE

Since 3250 feet is less than the available field length (10,010 ft), the accelerate-stop procedure can be performed at any weight.

Takeoff at 3900 lbs can be accomplished. However, if an engine failure occurs prior to retraction of landing gear, the accelerate-stop procedure must be performed (even if airborne, unless sufficient altitude is available for retraction of landing gear while descending).

The following example assumes 15°C, SL pressure altitude, and a take-off weight of 3350 pounds.

**BEECHCRAFT
Duchess 76**

**Section V
Performance**

Although not required by regulations, information has been presented to determine the take-off weight, field requirements and take-off flight path assuming an engine failure occurs during the take-off procedure. The following illustrates the use of these charts.

Enter the Accelerate-Go graph at 15°C, SL pressure altitude, 3350 pounds, and 10 knots headwind component:

Total Distance Over 50-ft Obstacle4700 ft
Ground Roll.....940 ft

Enter the graph for Take-off Climb Gradient – One Engine Inoperative at 15°C, SL pressure altitude, and 3350 pounds:

Climb Gradient..... 4.6%

A 4.6% climb gradient is 46 feet of vertical height per 1000 feet of horizontal distance.

NOTE

The Take-off Climb Gradient – One Engine Inoperative graph assumes zero wind conditions. Climbing into a headwind will result in higher angles of climb, and hence, better obstacle clearance capabilities.

Section V
Performance

BEECHCRAFT
Duchess 76


Calculation of horizontal distance to clear an obstacle 90 feet above the runway surface:

Horizontal distance used to climb from 50 feet to 90 feet

$$= (90 - 50) (1000 \div 46) = 870 \text{ feet}$$
40 x 21.7

Total Distance = 4700 + 870 = 5570 feet

The above results are illustrated below:

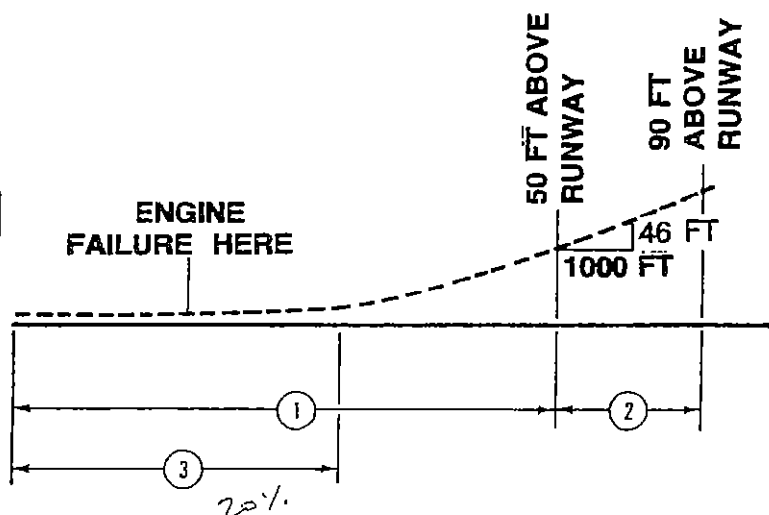

① Accelerate-go take-off distance = 4700 feet

② Distance to climb from 50 ft. to 90 ft. above runway = 870 feet

③ *740*

The following calculations provide information for the flight planning procedure. All examples are presented on the performance graphs. A take-off weight of 3900 pounds has been assumed.

**BEECHCRAFT
Duchess 76**

**Section V
Performance**

Enter the Time, Fuel, and Distance to Climb graph at 15°C to 5650 feet and to 3900 pounds. Also enter at -5°C to 11,500 feet and to 3900 pounds. Read:

$$\text{Time to Climb} = 14 - 6 = 8 \text{ min}$$

$$\text{Fuel Used to Climb} = 6.1 - 2.8 = 3.3 \text{ gal}$$

$$\text{Distance Traveled} = 24 - 10 = 14 \text{ NM}$$

The temperatures for cruise are presented for a standard day (ISA); 20°C (36°F) above a standard day (ISA + 20°C); and 20°C (36°F) below a standard day (ISA - 20°C). These should be used for flight planning. The IOAT values are true temperature values which have been adjusted for the compressibility effects. IOAT should be used for setting cruise power while enroute.

Enter the graph for ISA conversion at 11,500 feet and the temperature for the route segment:

DEN-PUB	OAT	= -5°C
	ISA Condition	= ISA + 3°C
PUB-TBE	OAT	= 0°C
	ISA Condition	= ISA + 8°C
TBE-DHT	OAT	= 9°C
	ISA Condition	= ISA + 17°C
DHT-AMA	OAT	= 10°C
	ISA Condition	= ISA + 18°C

Enter the table for Recommended Cruise Power - 24 in. Hg, 2500 RPM at 11,000 ft, 12,000 ft, ISA and ISA + 20°C.

Section V
Performance

BEECHCRAFT
Duchess 76

ALTI- TUDE FEET	TEMPERATURE					
	ISA			ISA + 20°C		
	MAN. PRESS. IN. HG	FUEL FLOW GPH/ ENG	TAS KNOTS	MAN. PRESS. IN. HG	FUEL FLOW GPH/ ENG	TAS KNOTS
11,000	19.4	8.8	157	19.4	8.5	158
12,000	18.7	8.5	156	18.7	8.2	156

Interpolate for 11,500 feet and the temperature for the appropriate route segment. Results of the interpolations are:

ROUTE SEGMENT	MAN. PRESS. IN. HG	FUEL FLOW GPH/ENG	TAS KNOTS
DEN-PUB	19.1	8.7	157
PUB-TBE	19.1	8.6	157
TBE-DHT	19.1	8.5	157
DHT-AMA	19.1	8.4	157

NOTE

The above are exact values for the assumed conditions.

**BEECHCRAFT
Duchess 76**

**Section V
Performance**

Enter the graph for Descent at 11,500 feet to the descent line, and enter again at 3965 feet to the descent line, and read:

$$\text{Time to Descend} = 10 - 4 = 6 \text{ min}$$

$$\text{Fuel Used to Descend} = 3.35 - 1.28 = 2.07 \text{ gal}$$

$$\text{Distance to Descend} = 32 - 11 = 21 \text{ NM}$$

Time and fuel used were calculated at Recommended Cruise Power — 24 in. Hg 2500 RPM as follows:

$$\text{Time} = \frac{\text{Distance}}{\text{Ground Speed}}$$

$$\text{Fuel Used} = (\text{Time}) (\text{Total Fuel Flow})$$

Results are:

ROUTE SEGMENT	DISTANCE	EST GROUND SPEED	TIME AT CRUISE ALTITUDE	FUEL USED FOR CRUISE
	NM	KNOTS	HRS: MIN	GAL
DEN-COS	*41	184	: 13	3.8
COS-PUB	40	183	: 13	3.7
PUB-TBE	74	143	: 31	8.9
TBE-DHT	87	146	: 36	10.2
DHT-AMA	*44	148	: 18	5.1

*Distance required to climb or descend has been subtracted from segment distance.

Section V
Performance

BEECHCRAFT
Duchess 76

TIME - FUEL - DISTANCE

ITEM	TIME HRS: MINS	FUEL GAL	DISTANCE NM
Start, Runup, Taxi, and Take- off	0:00	2.7	0
Climb	:08	3.3	14
Cruise	1:51	31.7	260
Descent	:06	2.1	21
Total	2:05	39.8	321

Total Flight Time: 2 hours, 5 minutes

Block Speed: $321 \text{ NM} \div 2 \text{ hours, 5 minutes} = 154 \text{ knots}$

Reserve Fuel: (45 minutes at Economy Cruise Power):

Enter the cruise power settings table for Economy Cruise Power at 11,500 feet for ISA (assume ISA Fuel Flow Rate).

Fuel Flow Per Engine = 8.0 gal/hr

Total Fuel Flow = 16.0 gal/hr (96 lbs/hr)

Reserve Fuel = (45 min) (96 lbs/hr) = 72 lbs (12 gal)

Total Fuel = $39.8 + 12.0 = 51.8 \text{ gallons}$

**BEECHCRAFT
Duchess 76**

**Section V
Performance**

The estimated landing weight is determined by subtracting the fuel required for the flight from the ramp weight:

Assumed ramp weight = 3916 lbs

Estimated fuel from DEN to AMA = 39.8 gal (239 lbs)

Estimated landing weight = 3916 - 239 = 3677 lbs

Examples have been provided on the performance graphs. The above conditions have been used throughout. Rate of climb was determined for the initial cruise altitude conditions.

Enter the graph for Landing Distance – Flaps Down (DN) at 25°C, 3965 feet pressure altitude, 3677 pounds and 9.5 kts headwind component:

Ground Roll	1050 ft
Total Distance over 50-ft Obstacle.....	1970 ft
Approach Speed.....	76 kts

Enter the graph for Climb – Balked Landing at 25°C, 3965 feet pressure altitude and 3677 pounds:

Rate-of-Climb	610 ft/min
Climb Gradient.....	8.0%

Section V
Performance

BEEHCRAFT
Duchess 76

**COMMENTS PERTINENT TO THE USE OF
PERFORMANCE GRAPHS**

1. The example, in addition to presenting an answer for a particular set of conditions, also presents the order in which the graphs should normally be used, i.e., if the first item in the example is OAT, then enter the graph at the known OAT.
2. The reference lines indicate where to begin following guide lines, always project to the reference line first, then follow the guide lines to the next known item.
3. Indicated airspeeds (IAS) were obtained by using the Airspeed Calibration – Normal System.
4. The associated conditions define the specific conditions from which performance parameters have been determined. They are not intended to be used as instructions; however, performance values determined from charts can only be achieved if specified conditions exist.
5. The full amount of usable fuel is available for all approved flight conditions.

**BEEHCRAFT
Duchess 76**

**Section V
Performance**


INTENTIONALLY LEFT BLANK

January 1978

5-15


AIRSPEED CALIBRATION - NORMAL SYSTEM

NOTE: INDICATED AIRSPEED ASSUMES ZERO INSTRUMENT ERROR

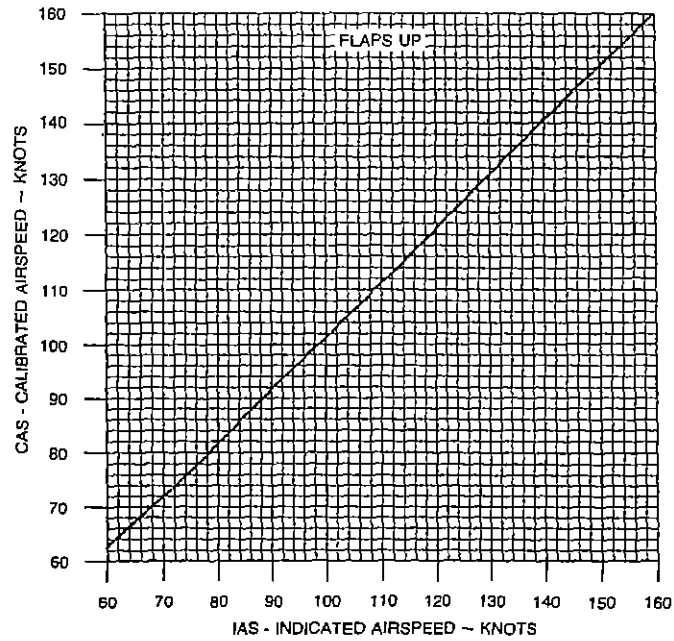

EXAMPLE:

IAS 75 KTS
 FLAPS DOWN (DN)
 CAS 75 KTS

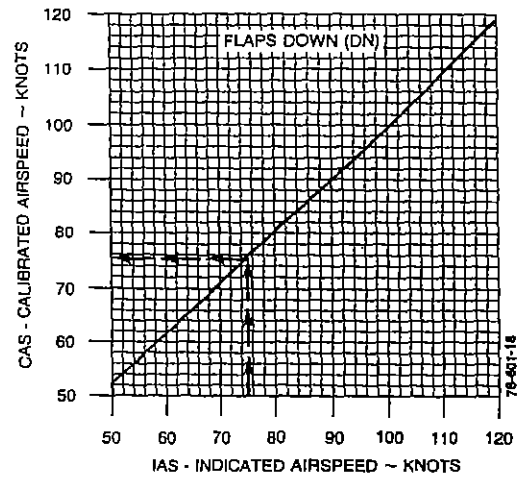

Section V
 Performance



BEECHCRAFT
 Duchess 76

January 1978

ALTIMETER CORRECTION - NORMAL SYSTEM

EXAMPLE:

IAS	75 KTS
FLAPS	DOWN (DN)
INDICATED PRESSURE ALTITUDE	4000 FT
ALTIMETER CORRECTION	+2 FT
ACTUAL PRESSURE ALTITUDE	4002 FT

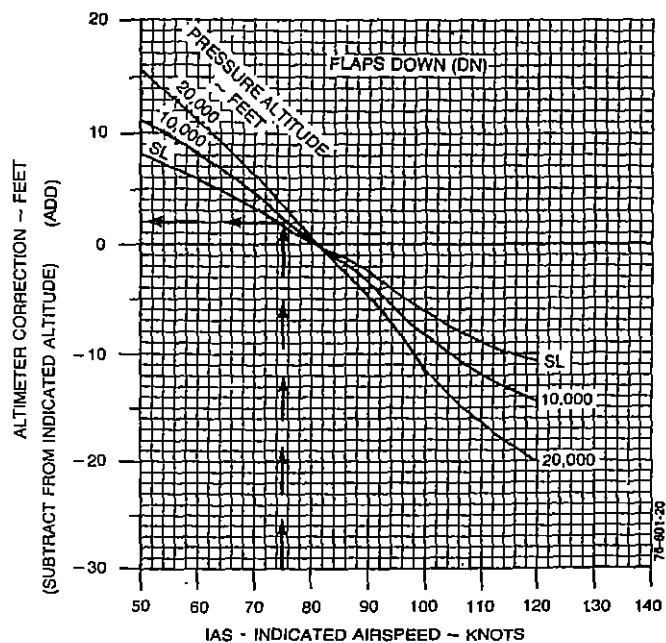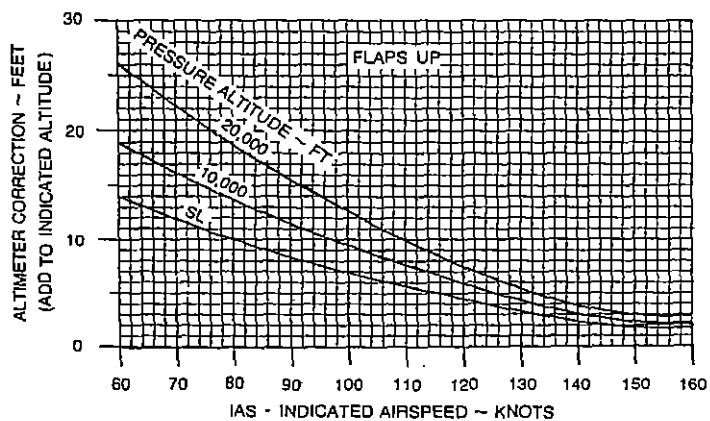

BEECHCRAFT
Duchess 76

Section V
Performance

AIRSPEED CALIBRATION - ALTERNATE SYSTEM



EXAMPLE:

- 1 FLAPSDOWN (DN)
STORM WINDOWCLOSED
IAS - ALTERNATE SYSTEM69 KTS

- IAS - NORMAL SYSTEM75 KTS
CAS - (SEE AIRSPEED CALIBRATION.....75 KTS
NORMAL SYSTEM)

- 2 FLAPSUP
STORM WINDOWOPEN
IAS - NORMAL SYSTEM85 KTS

- IAS - ALTERNATE SYSTEM91 KTS

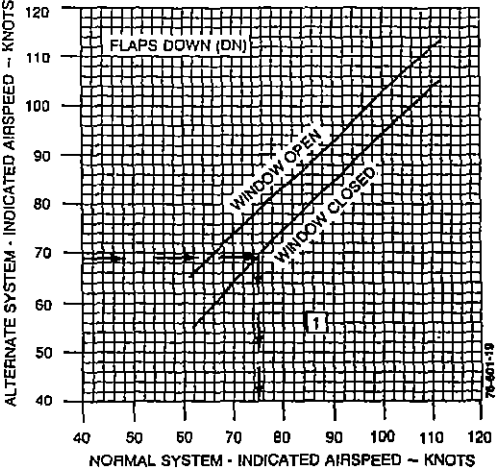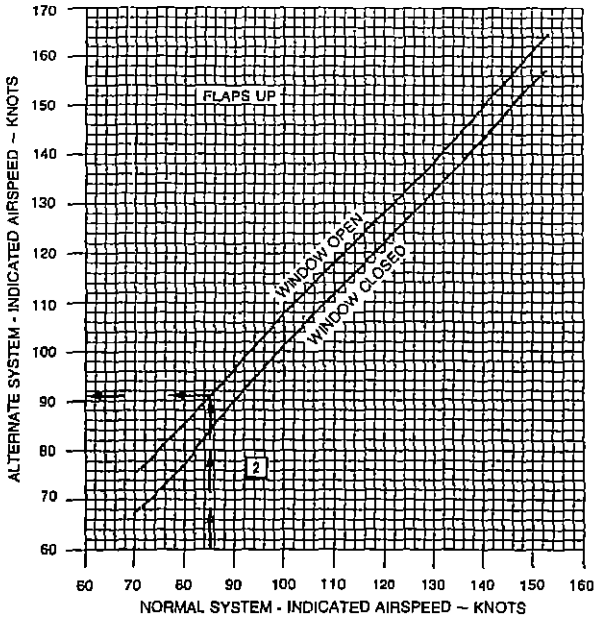

January 1978



5-19

ALTIMETER CORRECTION - ALTERNATE SYSTEM

EXAMPLE:


IAS..... 75 KTS
FLAPS..... DOWN (DN)
INDICATED PRESSURE ALTITUDE..... 4000 FT
STORM WINDOW..... OPEN


ALTIMETER CORRECTION..... -25 FT
ACTUAL PRESSURE ALTITUDE..... 3975 FT

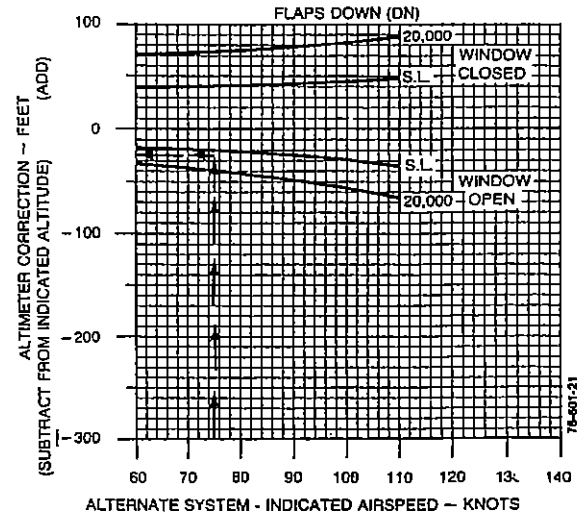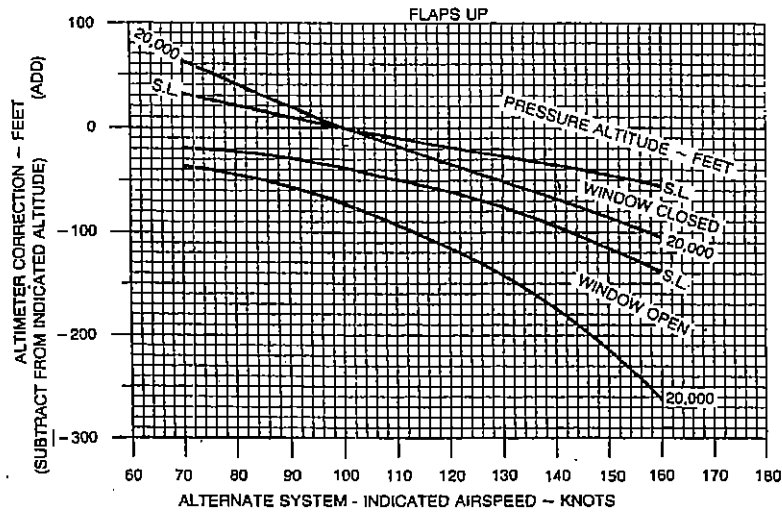

BEECHCRAFT
Duchess 76

Section V
Performance

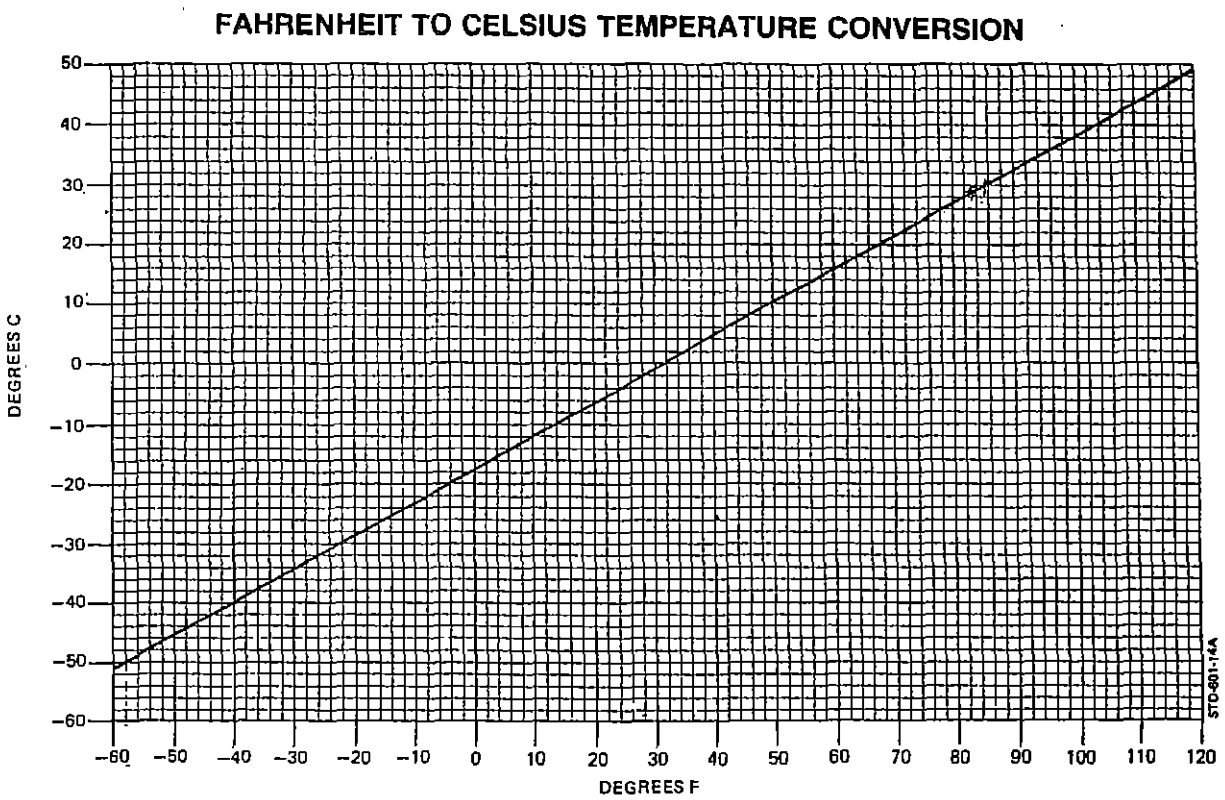

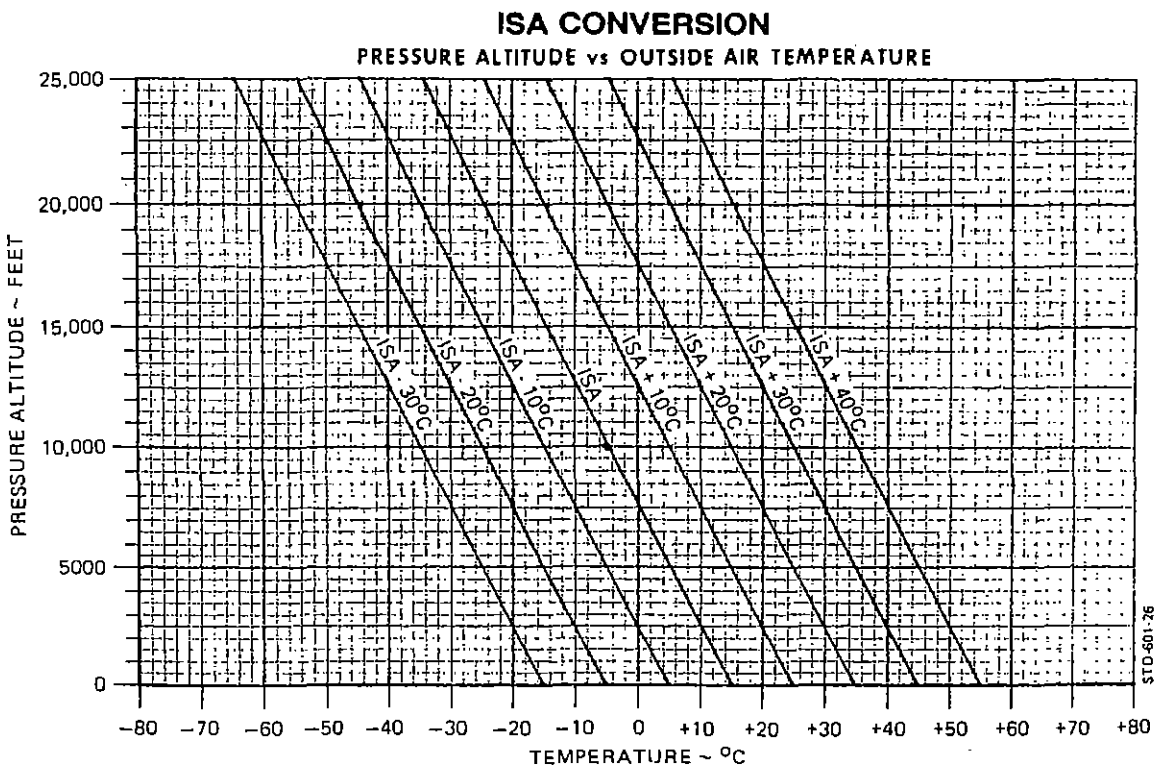


MANIFOLD PRESSURE vs RPM

EXAMPLE:

ENGINE SPEED 2500 RPM
MANIFOLD PRESSURE . . . 19.1 IN. HG

WITHIN RECOMMENDED LIMITS

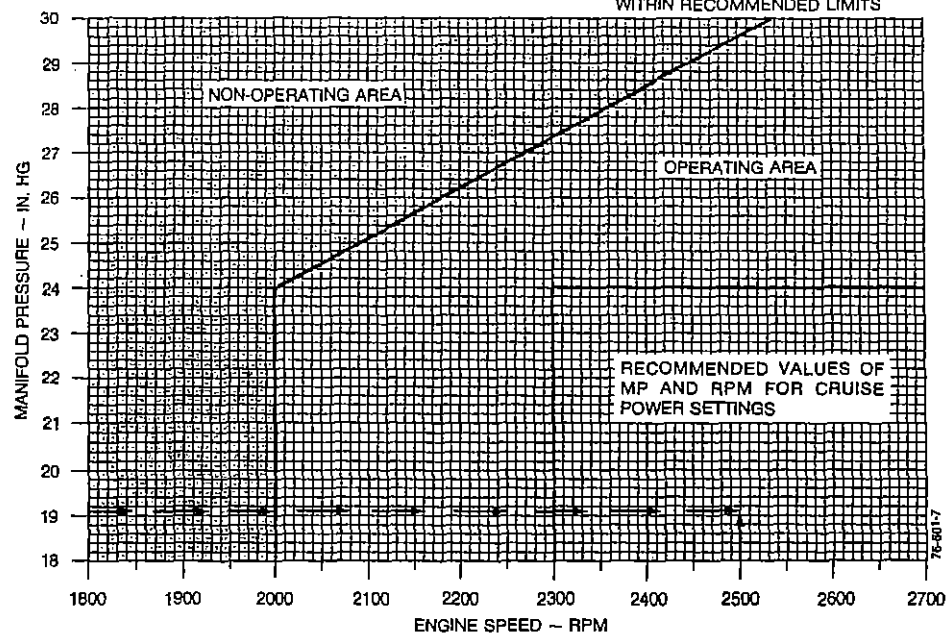

BEECHCRAFT
Duchess 76

Section V
Performance


TAKE-OFF WEIGHT
TO ACHIEVE POSITIVE SINGLE ENGINE
RATE OF CLIMB AT LIFT-OFF

ASSOCIATED CONDITIONS:

AIRPLANE..... AIRBORNE
POWER..... TAKE-OFF AT
2700 RPM
FLAPS..... UP
LANDING GEAR..... DOWN
INOPERATIVE PROPELLER .. FEATHERED

EXAMPLE:

PRESSURE ALTITUDE..... 5650 FT
OAT..... 15°C
TAKE-OFF WEIGHT 2925 LBS

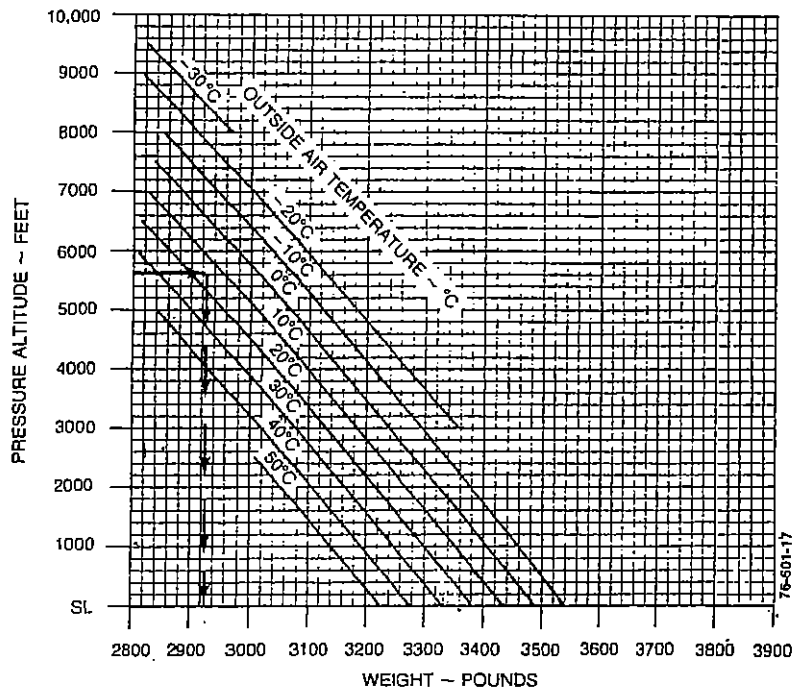

2620
340
360
3380

Section V
Performance


BEECHCRAFT
Duchess 76

STALL SPEEDS - POWER IDLE

- NOTES: 1. THE MAXIMUM ALTITUDE LOSS EXPERIENCED WHILE CONDUCTING STALLS IN ACCORDANCE WITH FAR 23.201 WAS 400 FEET.
2. MAXIMUM NOSE DOWN PITCH ATTITUDE AND ALTITUDE LOSS DURING RECOVERY FROM ONE ENGINE INOPERATIVE STALLS PER FAR 23.205 ARE 5° AND 100 FEET RESPECTIVELY.
3. A NORMAL STALL RECOVERY TECHNIQUE MAY BE USED.

EXAMPLE:

WEIGHT 3677 LBS
FLAPS DOWN (DN)
ANGLE OF BANK 30°
STALL SPEED 64 KTS IAS
62 KTS CAS

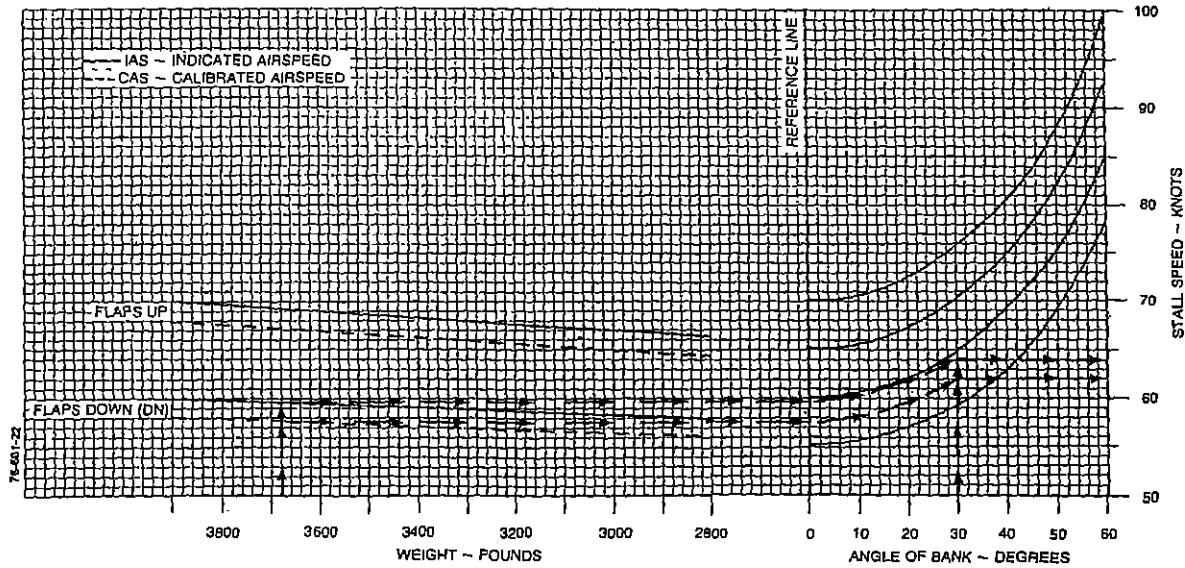

BEECHCRAFT
Duchess 76


Section V
Performance

WIND COMPONENTS

Demonstrated Crosswind is 25 kts

EXAMPLE:

WIND SPEED	10 KNOTS
ANGLE BETWEEN WIND DIRECTION AND FLIGHT PATH	20°
HEADWIND COMPONENT	9.5 KNOTS
CROSSWIND COMPONENT	3.5 KNOTS
FLIGHT PATH	

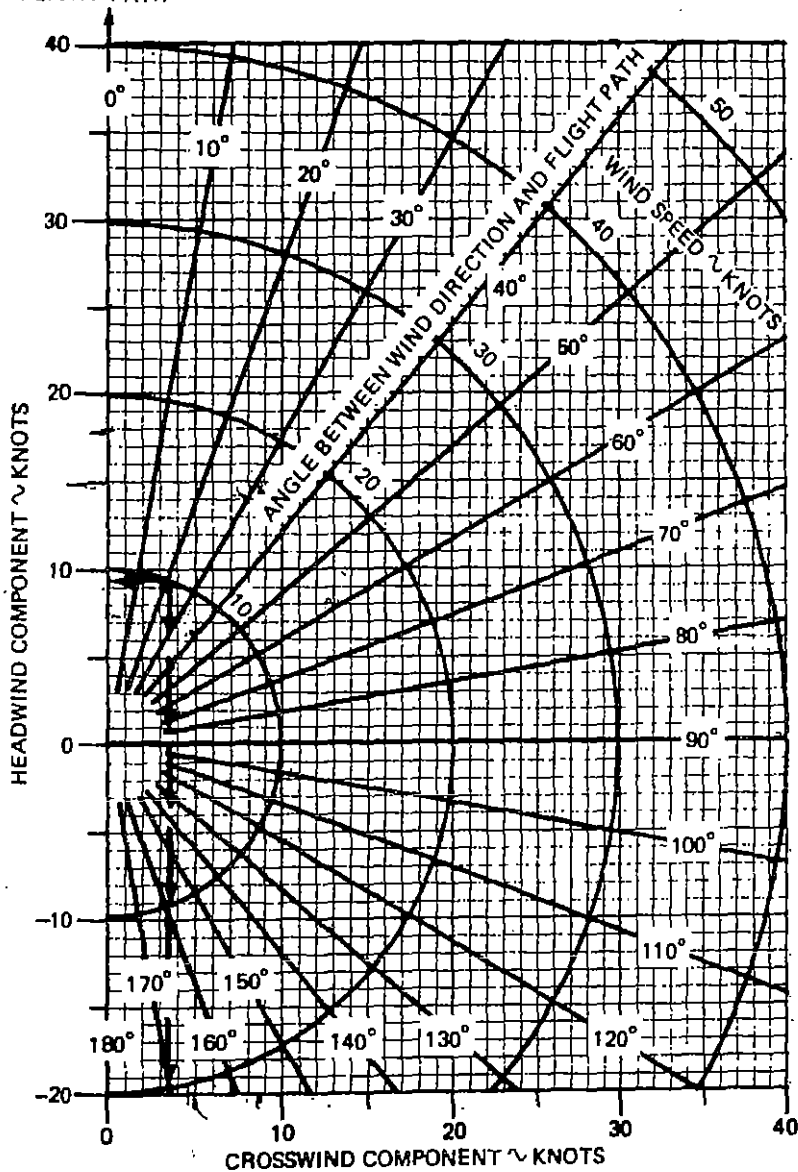

January 1978

5-25

TAKE-OFF DISTANCE

ASSOCIATED CONDITIONS:


POWER TAKE-OFF POWER AT 2700 RPM SET
BEFORE BRAKE RELEASE
MIXTURE FULL RICH (ABOVE 5000 FT LEAN TO
75°-100° F ON RICH SIDE OF PEAK EGT)
FLAPS UP
LANDING GEAR RETRACT AFTER POSITIVE CLIMB ESTABLISHED
RUNWAY PAVED, LEVEL, DRY SURFACE
COWL FLAPS OPEN

TAKE-OFF SPEEDS (ALL WEIGHTS)	
LIFT-OFF	71 KNOTS
50 FEET	80 KNOTS

EXAMPLE:

OAT 15°C
PRESSURE ALTITUDE 5650 FT
TAKE-OFF WEIGHT 3900 LBS
HEADWIND COMPONENT 9.5 KTS

GROUND ROLL 1680 FT
TOTAL DISTANCE OVER
50-FT OBSTACLE 3670 FT

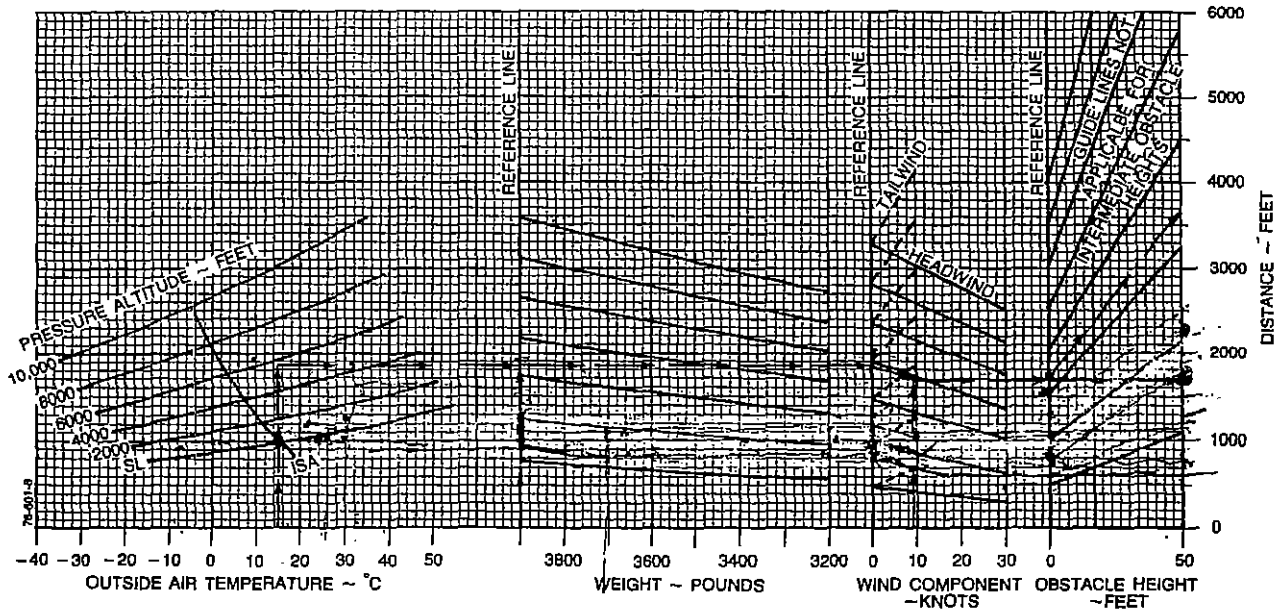

Section V
Performance

BEECHCRAFT
Duchess 76

January 1978

5-27

ASSOCIATED CONDITIONS:

POWER TAKE-OFF AT 2700 RPM SET
BEFORE BRAKE RELEASE
FLAPS UP
LANDING GEAR RETRACT AFTER POSITIVE CLIMB ESTABLISHED
RUNWAY SHORT, DRY GRASS, LEVEL SURFACE
COWL FLAPS OPEN
MIXTURE FULL RICH (ABOVE 5000 FT LEAN TO
75° - 100°F ON RICH SIDE OF PEAK EGT)

**TAKE-OFF DISTANCE -
GRASS SURFACE**


**TAKE-OFF SPEEDS
(ALL WEIGHTS)**

LIFT-OFF	71 KNOTS
50 FEET	80 KNOTS

EXAMPLE:

OAT 15°C
PRESSURE ALTITUDE 5650 FT
TAKE-OFF WEIGHT 3900 LBS
HEADWIND COMPONENT 0.5 KTS

GROUND ROLL 1850 FT
TOTAL DISTANCE OVER 50 FT OBSTACLE 3850 FT
TAKE-OFF SPEED: AT LIFT-OFF 71 KTS
AT 50 FT 80 KTS

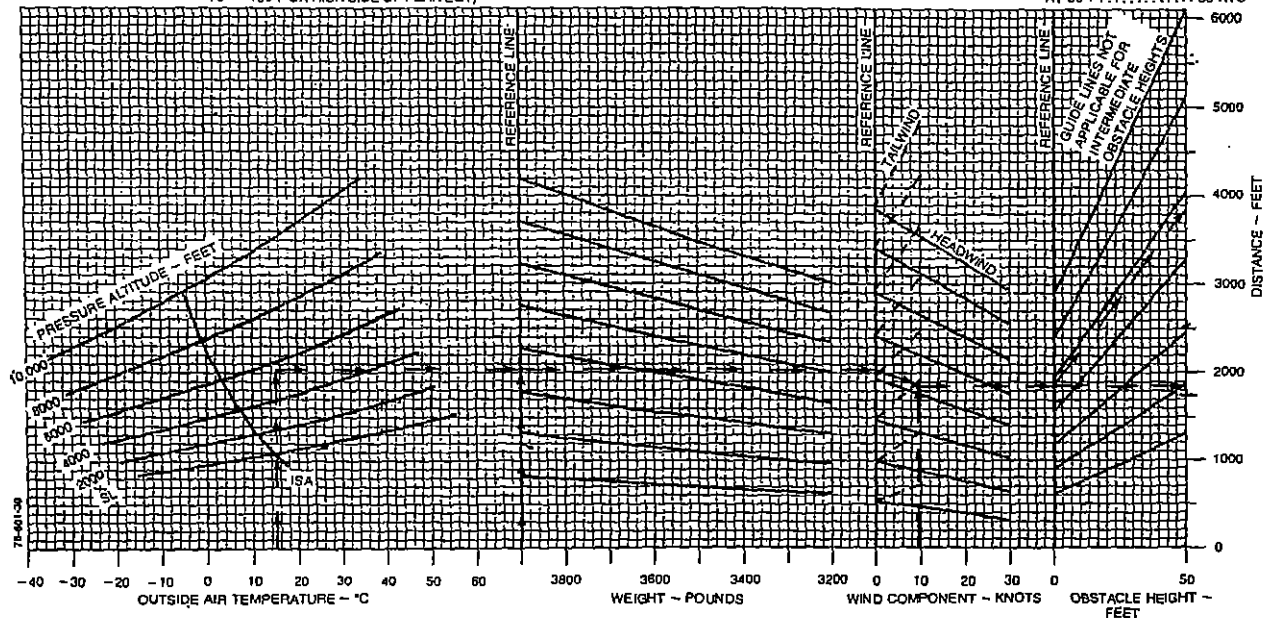

BEECHCRAFT
Duchess 76

Section V
Performance

Section V
Performance

BEECHCRAFT
Duchess 76


ACCELERATE - STOP DISTANCE
DECISION SPEED 71 KNOTS (ALL WEIGHTS)

ASSOCIATED CONDITIONS:

- POWER..... 1. TAKE-OFF POWER AT 2700 RPM
 SET BEFORE BRAKE RELEASE
 2. ENGINE IDLE AT DECISION SPEED
FLAPS..... UP
RUNWAY..... PAVED, LEVEL, DRY SURFACE
COWL FLAPS..... OPEN
MIXTURE..... FULL RICH (ABOVE 5000 FT LEAN TO
 75° - 100°F ON RICH SIDE OF PEAK EGT)

EXAMPLE:

OAT..... 15°C
PRESSURE ALTITUDE..... 5650 FT
TAKE-OFF WEIGHT..... 3900 LBS
HEADWIND COMPONENT..... 9.5 KTS
ACCELERATE AND STOP DISTANCE..... 3250 FT
DECISION SPEED..... 71 KTS

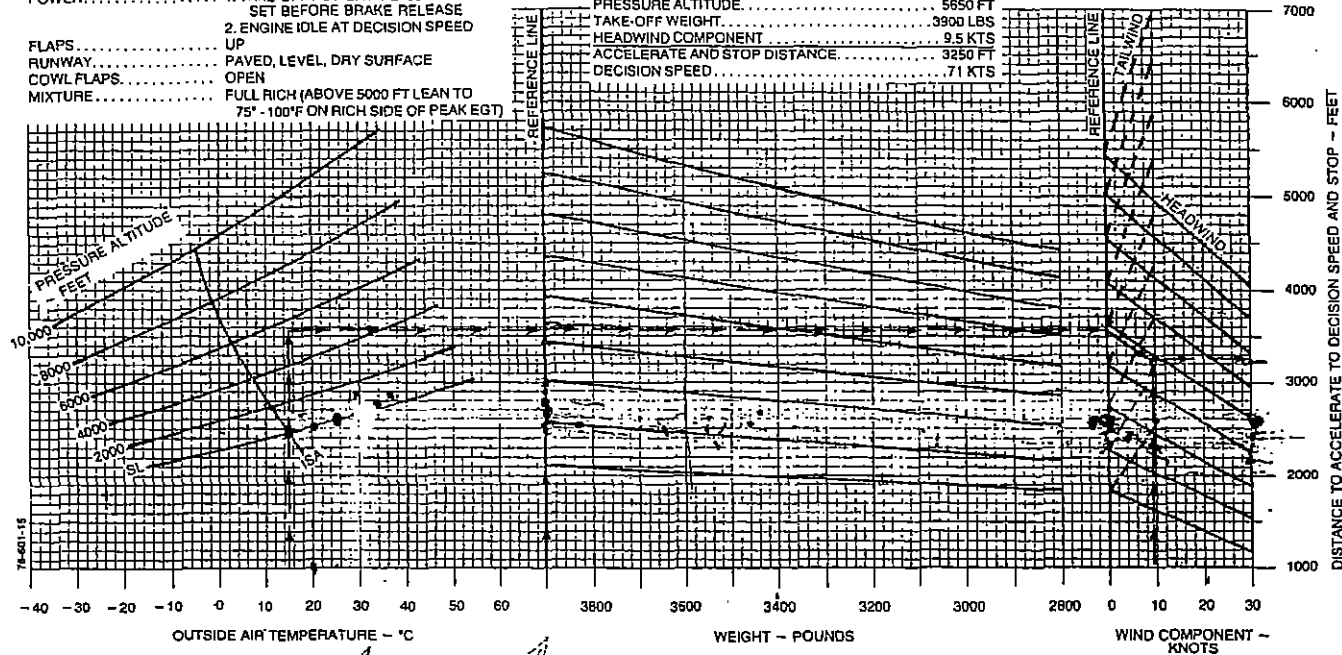

September, 1983

5-29

ACCELERATE-GO DISTANCE

ASSOCIATED CONDITIONS:


POWER TAKE-OFF POWER AT 2700 RPM.
 SET BEFORE BRAKE RELEASE.
 FLAPS UP
 LANDING GEAR RETRACT AFTER LIFT-OFF.
 RUNWAY PAVED, LEVEL, DRY SURFACE.
 COWL FLAPS OPEN
 MIXTURE FULL RICH (ABOVE 5000 FT, SET TO
 75-100°F ON RICH SIDE OF PEAK EGT)

TAKE-OFF SPEEDS (ALL WEIGHTS)	
LIFT-OFF	71 KNOTS
50 FT	80 KNOTS

EXAMPLE:

OAT 15°C
 PRESSURE ALTITUDE SL
 TAKE-OFF WEIGHT 3350 LBS
 HEADWIND COMPONENT 10 KTS
 TOTAL DISTANCE OVER
 50-FT OBSTACLE 4700 FT
 GROUND ROLL 940 FT

- NOTE: 1. GROUND ROLL DISTANCE IS 20% OF TAKE-OFF DISTANCE OVER 50-FT OBSTACLE.
 2. DISTANCES ASSUME AN ENGINE FAILURE AT LIFT-OFF AND PROPELLER IMMEDIATELY FEATHERED.
 3. WEIGHTS IN SHADED AREA MAY NOT PROVIDE POSITIVE ONE-ENGINE-INOPERATIVE CLIMB. REFER TO TAKE-OFF WEIGHT GRAPH FOR MAXIMUM WEIGHT AT WHICH THE ACCELERATE-GO PROCEDURE SHOULD BE ATTEMPTED.

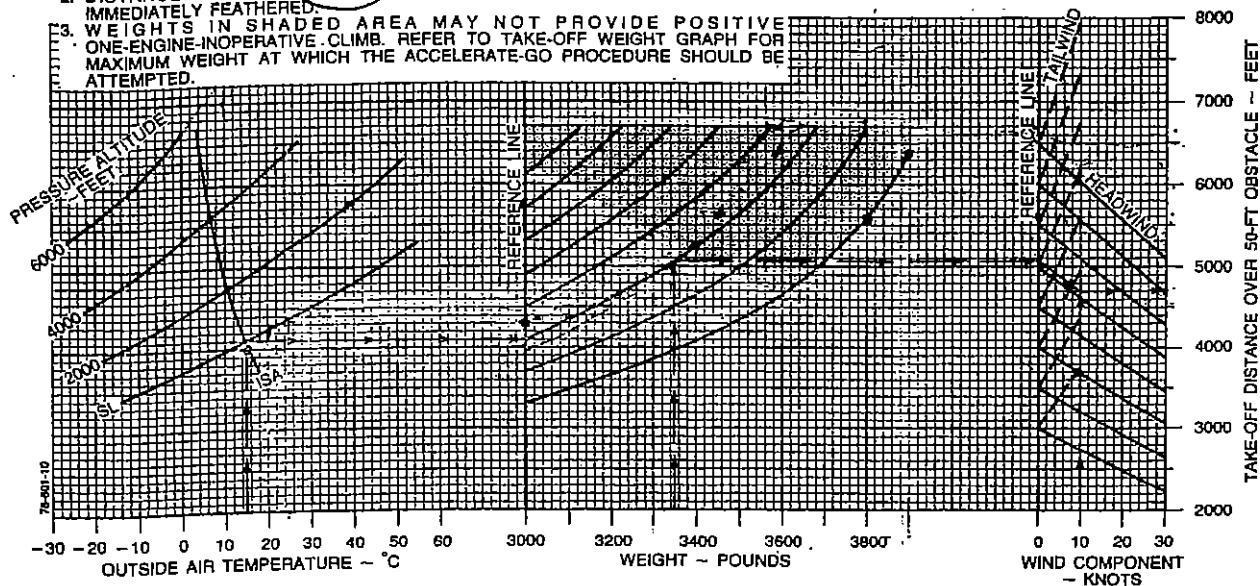

BEECHCRAFT
Duchess 76

Section V
Performance

CLIMB - TWO ENGINE


CLIMB SPEED 85 KNOTS (ALL WEIGHTS)

ASSOCIATED CONDITIONS:

POWER..... MAXIMUM CONTINUOUS AT 2700 RPM
 FLAPS..... UP
 LANDING GEAR..... UP
 COWL FLAPS..... OPEN
 MIXTURE..... FULL RICH (ABOVE 5000 FT LEAN TO
 75° - 100°F ON RICH SIDE OF PEAK EGT)

EXAMPLE:

OAT..... 10°C
 PRESSURE ALTITUDE..... 11,500 FT
 WEIGHT..... 3600 LBS
 RATE OF CLIMB..... 500 FT/MIN
 CLIMB GRADIENT..... 4.8%

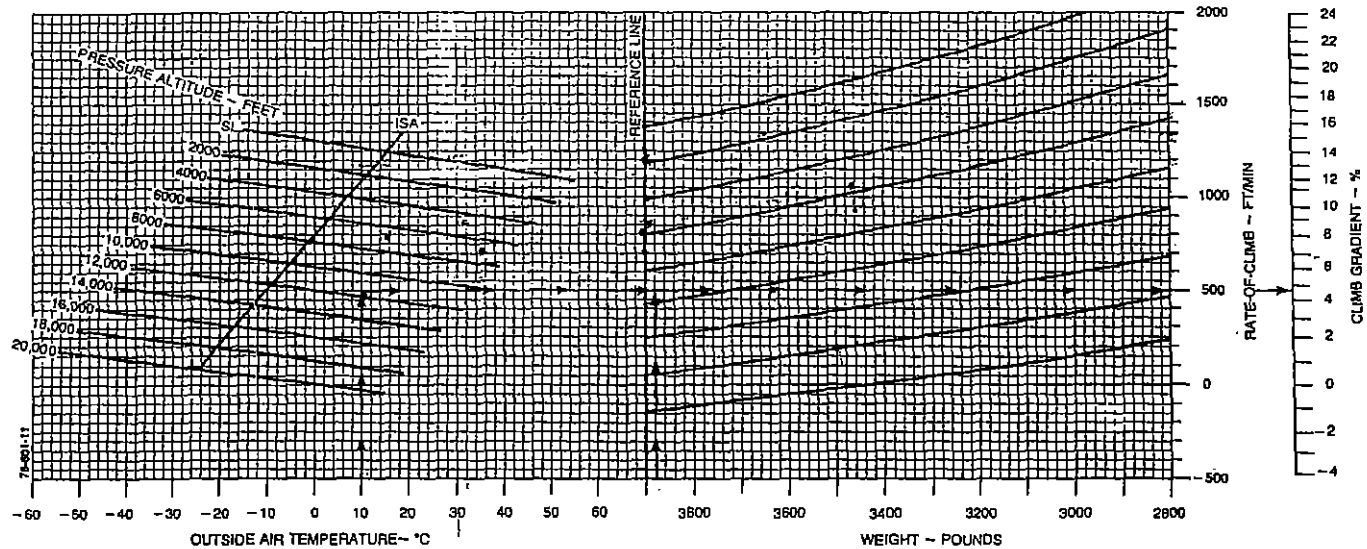

Section V
Performance

BEECHCRAFT
Duchess 76

September, 1983

5-31

TAKE-OFF CLIMB GRADIENT - ONE ENGINE INOPERATIVE


CLIMB SPEED 80 KNOTS (ALL WEIGHTS)

ASSOCIATED CONDITIONS:

POWER TAKE-OFF AT 2700 RPM
 LANDING GEAR UP
 FLAPS UP
 INOPERATIVE PROPELLER FEATHERED
 COWL FLAPS OPEN
 MIXTURE FULL RICH (ABOVE 5000 FT LEAN TO 75-100 F ON RICH SIDE OF PEAK EGT)

EXAMPLE:

OAT 15°C
 PRESSURE ALTITUDE SL
 WEIGHT 3350 LBS
 GRADIENT OF CLIMB 4.6%

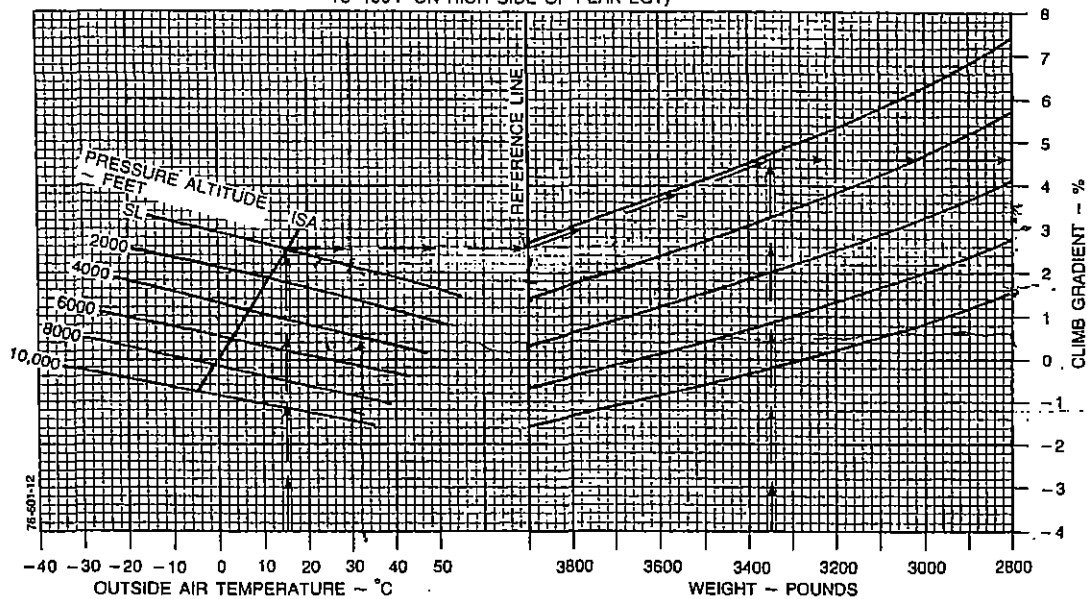

BEECHCRAFT
 Duchess 76

Section V
 Performance

TIME, FUEL, AND DISTANCE TO CLIMB

ASSOCIATED CONDITIONS:


POWER..... FULL THROTTLE AT
 2800 RPM
 FUEL DENSITY..... 6.0 LBS/GAL
 COWL FLAPS..... OPEN
 MIXTURE..... FULL RICH (ABOVE 5000 FT LEAN TO
 75° - 100°F ON RICH SIDE OF PEAK EGT)

CLIMB SPEED 100 KNOTS

EXAMPLE:

OAT AT TAKE-OFF..... 15°C
 OAT AT CRUISE..... -5°C
 AIRPORT PRESSURE ALTITUDE..... 5650 FT
 CRUISE PRESSURE ALTITUDE..... 11,500 FT
 INITIAL CLIMB WEIGHT..... 3900 LBS

TIME TO CLIMB..... 14 - 8 = 8 MINUTES
 FUEL TO CLIMB..... 5.1 - 2.8 = 3.3 GAL
 DISTANCE TO CLIMB..... 24 - 10 = 14 NM

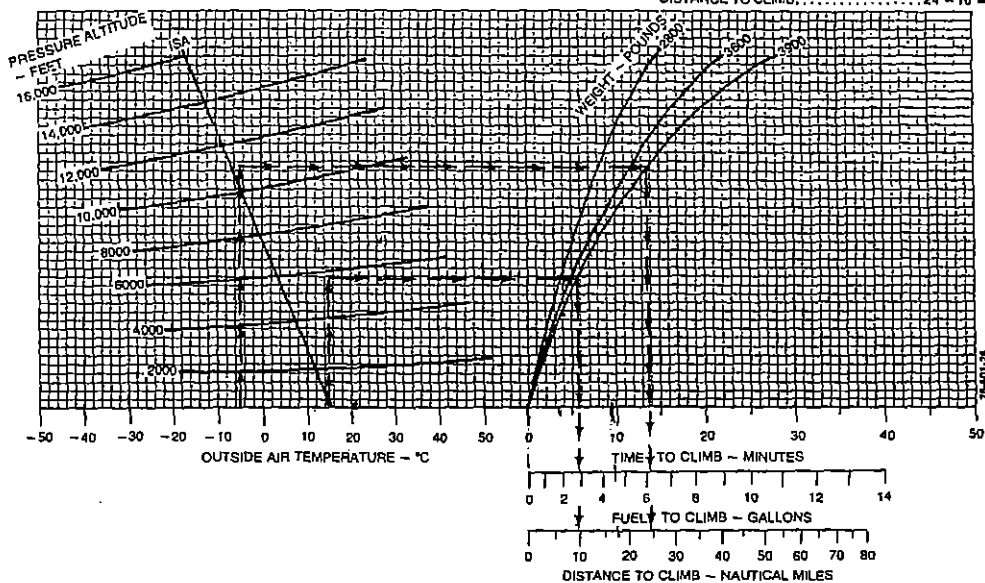

Section V
 Performance

BEECHCRAFT
 Duchess 76

January 1978

5-33


CLIMB - ONE ENGINE INOPERATIVE CLIMB SPEED 85 KNOTS (ALL WEIGHTS)

ASSOCIATED CONDITIONS:

POWER..... TAKE-OFF AT 2700 RPM
LANDING GEAR..... UP
FLAPS..... UP
INOPERATIVE PROPELLER - FEATHERED
COWL FLAPS..... OPEN
MIXTURE..... FULL RICH (ABOVE 5000 FT LEAN TO
75° - 100°F ON RICH SIDE OF PEAK EGT)

EXAMPLE:

OAT..... 25°C
PRESSURE ALTITUDE..... 3985 FT
WEIGHT..... 3877 LBS
RATE OF CLIMB..... 140 FT/MIN
CLIMB GRADIENT..... 1.5%
CLIMB SPEED..... 85 KTS

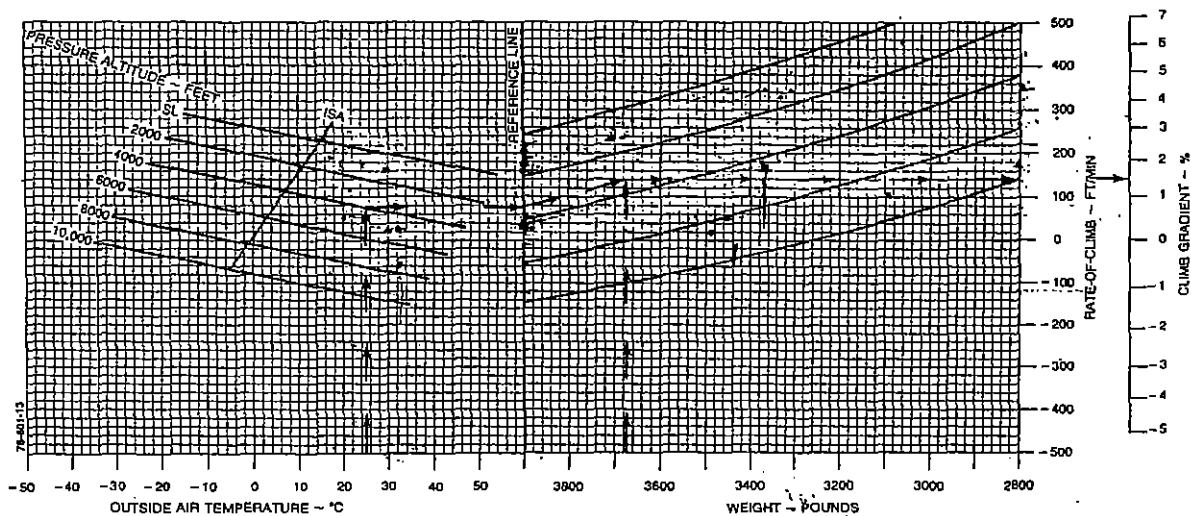

BEECHCRAFT
Duchess 76

Section V
Performance

Section V
Performance

BEECHCRAFT
Duchess 76

SERVICE CEILING - ONE ENGINE INOPERATIVE

CLIMB SPEED - 85 KNOTS (ALL WEIGHTS)

ASSOCIATED CONDITIONS:


POWER.....MAXIMUM
CONTINUOUS
AT 2700 RPM
FLAPS.....UP
LANDING GEAR.....UP
INOPERATIVE PROPELLER...FEATHERED

EXAMPLE:

OAT AT MEA.....-5°C
ROUTE SEGMENT MEA.....9700 FT

WEIGHT FOR SERVICE CEILING
AT ROUTE SEGMENT MEA....3480 LBS

NOTE: SERVICE CEILING IS ALTITUDE WHERE AIRPLANE HAS CAPABILITY
OF CLIMBING 50 FT/MIN WITH ONE PROPELLER FEATHERED.

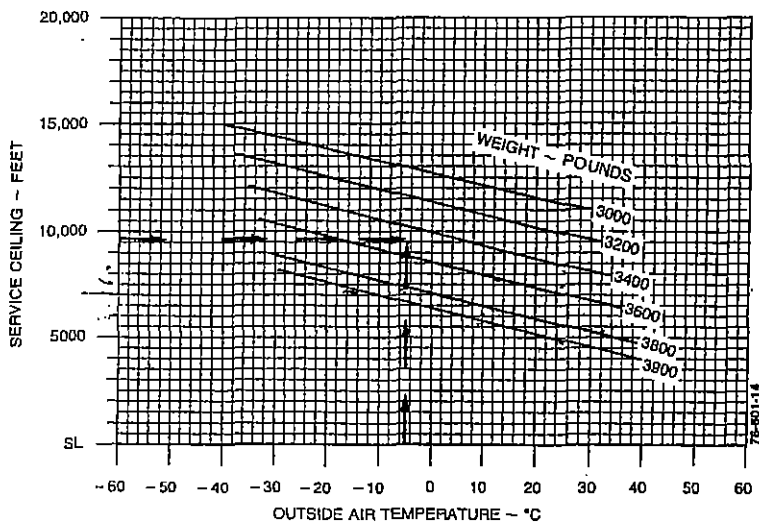

BEECHCRAFT
Duchess 76

Section V
Performance


CRUISE SPEEDS

ASSOCIATED CONDITIONS:

AVERAGE CRUISE WEIGHT . . . 3600 LBS
TEMPERATURE STD DAY (ISA)

EXAMPLE:

PRESSURE ALTITUDE . . 6000 FT
POWER SETTING 20 IN.HG/2300 RPM
TRUE AIRSPEED 139.5 KTS

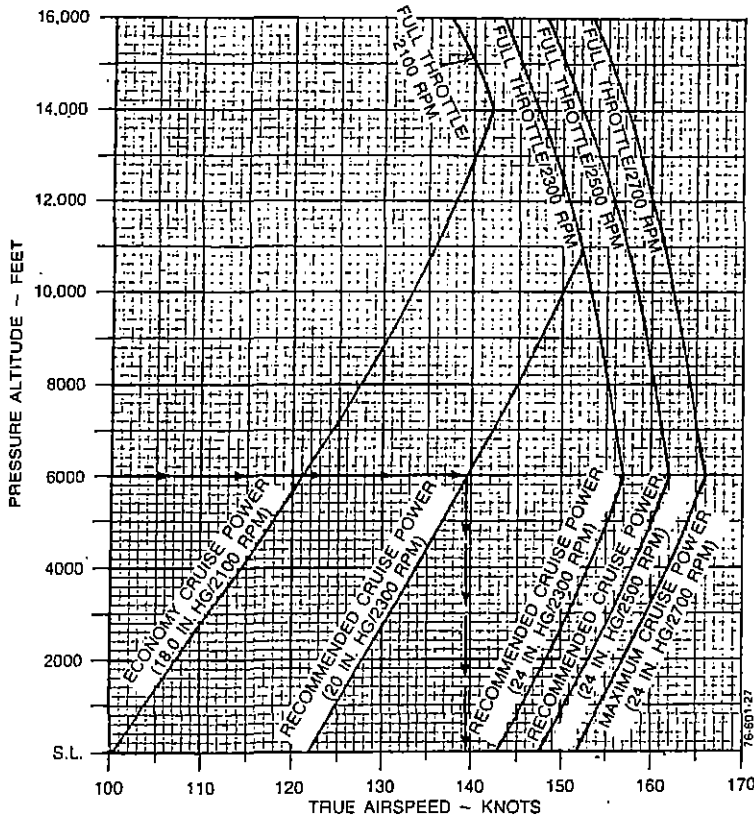

MAXIMUM CRUISE POWER - 24.0 IN. HG @ 2700 RPM (OR FULL THROTTLE)

PRESS ALT FEET	ISA - 20°C (-36°F)						STANDARD DAY (ISA)						ISA + 20°C (+36°F)								
	IOAT		MAN. PRESS	FUEL FLOW/ ENGINE		IAS	TAS	IOAT		MAN. PRESS	FUEL FLOW/ ENGINE		IAS	TAS	IOAT		MAN. PRESS	FUEL FLOW/ ENGINE		IAS	TAS
	°C	°F	IN.HG	PPH	GPH	KTS	KTS	°C	°F	IN.HG	PPH	GPH	KTS	KTS	°C	°F	IN.HG	PPH	GPH	KTS	KTS
SL	-3	27	24.0	67	11.1	156	151	17	63	24.0	65	10.8	152	152	37	99	24.0	62	10.3	148	153
1000	-5	23	24.0	68	11.3	156	153	15	59	24.0	65	10.8	152	155	35	95	24.0	63	10.5	148	156
2000	-7	19	24.0	68	11.3	156	155	13	55	24.0	66	11.0	152	157	33	91	24.0	63	10.5	148	158
3000	-9	16	24.0	69	11.5	156	158	11	52	24.0	66	11.0	152	159	31	88	24.0	64	10.7	148	161
4000	-11	12	24.0	69	11.5	157	160	9	48	24.0	67	11.2	153	162	30	86	24.0	65	10.8	149	163
5000	-12	10	24.0	70	11.7	157	163	8	46	24.0	68	11.3	153	164	28	82	24.0	65	10.8	148	165
6000	-14	7	23.5	70	11.7	156	164	6	43	23.5	68	11.3	152	166	26	79	23.5	65	10.8	148	167
7000	-16	3	22.6	68	11.3	153	164	4	39	22.6	65	10.8	149	165	24	75	22.6	63	10.5	145	166
8000	-18	0	21.8	65	10.8	150	163	2	36	21.8	63	10.5	146	164	22	72	21.8	61	10.2	142	165
9000	-20	-4	20.9	63	10.5	147	162	0	32	20.9	61	10.2	143	163	20	68	20.9	59	9.8	139	164
10,000	-22	-8	20.2	61	10.2	144	161	-2	28	20.2	59	9.8	140	162	18	64	20.2	57	9.5	135	163
11,000	-24	-11	19.4	59	9.8	141	160	-4	25	19.4	57	9.5	136	161	16	61	19.4	55	9.2	132	162
12,000	-26	-15	18.6	56	9.3	138	159	-6	21	18.6	54	9.0	133	160	14	57	18.6	53	8.8	129	161
13,000	-28	-18	17.9	54	9.0	134	157	-8	18	17.9	52	8.7	130	158	12	54	17.9	50	8.3	126	159
14,000	-31	-24	17.2	52	8.7	131	156	-10	14	17.2	50	8.3	127	157	10	50	17.2	48	8.0	122	157
15,000	-33	-27	16.6	50	8.3	127	154	-12	10	16.6	48	8.0	123	155	8	46	16.6	47	7.8	119	155
16,000	-35	-31	15.9	48	8.0	124	152	-15	5	15.9	46	7.7	120	153	6	43	15.9	45	7.5	115	153

- NOTES: 1. Full throttle manifold pressure settings are approximate.
2. Shaded area represents operation with full throttle.
3. Lean to 25° - 50°F on rich side of peak EGT.
4. Cruise speeds are presented at an average weight of 3600 lbs.

Section V
Performance

BEECHCRAFT
Duchess 76

January 1978

RECOMMENDED CRUISE POWER - 24.0 IN. HG @ 2500 RPM (OR FULL THROTTLE)

PRESS ALT FEET	ISA - 20°C (-36°F)							STANDARD DAY (ISA)							ISA + 20°C (+36°F)						
	IOAT		MAN. PRESS	FUEL FLOW/ ENGINE		IAS	TAS	IOAT		MAN. PRESS	FUEL FLOW/ ENGINE		IAS	TAS	IOAT		MAN. PRESS	FUEL FLOW/ ENGINE		IAS	TAS
	°C	°F	IN.HG	PPH	GPH	KTS	KTS	°C	°F	IN.HG	PPH	GPH	KTS	KTS	°C	°F	IN.HG	PPH	GPH	KTS	KTS
SL	-3	27	24.0	61	10.2	152	147	17	63	24.0	59	9.8	148	148	37	99	24.0	57	9.5	144	149
1000	-5	23	24.0	62	10.3	152	149	15	59	24.0	60	10.0	148	151	35	95	24.0	58	9.7	144	151
2000	-7	19	24.0	63	10.5	153	152	13	55	24.0	61	10.2	148	153	33	91	24.0	58	9.7	144	154
3000	-9	16	24.0	64	10.7	153	154	11	52	24.0	61	10.2	149	155	31	88	24.0	59	9.8	144	156
4000	-11	12	24.0	64	10.7	153	156	9	48	24.0	62	10.3	149	158	29	84	24.0	60	10.0	144	159
5000	-13	9	24.0	65	10.8	153	159	7	45	24.0	63	10.5	149	160	28	82	24.0	61	10.2	144	161
6000	-15	5	23.6	66	11.0	153	161	6	43	23.6	63	10.5	148	162	26	79	23.6	61	10.2	144	163
7000	-17	1	22.7	63	10.5	150	160	4	39	22.7	61	10.2	145	161	24	75	22.7	59	9.8	141	162
8000	-19	-2	21.9	61	10.2	146	159	2	36	21.9	59	9.8	142	160	22	72	21.9	57	9.5	138	161
9000	-21	-6	21.0	59	9.8	143	158	0	32	21.0	57	9.5	139	159	20	68	21.0	55	9.2	135	160
10,000	-23	-9	20.2	57	9.5	140	157	-3	27	20.2	55	9.2	136	158	18	64	20.2	53	8.8	132	159
11,000	-25	-13	19.4	55	9.2	137	156	-5	23	19.4	53	8.8	133	157	16	61	19.4	51	8.5	129	158
12,000	-27	-17	18.7	53	8.8	134	155	-7	19	18.7	51	8.5	130	156	14	57	18.7	49	8.2	125	156
13,000	-29	-20	18.0	51	8.5	131	153	-9	16	18.0	49	8.2	126	154	11	52	18.0	47	7.8	122	155
14,000	-31	-24	17.3	49	8.2	127	152	-11	12	17.3	47	7.8	123	152	9	48	17.3	45	7.5	118	153
15,000	-33	-27	16.6	47	7.8	124	150	-13	9	16.6	45	7.5	120	151	7	45	16.6	44	7.3	115	151
16,000	-35	-31	16.0	45	7.5	121	148	-15	5	16.0	43	7.2	116	148	5	41	16.0	42	7.0	111	148

- NOTES: 1. Full throttle manifold pressure settings are approximate.
 2. Shaded area represents operation with full throttle.
 3. Lean to 25° - 50°F on rich side of peak EGT.
 4. Cruise speeds are presented at an average weight of 3600 lbs.

BEECHCRAFT
Duchess 76Section V
Performance

RECOMMENDED CRUISE POWER - 24.0 IN. HG @ 2300 RPM (OR FULL THROTTLE)

PRESS ALT FEET	ISA - 20°C (-36°F)							STANDARD DAY (ISA)							ISA + 20°C (+36°F)						
	IOAT		MAN. PRESS	FUEL FLOW/ ENGINE		IAS	TAS	IOAT		MAN. PRESS	FUEL FLOW/ ENGINE		IAS	TAS	IOAT		MAN. PRESS	FUEL FLOW/ ENGINE		IAS	TAS
	°C	°F	IN.HG	PPH	GPH	KTS	KTS	°C	°F	IN.HG	PPH	GPH	KTS	KTS	°C	°F	IN.HG	PPH	GPH	KTS	KTS
SL	-3	27	24.0	55	9.2	147	142	17	63	24.0	53	8.8	143	143	37	99	24.0	51	8.5	139	144
1000	-5	23	24.0	56	9.3	147	144	15	59	24.0	54	9.0	143	145	35	95	24.0	52	8.7	139	146
2000	-7	19	24.0	57	9.5	148	147	13	55	24.0	55	9.2	143	148	33	91	24.0	53	8.8	139	149
3000	-9	16	24.0	58	9.7	148	149	11	52	24.0	56	9.3	144	150	31	88	24.0	54	9.0	139	151
4000	-11	12	24.0	59	9.8	148	152	9	48	24.0	57	9.5	144	153	29	84	24.0	55	9.2	140	153
5000	-13	9	24.0	60	10.0	148	154	7	45	24.0	58	9.7	144	155	27	81	24.0	56	9.3	140	156
6000	-15	5	23.7	61	10.2	148	156	5	41	23.7	59	9.8	144	157	25	77	23.7	57	9.5	140	158
7000	-17	1	22.8	59	9.8	145	155	3	37	22.8	57	9.5	141	156	23	73	22.8	55	9.2	137	157
8000	-19	-2	21.9	57	9.5	142	154	1	34	21.9	55	9.2	138	155	21	70	21.9	53	8.8	134	156
9000	-21	-6	21.1	55	9.2	139	153	-1	30	21.1	53	8.8	135	154	19	66	21.1	51	8.5	131	155
10,000	-23	-9	20.3	53	8.8	136	152	-3	27	20.3	51	8.5	132	153	17	63	20.3	49	8.2	127	154
11,000	-25	-13	19.5	51	8.5	133	151	-5	23	19.5	49	8.2	129	152	15	59	19.5	47	7.8	124	152
12,000	-27	-17	18.8	49	8.2	130	150	-7	19	18.8	47	7.8	125	151	13	55	18.8	46	7.7	121	151
13,000	-29	-20	18.0	47	7.8	127	148	-9	16	18.0	46	7.7	122	149	11	52	18.0	44	7.3	117	149
14,000	-31	-24	17.3	45	7.5	123	147	-11	12	17.3	44	7.3	119	147	9	48	17.3	42	7.0	114	147
15,000	-33	-27	16.7	44	7.3	120	145	-13	9	16.7	42	7.0	115	145	7	45	16.7	41	6.8	110	144
16,000	-35	-31	16.0	42	7.0	116	143	-15	5	16.0	40	6.7	111	143	5	41	16.0	39	6.5	106	142

- NOTES: 1. Full throttle manifold pressure settings are approximate.
 2. Shaded area represents operation with full throttle.
 3. Lean to 25° - 50°F on rich side of peak EGT.
 4. Cruise speeds are presented at an average weight of 3600 lbs.

Section V
Performance

BEECHCRAFT
Duchess 76

January 1978

January 1982

RECOMMENDED CRUISE POWER - 20.0 IN. HG @ 2300 RPM (OR FULL THROTTLE)

PRESS ALT.	ISA -20°C (-36°F)							STANDARD DAY (ISA)							ISA +20°C (+36°F)						
	IOAT		MAN. PRESS.	FUEL FLOW/ ENGINE		IAS	TAS	IOAT		MAN. PRESS.	FUEL FLOW/ ENGINE		IAS	TAS	IOAT		MAN. PRESS.	FUEL FLOW/ ENGINE		IAS	TAS
	°C	°F	IN.HG	PPH	GPH	KTS	KTS	°C	°F	IN.HG	PPH	GPH	KTS	KTS	°C	°F	IN.HG	PPH	GPH	KTS	KTS
SL	-4	25	20.0	41	6.8	127	122	16	61	20.0	40	6.7	123	123	36	97	20.0	38	6.3	119	123
1000	-6	21	20.0	42	7.0	128	125	14	57	20.0	41	6.8	124	126	34	93	20.0	39	6.5	120	126
2000	-7	19	20.0	43	7.2	129	128	13	55	20.0	42	7.0	125	129	33	91	20.0	40	6.7	121	129
3000	-9	16	20.0	44	7.3	130	131	11	52	20.0	42	7.0	126	132	31	88	20.0	41	6.8	122	132
4000	-11	12	20.0	45	7.5	131	134	9	48	20.0	43	7.2	127	135	29	84	20.0	42	7.0	122	135
5000	-13	9	20.0	46	7.7	131	136	7	45	20.0	44	7.3	127	137	27	81	20.0	43	7.2	123	137
6000	-15	5	20.0	47	7.8	132	139	5	41	20.0	45	7.5	128	140	25	77	20.0	44	7.3	124	140
7000	-17	1	20.0	48	8.0	133	142	3	37	20.0	46	7.7	128	143	23	73	20.0	45	7.5	124	143
8000	-19	-2	20.0	49	8.2	133	145	1	34	20.0	47	7.8	129	145	21	70	20.0	46	7.7	125	146
9000	-21	-6	20.0	50	8.3	134	147	-1	30	20.0	48	8.0	129	148	19	66	20.0	47	7.8	125	149
10,000	-23	-9	20.0	51	8.5	134	150	-3	27	20.0	49	8.2	130	151	17	63	20.0	48	8.0	125	151
11,000	-25	-13	19.5	51	8.5	133	151	-5	23	19.5	49	8.2	129	152	15	59	19.5	47	7.8	124	152
12,000	-27	-17	18.8	49	8.2	130	150	-7	19	18.8	47	7.8	125	151	13	55	18.8	46	7.7	121	151
13,000	-29	-20	18.0	47	7.8	127	148	-9	16	18.0	46	7.7	122	149	11	52	18.0	44	7.3	117	149
14,000	-31	-24	17.3	45	7.5	123	147	-11	12	17.3	44	7.3	119	147	9	48	17.3	42	7.0	114	147
15,000	-33	-27	16.7	44	7.3	120	145	-13	9	16.7	42	7.0	115	145	7	45	16.7	41	6.8	110	144
16,000	-35	-31	16.0	42	7.0	116	143	-15	5	16.0	40	6.7	111	143	5	41	16.0	39	6.5	106	142

- NOTES: 1. Full throttle manifold pressure settings are approximate.
 2. Shaded area represents operation with full throttle.
 3. Lean to 25° - 50°F on rich side of peak EGT.
 4. Cruise speeds are presented at an average weight of 3600 lbs.

5-39

BEECHCRAFT
Duchess 76Section V
Performance

ECONOMY CRUISE POWER - 18.0 IN. HG @ 2100 RPM (OR FULL THROTTLE)

5-40

January 1982

PRESS ALT	ISA -20°C (-36°F)							STANDARD DAY (ISA)							ISA +20°C (+36°F)						
	IOAT		MAN. PRESS.	FUEL FLOW/ ENG		IAS	TAS	IOAT		MAN. PRESS.	FUEL FLOW/ ENG		IAS	TAS	IOAT		MAN. PRESS.	FUEL FLOW/ ENG		IAS	TAS
	°C	°F		IN.HG	PPH			GPH	KTS		KTS	°C			°F	IN.HG		PPH	GPH		
FEET	°C	°F	IN.HG	PPH	GPH	KTS	KTS	°C	°F	IN.HG	PPH	GPH	KTS	KTS	°C	°F	IN.HG	PPH	GPH	KTS	KTS
SL	-4	25	18.0	29	4.8	104	101	16	61	18.0	28	4.7	99	100	36	97	18.0	27	4.5	96	98
1000	-6	21	18.0	30	5.0	106	105	14	57	18.0	29	4.8	101	104	34	93	18.0	28	4.7	95	102
2000	-8	18	18.0	31	5.2	107	108	12	54	18.0	30	5.0	103	107	32	90	18.0	29	4.8	98	106
3000	-10	14	18.0	32	5.3	109	112	10	50	18.0	31	5.2	105	111	30	86	18.0	30	5.0	101	110
4000	-12	11	18.0	34	5.7	111	115	8	47	18.0	32	5.3	107	115	28	83	18.0	31	5.2	103	113
5000	-14	8	18.0	35	5.8	112	119	6	43	18.0	33	5.5	108	118	26	79	18.0	32	5.3	103	117
6000	-16	4	18.0	36	6.0	113	121	5	40	18.0	35	5.8	109	121	25	76	18.0	33	5.5	105	120
7000	-17	1	18.0	37	6.2	115	125	3	37	18.0	36	6.0	110	124	23	73	18.0	34	5.7	106	124
8000	-19	-3	18.0	38	6.3	116	128	1	33	18.0	37	6.2	111	127	21	69	18.0	35	5.8	106	127
9000	-21	-6	18.0	39	6.5	117	131	-1	30	18.0	38	6.3	112	130	19	66	18.0	36	6.0	108	130
10,000	-23	-10	18.0	40	6.7	117	134	-3	26	18.0	39	6.5	113	134	17	62	18.0	37	6.2	108	133
11,000	-25	-13	18.0	41	6.8	117	136	-5	23	18.0	39	6.5	113	136	15	59	18.0	38	6.3	108	135
12,000	-27	-17	18.0	41	6.8	117	138	-7	19	18.0	40	6.7	113	138	13	55	18.0	38	6.3	108	137
13,000	-29	-20	18.0	42	7.0	117	140	-9	16	18.0	41	6.8	113	140	11	52	18.0	39	6.6	108	139
14,000	-31	-24	17.3	43	7.2	117	142	-11	12	17.3	41	6.8	112	142	9	48	17.3	40	6.7	108	141
15,000	-33	-27	16.5	41	6.8	114	140	-13	9	16.5	40	6.7	109	140	7	45	16.5	38	6.3	105	138
16,000	-35	-31	15.8	39	6.5	110	138	-15	5	15.8	38	6.3	106	137	5	41	15.8	37	6.2	101	135

Section V
Performance

BEECHCRAFT
Duchess 76

- NOTES: 1. Full throttle manifold pressure settings are approximate.
2. Shaded area represents operation with full throttle.
3. Lean to 25° - 50°F on rich side of peak EGT.
4. Cruise speeds are presented at an average weight of 3600 lbs.

**BEECHCRAFT
Duchess 76**

**Section V
Performance**

INTENTIONALLY LEFT BLANK

January 1982

5-40A


RANGE PROFILE - 100 GALLONS STANDARD DAY (ISA)

ASSOCIATED CONDITIONS:

WEIGHT 3916 LBS BEFORE ENGINE START
 FUEL AVIATION GASOLINE
 FUEL DENSITY 6.0 LBS/GAL
 INITIAL FUEL LOADING 100 US GAL (600 LBS)
 COWL FLAPS CLOSED
 MIXTURE LEANED TO 25°-50°F ON RICH
 SIDE OF PEAK EGT

EXAMPLE:

PRESSURE ALTITUDE 11,500 FT
 POWER SETTING FT/2500 RPM
 RANGE 737 NM

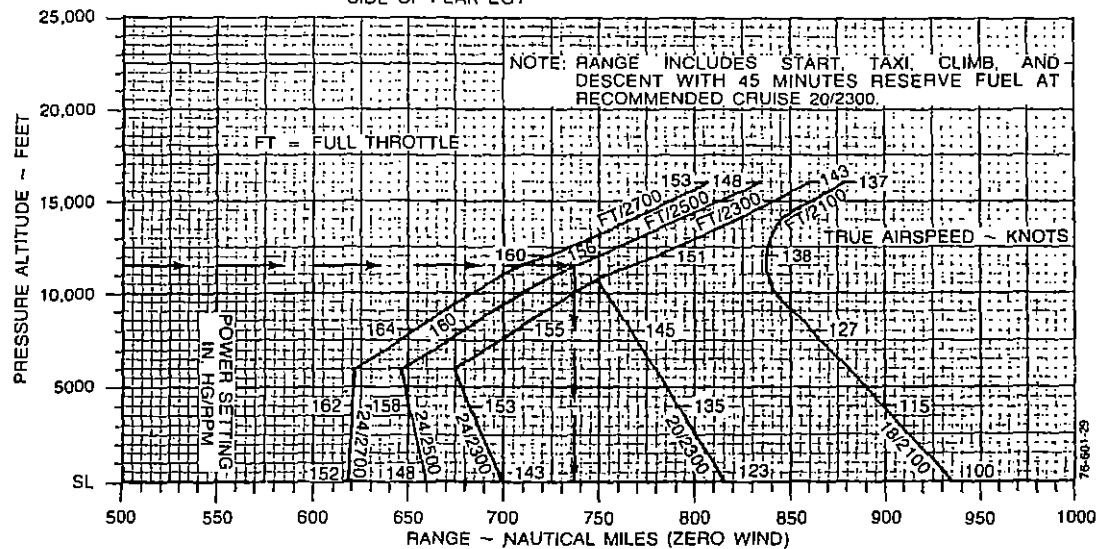

January 1982

5-41


ENDURANCE PROFILE - 100 GALLONS STANDARD DAY (ISA)

ASSOCIATED CONDITIONS:

WEIGHT 3916 LBS BEFORE ENGINE START
FUEL AVIATION GASOLINE
FUEL DENSITY 6.0 LBS/GAL
INITIAL FUEL LOADING 100 US GAL (600 LBS)
COWL FLAPS CLOSED
MIXTURE LEANED TO 25°-50°F ON
RICH SIDE OF PEAK EGT

EXAMPLE:

PRESSURE ALTITUDE 11,500 FT
POWER SETTING FT/2500
ENDURANCE 4.8 HRS

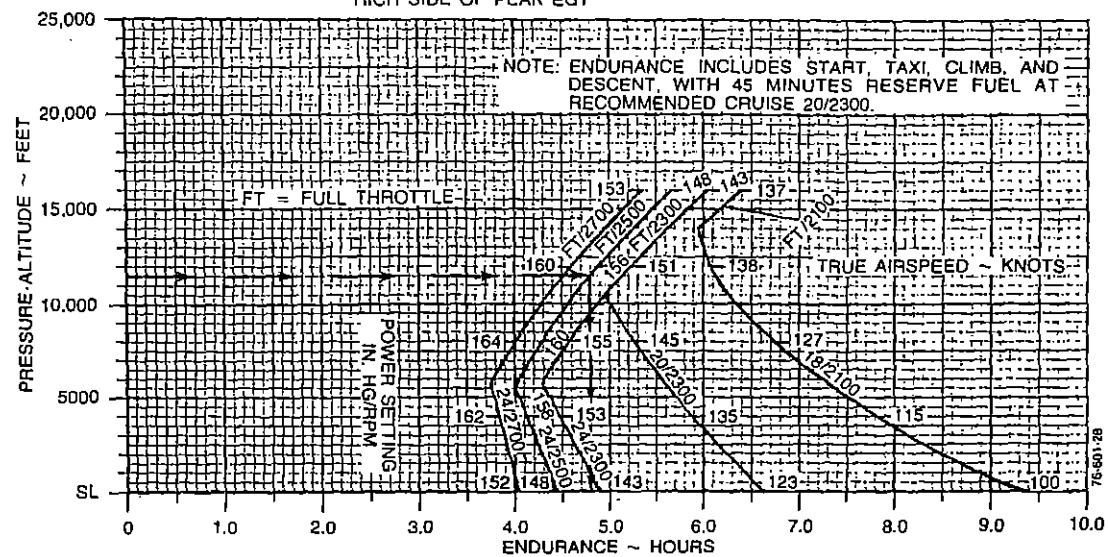

BEECHCRAFT
Duchess 76

Section V
Performance

HOLDING TIME


APPLICABLE FOR ALL TEMPERATURES

ASSOCIATED CONDITIONS:

POWER SETTING 20 IN. HG OR FULL THROTTLE
 2300 RPM
 MIXTURE FULL RICH (ABOVE 5000 FT LEAN
 TO 75° - 100°F ON RICH SIDE
 OF PEAK EGT)

EXAMPLE:

FUEL AVAILABLE
 FOR HOLDING 50 GALLONS
 PRESSURE ALTITUDE 6000 FEET
 HOLDING TIME 3.3 HOURS

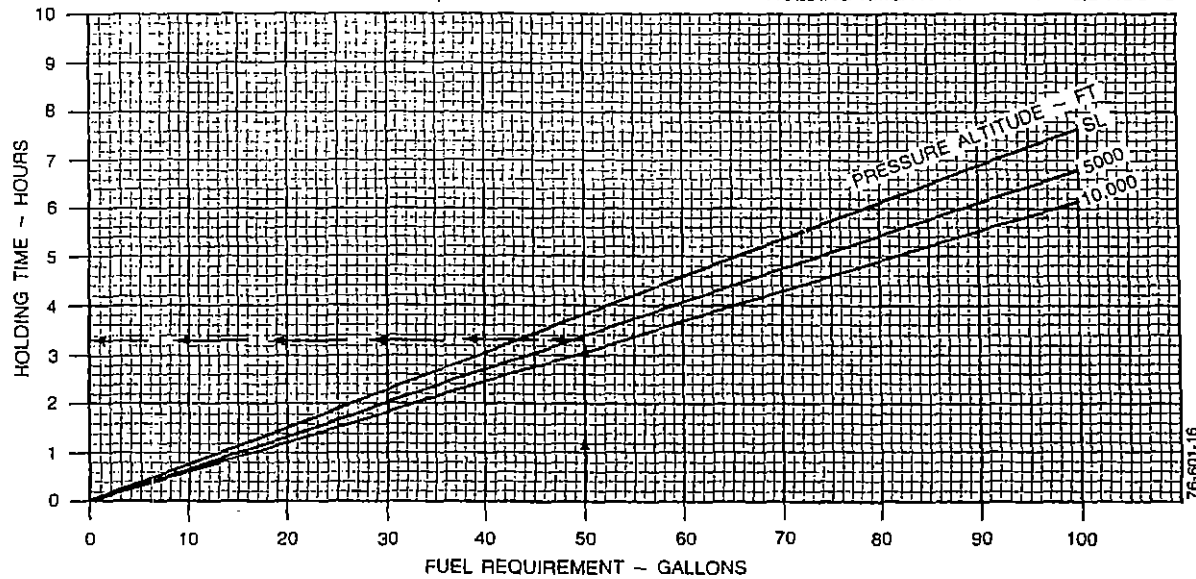

**BEECHCRAFT
Duchess 76**

**Section V
Performance**

TIME, FUEL, AND DISTANCE TO DESCEND


DESCENT SPEED - 170 KNOTS

ASSOCIATED CONDITIONS:

POWER..... AS REQUIRED TO MAINTAIN
1000 FT/MIN RATE OF DESCENT
LANDING GEAR..... UP
FLAPS..... UP
MIXTURE..... FULL RICH (ABOVE 5000 FT LEAN TO
75° - 100°F ON RICH SIDE OF PEAK EGT)

EXAMPLE:

INITIAL ALTITUDE..... 11,500 FT
FINAL ALTITUDE..... 3965 FT
TIME TO DESCEND..... $10 - 4 = 8$ MINUTES
FUEL TO DESCEND..... $3.4 - 1.3 = 2.1$ GAL
DISTANCE TO DESCEND..... $32 - 11 = 21$ NM

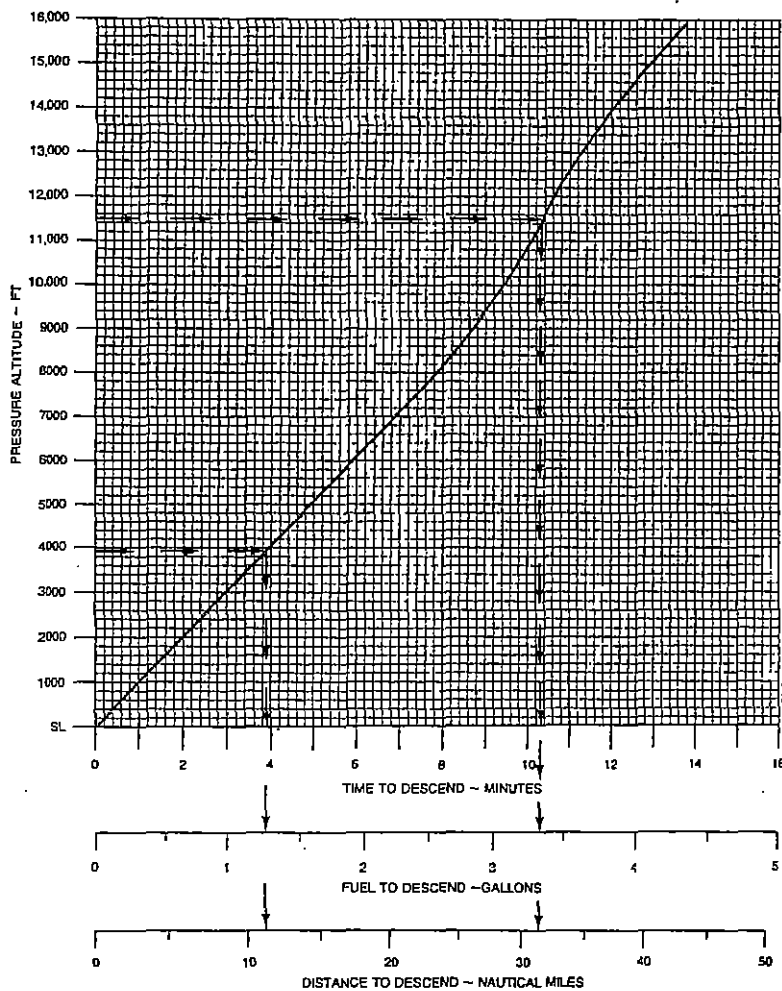

ASSOCIATED CONDITIONS:


POWER TAKE-OFF AT 2700 RPM
 FLAPS DOWN (DN)
 LANDING GEAR DOWN
 MIXTURE FULL RICH (ABOVE 5000 FT
 LEAN TO 75° - 100°F ON RICH
 SIDE OF PEAK EGT)

CLIMB - BALKED LANDING

CLIMB SPEED 71 KNOTS (ALL WEIGHTS)

EXAMPLE:

OAT 25°C
 PRESSURE ALTITUDE 3965 FT
 WEIGHT 3677 LBS
 RATE OF CLIMB 610 FT/MIN
 CLIMB GRADIENT 8%

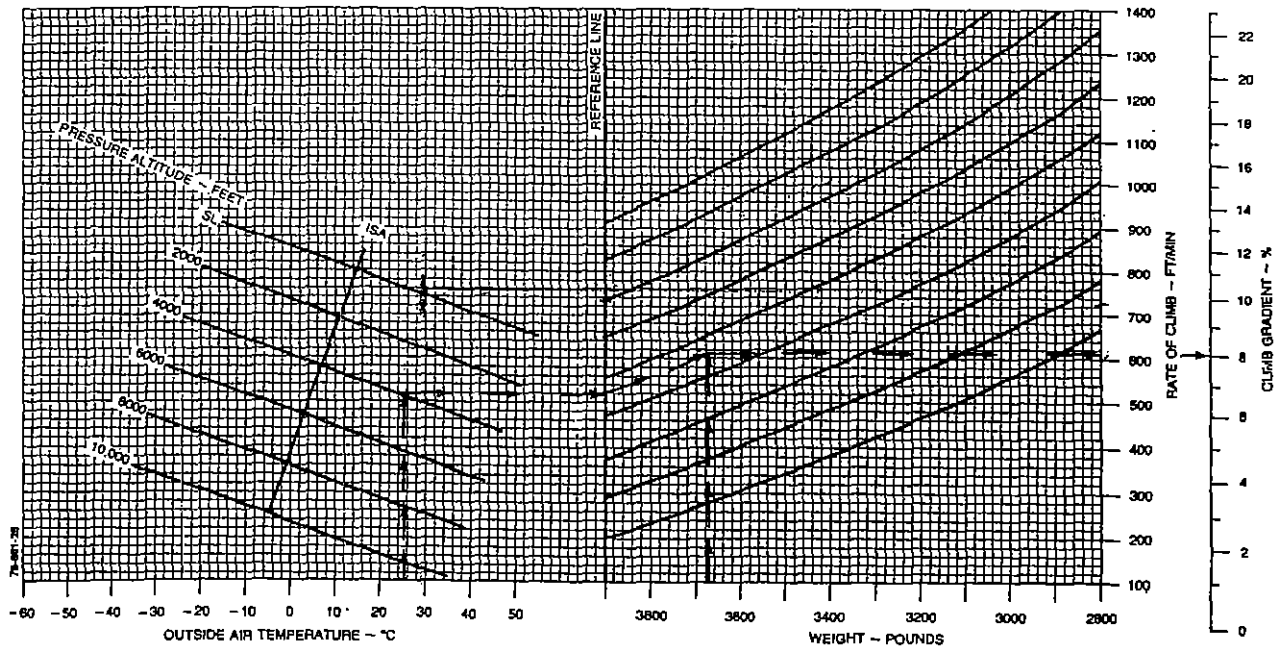

Section V
Performance

BEECHCRAFT
Duchess 76

January 1978

5-45

LANDING DISTANCE - FLAPS DOWN (DN)


APPROACH SPEED 76 KNOTS (ALL WEIGHTS)

ASSOCIATED CONDITIONS:

POWER..... RETARD TO MAINTAIN 600 FT/MIN
ON FINAL APPROACH
FLAPS..... DOWN (DN)
LANDING GEAR..... DOWN
RUNWAY..... PAVED, LEVEL, DRY SURFACE
APPROACH SPEED... 76 KNOTS IAS
BRAKING..... MAXIMUM

EXAMPLE:

OAT..... 25°C
PRESSURE ALTITUDE..... 3085 FT
HEADWIND COMPONENT..... 9.5 KTS
GROUND ROLL..... 1050 FT
TOTAL OVER 50 FT OBSTACLE..... 1970 FT
APPROACH SPEED..... 76 KTS

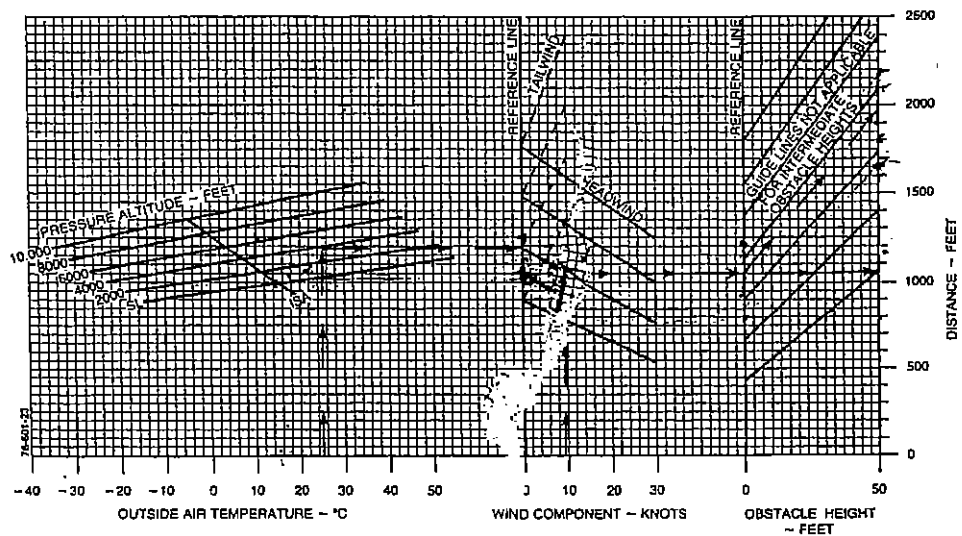

BEECHCRAFT
Duchess 76

Section V
Performance

Section V
Performance

BEECHCRAFT
Duchess 76

LANDING DISTANCE - FLAPS UP
APPROACH SPEED 87 KNOTS (ALL WEIGHTS)


ASSOCIATED CONDITIONS:

POWER.....RETARD TO MAINTAIN
600 FT/MIN ON FINAL
APPROACH
FLAPS.....UP
LANDING GEAR.....DOWN
RUNWAY.....PAVED, LEVEL,
DRY SURFACE
APPROACH SPEED.....87 KNOTS IAS
BRAKING.....MAXIMUM

EXAMPLE:

FLAPS DN LANDING
DISTANCE OVER
50 FT OBSTACLE1970 FT
FLAPS UP LANDING
DISTANCE OVER
50 FT OBSTACLE.....2700 FT
APPROACH SPEED.....87 KTS

- NOTE: 1. LANDING WITH FLAPS FULL DOWN IS NORMAL PROCEDURE. USE THIS GRAPH WHEN IT IS NECESSARY TO LAND WITH FLAPS UP.
2. TO DETERMINE FLAPS UP LANDING DISTANCE, READ FROM THE LANDING DISTANCE - FLAPS DOWN GRAPH, THE LANDING DISTANCE APPROPRIATE TO OAT, ALTITUDE, WIND, AND 50 FT OBSTACLE. ENTER THIS GRAPH WITH DERIVED AND READ FLAPS UP LANDING DISTANCE.

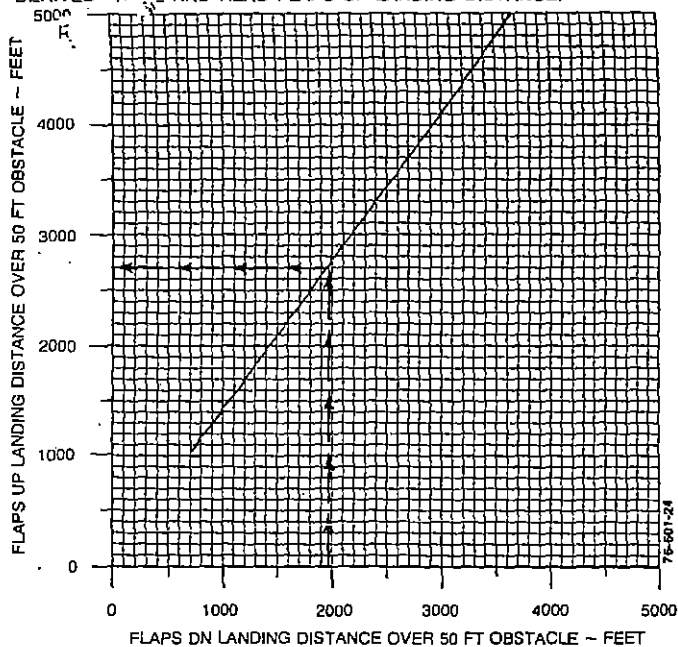

August, 1980

5-47

LANDING DISTANCE - GRASS SURFACE - FLAPS DOWN (DN)


APPROACH SPEED 76 KTS (ALL WEIGHTS)

ASSOCIATED CONDITIONS:

POWER RETARD TO MAINTAIN 600 FT/MIN
ON FINAL APPROACH
FLAPS DOWN (DN)
LANDING GEAR .. DOWN
RUNWAY SHORT, DRY, GRASS
APPROACH
SPEED 76 KTS
BRAKING MAXIMUM

EXAMPLE:

OAT 25°C
PRESSURE ALTITUDE 3965 FT
HEADWIND COMPONENT 9.5 KTS
GROUND ROLL 1250 FT
TOTAL OVER 50 FT OBSTACLE 2150 FT
APPROACH SPEED 76 KTS

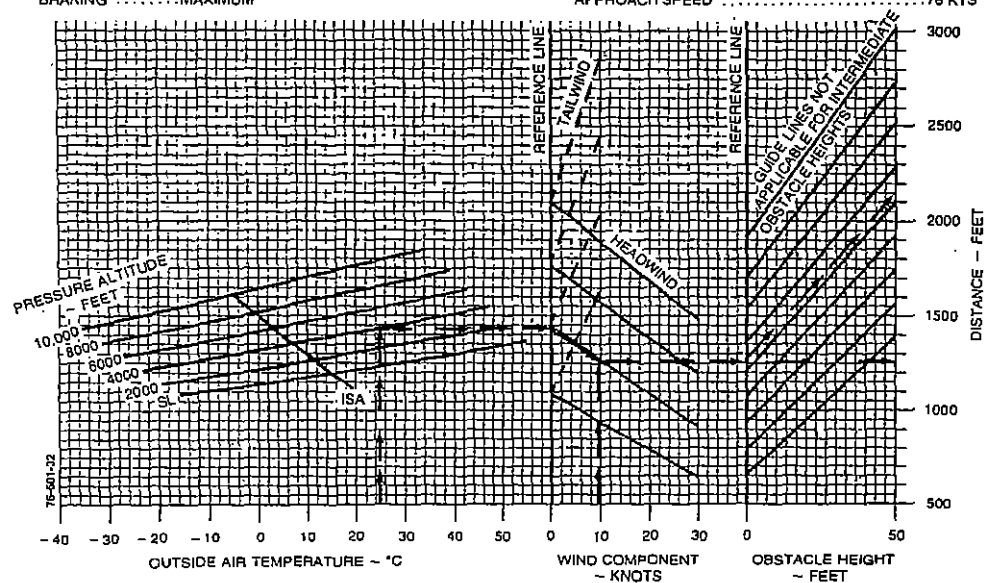

BEECHCRAFT
Duchess 76

Section V
Performance

BEECHCRAFT
Duchess 76

SECTION VI

WEIGHT AND BALANCE/ EQUIPMENT LIST

TABLE OF CONTENTS

<i>SUBJECT</i>	<i>PAGE</i>
Airplane Weighing Procedure	6-3
Basic Empty Weight and Balance Form.....	6-7
Loading Instructions	6-8
Weight and Balance Record	6-9
Moment Limits vs Weight Graph	6-12
Moment Limits vs Weight Table.....	6-13
Computing Procedure	6-14
Sample Weight and Balance Loading Form.....	6-15
Weight and Balance Loading Form	6-16
Useful Load Data	
Occupants	6-17
Baggage	6-18
Usable Fuel	6-19

Airplane Papers (furnished with individual airplane)

Section VI
Wt & Bal/Equip List

BEECHCRAFT
Duchess 76

INTENTIONALLY LEFT BLANK

AIRPLANE WEIGHING PROCEDURE

Periodic weighing of the airplane may be required to keep the basic empty weight current. Frequency of weighing is to be determined by the operator. All changes to the airplane affecting weight and/or balance are the responsibility of the airplane operator.

1. The airplane may be weighed on wheels or on weighing points. Two weighing points are provided on the wing main spar at F.S. 129.37, and one on the lower aft fuselage tail skid aft attach point at F.S. 278.61.

2. Fuel is normally drained preparatory to a weighing from the regular drain ports while the airplane is in static ground attitude. When tanks are drained, 1.6 pounds of undrainable fuel remain in the airplane at F.S. 124.8. The remainder of the unusable fuel to be added to a drained system is 18.0 pounds at F.S. 123.0. If the airplane is weighed with fuel tanks topped off full, the fuel specific weight (pounds/gallon) should be determined by using a hydrometer. Compute total fuel weight by multiplying measured specific weight by 100 gallons. Fuel moment is determined by interpolation from fuel table.

3. Engine oil is to be at the full level as indicated by the dipstick. Total engine oil aboard when engines and systems are full is 37 pounds at F.S. 75.4.

4. To determine airplane configuration at time of weighing, installed equipment is checked against the airplane equipment list or superseding forms. All equipment must be in its proper place during weighing.

5. The airplane weighing is performed with landing gear down, control surfaces in neutral position and doors closed.

Section VI
Wt & Bal/Equip List

BEECHCRAFT
Duchess 76

6. The airplane is placed on the scales in level attitude. Leveling is accomplished with a spirit level on the aft baggage compartment floor. Leveling while on weighing points may require the nose gear shock strut to be secured in the static position to prevent its extension. Wheel weighings can be leveled by deflating the nose gear shock strut and/or tire.

7. Measurement of the reaction arms for a wheel weighing is made using the wing jack point at F.S. 129.37 for a jig point. While the airplane is level on the scales, linear measurements are taken from the reference (a plumb bob hanging from the center of either wing jack point) to the axle centerline of the main gear and then from the main wheel axle centerline to the nose gear axle centerline. The main wheel axle centerline is best located by stretching a string from one wheel to the other. All measurements are to be taken with the tape level with the floor and parallel to fuselage water lines. The location of the wheel reactions will be approximately at F.S. 132 for the main wheels and F.S. 47 for the nose wheel.

8. The wing and fuselage weighing points are used by placing scales on the points as specified in Step 1. Since the center of gravity of the airplane will be forward of the weighing points at F.S. 129.37, the tail reaction of the rear weighing point at F.S. 278.61 will be in an up direction. This can be measured on regular scales by placing ballast of approximately 400 pounds on the scale to which the rear weighing point adapter is attached by cable or adjustable chain (may be used for leveling). The up reaction will be the total ballast weight minus the scale reading and is entered in the weighing form as a negative quantity.


9. The basic empty weight and moment are determined on the basic empty weight and balance form. Items weighed

**BEECHCRAFT
Duchess 76**

**Section VI
Wt & Bal/Equip List**

which are not part of the basic empty weight are subtracted, i.e. usable fuel. Engine oil and unusable fuel are added if not already in the airplane.

10. Weighing should be made in an enclosed area which is free from air currents. The scales used should be properly calibrated and certified.

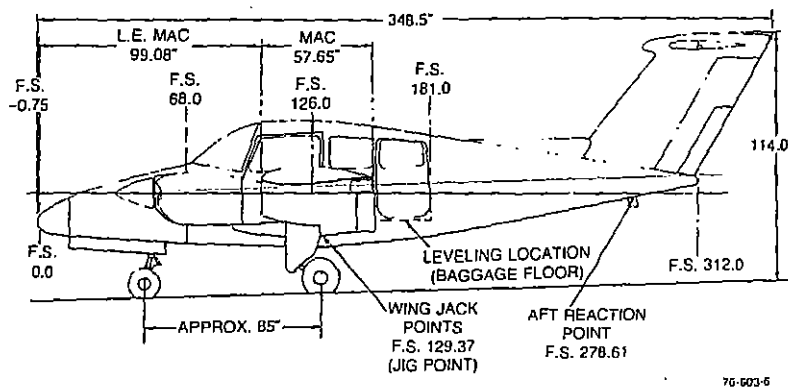

Section VI
Wt & Bal/Equip List

BEECHCRAFT
Duchess 76

INTENTIONALLY LEFT BLANK

January 1978

AIRCRAFT BASIC EMPTY WEIGHT AND BALANCE

DUCHESS 76 SER. NO. _____ REG. NO. _____ DATE _____
 STRUT POSITION NOSE MAIN JACK POINT LOCATION PREPARED BY
 EXTENDED 46.4 126.8 FORWARD 129.37 Company _____
 COMPRESSED 47.9 133.5 AFT 278.61 Signature _____

REACTION WHEEL - JACK POINTS	SCALE READING	TARE	NET WEIGHT	ARM	MOMENT
LEFT MAIN					
RIGHT MAIN					
NOSE OR TAIL					
TOTAL (AS WEIGHED)					
Space below provided for additions and subtractions to as weighed condition.					
EMPTY WEIGHT					
ENGINE OIL			37	75.4	2790
UNUSABLE FUEL			20	123.2	2464
BASIC EMPTY WEIGHT					

6-7

 BEECHCRAFT
 Duchess 76

 Section VI
 Wt & Bal/Equip List

Section VI
Wt & Bal/Equip List

BEECHCRAFT
Duchess 76

NOTE

Each new airplane is delivered with a completed sample loading, basic empty weight and center of gravity, and equipment list, all pertinent to that specific airplane. It is the owner's responsibility to ensure that changes in equipment are reflected in a new weight and balance and in an addendum to the equipment list. There are many ways of doing this; it is suggested that a running tally of equipment changes and their effect on basic empty weight and c.g. is a suitable means for meeting both requirements.

The current equipment list and basic empty weight and c.g. information must be retained with the airplane when it changes ownership. Beech Aircraft Corporation cannot maintain this information; the current status is known only to the owner. If these papers become lost, the FAA will require that the airplane be re-weighed to establish the basic empty weight and c.g. and that an inventory of installed equipment be conducted to create a new equipment list.

It is recommended that duplicate copies of the Basic Empty Weight and Balance sheet and the Equipment List be made and kept in an alternate location in the event the original handbook is misplaced.

LOADING INSTRUCTIONS

It is the responsibility of the airplane operator to assure that the airplane is properly loaded. At the time of delivery, Beech Aircraft Corporation provides the necessary weight and balance data to compute individual loadings. All subsequent changes in airplane weight and balance are the responsibility of the airplane owner and/or operator.

WEIGHT AND BALANCE RECORD

SERIAL NO. _____ REGISTRATION NO. _____ PAGE NO. _____

DATE	ITEM NO.		DESCRIPTION OF ARTICLE OR CHANGE	WEIGHT CHANGE ADDED (+) OR REMOVED (-)			RUNNING BASIC EMPTY WEIGHT	
	IN	OUT		WT (LBS)	ARM (IN.)	MOM 100	WT (LBS)	MOM 100

BEECHCRAFT
Duchess 76

Section VI
Wt & Bal/Equip List

January 1978

6-9

6-10

WEIGHT AND BALANCE RECORD

SERIAL NO. _____ REGISTRATION NO. _____ PAGE NO. _____

DATE	ITEM NO.		DESCRIPTION OF ARTICLE OR CHANGE	WEIGHT CHANGE ADDED (+) OR REMOVED (-)			RUNNING BASIC EMPTY WEIGHT	
	IN	OUT		WT (LBS)	ARM (IN.)	MOM 100	WT (LBS)	MOM 100


Section VI
Wt & Bal/Equip ListBEECHCRAFT
Duchess 76

January 1978

BEECHCRAFT
Duchess 76

Section VI
Wt & Bal/Equip List

The basic empty weight and moment of the airplane at the time of delivery are shown on the airplane Basic Empty Weight and Balance form. Useful load items which may be loaded into the airplane are shown on the Useful Load Weight and Moment tables. The minimum and maximum moments are shown on the Moment Limits vs Weight graph or table. These moments correspond to the forward and aft center of gravity flight limits for a particular weight. All moments are divided by 100 to simplify computations.

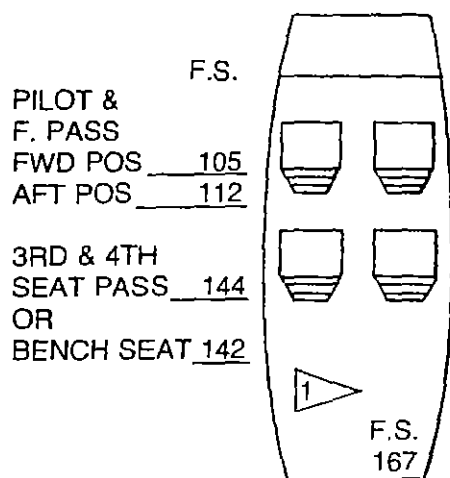

NOTE

THE FLOOR STRUCTURE LOAD LIMIT IS
100 POUNDS PER SQUARE FOOT.

ALL BAGGAGE/CARGO MUST BE SECURED.

1 MAXIMUM WEIGHT 200 POUNDS INCLUDING
EQUIPMENT AND BAGGAGE

76-603-8


August, 1980

6-11

Section VI
Wt & Bal/Equip List

BEECHCRAFT
Duchess 76

MOMENT LIMITS VS WEIGHT

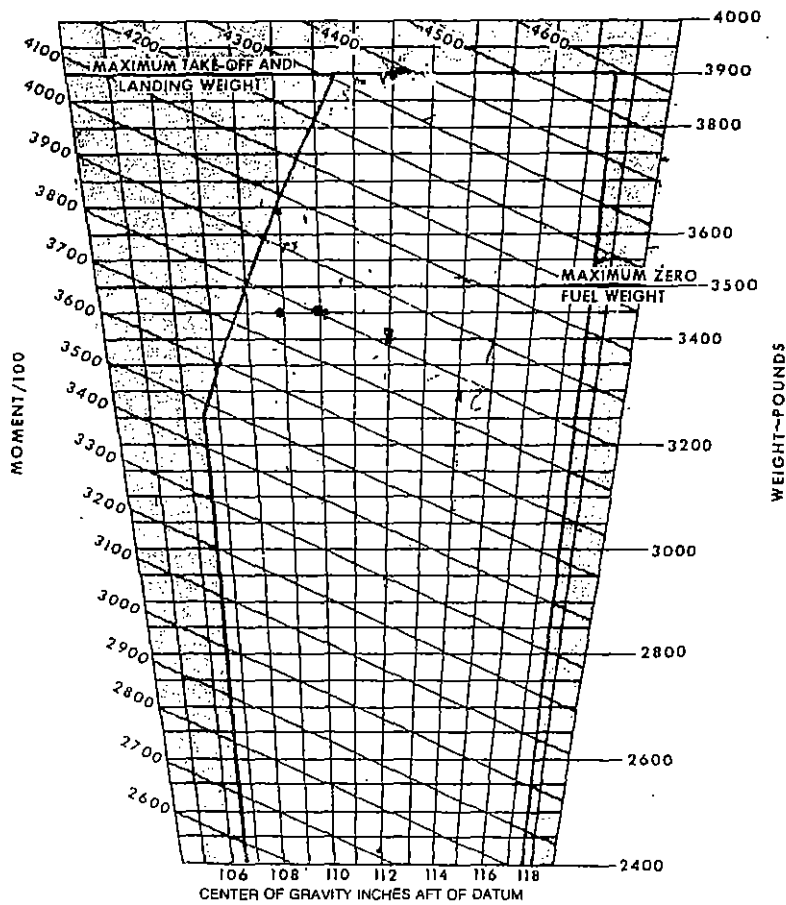

ENVELOPE BASED ON THE FOLLOWING WEIGHT AND
CENTER OF GRAVITY LIMIT DATA (LANDING GEAR DOWN)

WEIGHT CONDITION	FWD C. G. LIMIT	AFT C. G. LIMIT
3900 POUNDS (MAX. TAKE-OFF/LANDING)	110.6	117.5
3250 POUNDS OR LESS	106.6	117.5

BEECHCRAFT
Duchess 76

Section VI
Wt & Bal/Equip List

MOMENT LIMITS vs WEIGHT

WEIGHT POUNDS	MOMENT/100		WEIGHT POUNDS	MOMENT/100	
	FWD LIMIT	AFT LIMIT		FWD LIMIT	AFT LIMIT
2300	2452	2703	3125	3331	3672
2325	2479	2732	3150	3358	3701
2350	2505	2761	3175	3385	3731
2375	2532	2791	3200	3411	3760
2400	2558	2820			
2425	2585	2849	3225	3438	3789
2450	2612	2879	3250	3465	3819
2475	2638	2908	3275	3496	3848
2500	2665	2938	3300	3528	3878
2525	2692	2967	3325	3560	3907
2550	2718	2996	3350	3592	3936
2575	2745	3026	3375	3624	3966
2600	2772	3055	3400	3656	3995
2625	2798	3084	3425	3688	4024
2650	2825	3114	3450	3720	4054
2675	2852	3143	3475	3753	4083
2700	2878	3173	3500	3785	4113
2725	2905	3202	3525	3817	4142
2750	2932	3231	3550	3850	4171
2775	2958	3261	3575	3882	4201
2800	2985	3290	3600	3915	4230
2825	3012	3319	3625	3948	4259
2850	3038	3349	3650	3981	4289
2875	3065	3378	3675	4014	4318
2900	3091	3408	3700	4047	4348
2925	3118	3437	3725	4080	4377
2950	3145	3466	3750	4113	4406
2975	3171	3496	3775	4146	4436
3000	3198	3525	3800	4179	4465
3025	3225	3554	3825	4213	4494
3050	3251	3584	3850	4246	4524
3075	3278	3613	3875	4280	4553
3100	3305	3643	3900	4313	4583

Section VI
Wt & Bal/Equip List

BEECHCRAFT
Duchess 76

COMPUTING PROCEDURE

1. Record the Basic Empty Weight and Moment from the Basic Empty Weight and Balance form (or from the latest superseding form) under the Basic Empty Condition block. The moment must be divided by 100 to correspond to Useful Load Weights and Moments tables.

2. Record the weight and corresponding moment from the appropriate table of each of the useful load items (except fuel) to be carried in the airplane.

3. Total the weight column and moment column. The SUB-TOTALS are the ZERO FUEL CONDITION.

4. Determine the weight and corresponding moment for the total fuel loading to be used. Add the Total Fuel Loading Condition to Zero Fuel Condition to obtain the SUB-TOTAL Ramp Condition.

5. Subtract the fuel to be used for start and taxi to arrive at the SUB-TOTAL Take-off Condition.

6. Subtract the weight and moment of the FUEL TO DESTINATION from the take-off weight and moment. (Determine the weight and moment of this fuel by subtracting the amount on board at landing from the amount on board at takeoff.) The Zero Fuel Condition, the Take-off Condition and the Landing Condition moment must all be within the minimum and maximum moments shown on the Moment Limits vs Weight graph or table for that weight. If the total moment is less than the minimum moment allowed, useful load items must be shifted aft or forward load items reduced. If the total moment is greater than the maximum moment allowed, useful load items must be shifted forward or aft load items reduced. If the quantity or location of load items is changed, the calculations must be revised and the moments rechecked.

BEECHCRAFT
Duchess 76

Section VI
Wt & Bal/Equip List

The following Sample Loading chart is presented to depict the sample method of computing a load. Weights used DO NOT reflect an actual airplane loading.

WEIGHT AND BALANCE LOADING FORM

MODEL DUCHESS 76
SERIAL NO. ME-00

DATE 0/0/00
REG. NO. NXXXXX

ITEM	WEIGHT	MOM/100
1. BASIC EMPTY CONDITION	2543	2775
2. FRONT SEAT OCCUPANTS	340	380
3. 3rd & 4th SEAT OCCUPANTS OR BENCH SEAT OCCUPANTS	340	490
4.	-	-
5. AFT BAGGAGE	93	155
6. SUB TOTAL ZERO FUEL CONDITION (3500 LBS MAX.)	3316	3800
7. FUEL LOADING (100 gal.)	600	702
8. SUB TOTAL RAMP CONDITION	3916	4502
9. *LESS FUEL FOR START, TAXI, AND TAKEOFF	-16	-19
10. SUB TOTAL TAKE-OFF CONDITION	3900	4483
11. LESS FUEL TO DESTINATION (80 gal.)	-480	-562
12. LANDING CONDITION	3420	3921

*Fuel for start, taxi, and takeoff is normally 16 lbs at an average mom/100 of 19.

Section VI
Wt & Bal/Equip List

BEECHCRAFT
Duchess 76

WEIGHT AND BALANCE LOADING FORM

MODEL DUCHESS 76 DATE _____
SERIAL NO. _____ REG. NO. _____

ITEM	WEIGHT	MOM/100
1. BASIC EMPTY CONDITION		
2. FRONT SEAT OCCUPANTS		
3. 3rd & 4th SEAT OCCUPANTS OR BENCH SEAT OCCUPANTS		
4.		
5. AFT BAGGAGE		
6. SUB TOTAL ZERO FUEL CONDITION (3500 LBS MAX.)		
7. FUEL LOADING (gal.)		
8. SUB TOTAL RAMP CONDITION		
9. *LESS FUEL FOR START, TAXI, AND TAKEOFF		
10. SUB TOTAL TAKE-OFF CONDITION		
11. LESS FUEL TO DESTINATION		
12. LANDING CONDITION		

*Fuel for start, taxi, and takeoff is normally 16 lbs at an average mom/100 of 19.

OCCUPANTS

WEIGHT	FRONT SEATS			3RD AND 4TH SEATS	
	*FWD POS.		*AFT POS.	STD. BENCH	OPTIONAL
	††ARM **104	†ARM **105	ARM **112	ARM **142	ARM **144
	MOMENT/100				
120	125	126	134	170	173
130	135	137	146	185	187
140	146	147	157	199	202
150	156	158	168	213	216
160	166	168	179	227	230
170	177	179	190	241	245
180	187	189	202	256	259
190	198	200	213	270	274
200	208	210	224	284	288
210	218	220	235	298	302
220	228	23†	246	312	317
230	239	241	258	327	331
240	250	252	269	341	346
250	260	262	280	355	360

† Effective ME-1 thru ME-20

†† Effective ME-21 and after

* Reclining seat with back in full-up position

** Values computed from a C.G. criterion based on a 170 pound male. Differences in physical characteristics can cause variation in center of gravity location.

BEECHCRAFT
Duchess 76

Section VI
Wt & Bal/Equip List

USEFUL LOAD WEIGHTS AND MOMENTS

April 1979

6-17

USEFUL LOAD WEIGHTS AND MOMENTS

BAGGAGE
ARM 167

WEIGHT	<u>MOMENT</u> 100
10	17
20	33
30	50
40	67
50	84
60	100
70	117
80	134
90	150
100	167
110	184
120	200
130	217
140	234
150	251
160	267
170	284
180	301
190	317
200	334

BEECHCRAFT
Duchess 76

Section VI
Wt & Bal/Equip List

USEFUL LOAD WEIGHTS AND MOMENTS
USABLE FUEL
ARM 117.0

GALLONS	WEIGHT LBS	<u>MOMENT</u> 100
10	60	70
20	120	140
30	180	211
40	240	281
50	300	351
60	360	421
70	420	491
80	480	562
90	540	632
100	600	702

Equipment List

Model: 76 Serial No. ME-315 REG NO. N6712P DATE: May 20, 1999

Status Of Equipment X: Installed in Airplane O: Not installed in Airplane

	Item	Weight
	Miscellaneous Equipment	
X	King KR-86 ADF System	6.3
X	King KMA-24 Audio/ Marker Panel	1.7
X	King KX-155 NAV/ COMM with Glidslope	5.50
X	King KX-155 NAV/ COMM without Glideslope	4.95
X	King KT-76A Transponder	3.1
X	King KI 209 ILS/VOR Indicator	1.2
X	King KI 208 LOC/ VOR Indicator	1.0
X	King KN-63 DME System	3.6
X	Trans-Cal Industries SSD 120 Encoder	1.0
X	NAT AA80-001 Intercom System	1.0
X	King KA 33 Cooling Fan	1.25
NOTE: Aircraft was weighed on 5-20-1999 with the above equipment installed new empty weight and EWCG determined.		

WILLIAM P. LUDWIG
P 545506798

AIRCRAFT
Weight & Balance



2372 Pepper Drive
Concord, CA 94520
(510) 798-3296

WEIGHT REPORT

Date 5-20-99
Name KJV Aviation Telephone 510-429-7234
Address PO Box 280361 San Francisco Calif 94128
N 6712P SN ME-315 Make Beechcraft Model 76
Datum is: 103" fwd of wing leading edge
Leveling means: Baggage compartment floor
Gas: ☐ Empty ☒ Full 103 Gal. @ 6 lb./Gal. 618 lbs.
Turbin Fuel: ☐ Empty ☐ Full Gal. @ 6.7 lb./Gal. lbs.
Oil: ☐ Empty ☒ Full 16 Qts. @ 1.875 lb./Qt. 30 lbs.
Fuel full 618 lbs. - unuseable fuel 3 Gal./ 45 lbs. = 600 lbs.

Scale Weight

Weighting Point	Scale Reading	-Tare	Net Weight	Scale WL		A/C Gr. WL	
Left	1254	<u>0</u>	1254	- Fuel Useable	600	Empty WL	2653
Right	1321	<u>0</u>	1321	Empty WL	2653	New Useful Load	1247
Nose/TSE	648	<u>0</u>	648				
Total	3253		3253				

Remarks: None

Weight readings must be transferred to aircraft manufacturer's approved weight and balance form to find new empty weight C.G.

x William P. Ludwig
William P. Ludwig

AIRPLANE WEIGHING FORM

Wheel	Scale Reading	ARM	Moment
Left	1284		
Right	1321		
Sub-Total	2605	12.7	330935
Nose/Tail	648	48	31104
Total	3253	111.26	361939

MEASUREMENTS: (Cross out words not applicable.)

- A. 12.7 inches. Distance from datum to C/L main wheels.
- B. 48 inches. Distance from datum to C/L nose wheel, ~~or nose wheel to main wheels.~~
- C. 111.26 inches. Center of gravity of aircraft as weighed.

Adjustment For Empty Weight

Description	Weight	ARM	Moment
Total (as weighed)	3253	111.26	361939
USEABLE ONLY			
Main Fuel 106 gal.	- 600	117	- 70200
Aux Fuel gal.	-	—	-
Other Fuel gal.	-	—	-
Total	2653		291739
Useful load 1247 lbs.			
A/C Basic Weight	2653	109.96	291739



KANSAS CITY FLYING SERVICE

201 LOU HOLLAND DRIVE - MUNICIPAL AIRPORT - KANSAS CITY, MISSOURI 64116 - AREA CODE 816 - PHONE 471-4113

WEIGHT & BALANCE

Beech 76
N-6712P

June 6, 1984

N ME-315

Nose 800
Main 2600
3280

Aircraft
Fuel

3280

0.000-109.4

358832.0

0000

- 600

0.000-109.4

- 70200.0

0000

2680

0.000-109.4

288632.0

Empty
M674

Basic Empty Weight 2680

Basic Empty Weight CG 107.7

Basic Empty moment 288636.0

Supervised by
Frank A. Spahr, Jr.

Repair Station #1376

BEECHCRAFT
Duchess 76

SECTION VII

SYSTEMS DESCRIPTION

TABLE OF CONTENTS

<i>SUBJECT</i>	<i>PAGE</i>
Airframe.....	7-5
Seating Arrangements	7-5
Flight Controls.....	7-5
Control Surfaces	7-5
Control Column	7-5
Rudder Pedals	7-6
Trim Controls.....	7-6
Manual Elevator Trim.....	7-6
Electric Elevator Trim.....	7-6
Aileron Trim	7-7
Instrument Panel.....	7-7
Illustration.....	7-8
Flight Instruments.....	7-9
Engine Instrumentation	7-9
Ground Control	7-9
Wing Flaps.....	7-10
Landing Gear System	7-10
Control Switch	7-10
Position Indicators.....	7-11
Time-delay Relay	7-11
Safety Retraction Switch	7-11
Warning Horn.....	7-12
Warning Horn "Q" Switch	7-12
Warning Horn Silence Button.....	7-12A
Circuit Breaker	7-12A
Emergency Extension.....	7-12A
Brakes	7-13

Section VII
Systems Description

BEECHCRAFT
Duchess 76

TABLE OF CONTENTS (Continued)

<i>SUBJECT</i>	<i>PAGE</i>
Baggage Compartment.....	7-13
Seats, Seat Belts, and Shoulder Harnesses	
Seats.....	7-14
Seat Belts.....	7-14
Shoulder Harnesses.....	7-15
Doors and Exits	
Forward Cabin Doors.....	7-15
Aft Utility Door.....	7-16
Emergency Exits.....	7-16
Control Lock.....	7-16
Engines.....	7-17
Engine Controls.....	7-17
Throttle, Propeller, and Mixture.....	7-17
Engine Instrumentation.....	7-18
Manifold Pressure Gage.....	7-18
Exhaust Gas Temperature Indicator (EGT).....	7-18
Engine Break-in Information.....	7-19
Engine Lubrication.....	7-19
Engine Ice Protection.....	7-19
Carburetor Heat.....	7-20
Induction Air.....	7-20
Cowl Flaps.....	7-20
Starters.....	7-20
Propellers.....	7-21
Fuel System.....	7-21
Fuel Tanks.....	7-22
Fuel Selector Valves.....	7-22
Schematic.....	7-23
Fuel Drains.....	7-24
Fuel Quantity Indicators.....	7-24
Auxiliary Fuel Pumps.....	7-24
Engine Priming.....	7-25
Fuel Crossfeed.....	7-25
Fuel Required for Flight.....	7-25

TABLE OF CONTENTS (Continued)

<i>SUBJECT</i>	<i>PAGE</i>
Electrical System	7-26
Battery.....	7-26
Schematic	7-27
Alternators.....	7-28
Starters	7-29
Starter Engaged Warning Light	7-30
External Power.....	7-30
Lighting Systems	
Interior Lighting	7-34
Exterior Lighting	7-34
Environmental Systems	
Cabin Heating	7-35
Illustration.....	7-36
Heater Operation.....	7-37
Cabin Ventilation	7-38
Overhead Fresh Air Outlets.....	7-38
Exhaust Vent.....	7-39
Pitot and Static Systems	7-39
Pitot System.....	7-39
Pitot Heat.....	7-39
Static System	7-40
Pressure System	7-40
Stall Warning System.....	7-41

**Section VII
Systems Description**

**BEECHCRAFT
Duchess 76**

INTENTIONALLY LEFT BLANK

**BEECHCRAFT
Duchess 76**

**Section VII
Systems Description**

AIRFRAME

The BEECHCRAFT Duchess 76 is an all-metal, low-wing, twin-engine airplane with retractable tricycle landing gear. The T-tail empennage assembly consists of a vertical stabilizer and a top-mounted horizontal stabilizer.

SEATING ARRANGEMENTS

In the standard configuration the airplane is equipped with two adjustable pilot seats and one rear fixed-bench seat. In the optional configuration, split third and fourth seats are installed to replace the fixed-bench seat. To adjust either of the front seats, pull the release knob located below the left forward seat corner (pull to the right, then up) and slide the seat forward or aft, to the desired position. Each seat should be locked securely in place, after adjustment. The backs of all individual seats can be placed in any of three positions by means of a lever located on the side of each seat. Headrests are available for each of the individual seats. Outboard armrests, for the front seats, are attached to the cabin doors.

FLIGHT CONTROLS

CONTROL SURFACES

The control surfaces are bearing supported and operated through conventional cable systems and push-pull rods terminating in bell cranks.

CONTROL COLUMN

The airplane is equipped with dual control columns for the pilot and copilot. The control wheels are interconnected and provide aileron and elevator control.

Section VII
Systems Description

BEECHCRAFT
Duchess 76

RUDDER PEDALS

The standard installation provides a set of rudder pedals for both the pilot and copilot. The main landing gear wheel brakes are operated by applying toe pressure to either set of rudder pedals.

TRIM CONTROLS

Trim tabs on the rudder and elevator are adjustable with the controls that are mounted on the lower center console. The trim tabs and controls are connected through closed cable systems. Mechanical position indicators for each of the trim tabs are integrated with their respective controls. Elevator trim is accomplished through either the electric or manual pitch trim system.

MANUAL ELEVATOR TRIM

The manual elevator trim is actuated by a handwheel located between the pilot seats. An elevator tab position indicator is located adjacent to the trim control handwheel. Forward rotation of wheel trims the airplane nose down, aft rotation trims nose up.

ELECTRIC ELEVATOR TRIM

The electric elevator trim system is controlled by the ON-OFF circuit-breaker-type switch located on the left subpanel and a thumb switch located on the pilot's control wheel. The ON-OFF switch must be in the ON position to operate the system. The thumb switch is depressed and moved forward for nose down, aft for nose up, and when released, returns to the center OFF position. When the system is not being electrically actuated, the manual trim control wheel may be used.

An emergency release button, incorporated in the system, is located on the left handle grip of the pilot's control wheel. This button can be quickly depressed to deactivate the system in case of a malfunction in the system. The system will remain deactivated only while the button is being held in the depressed position.

AILERON TRIM


The aileron trim control, located on the lower center console, is provided to displace the ailerons for trimming purposes. Displacement is maintained by cable loads imposed by the trimmer.

INSTRUMENT PANEL

The standard instrument panel consists of flight, navigation, and engine instruments on the left, and an avionics section on the right.

The lower left subpanel contains the switches for control of the battery and alternators, magneto/start and prime, lights, environmental, and optional equipment. Also contained on the left subpanel are the auxiliary fuel pump switches, instrument air gage, landing gear control switch and gear indicator lights.

Located on the lower right subpanel are the rheostat switches for the instrument flood and post lights, parking brake control knob, flap switch, and flap position indicator. All of the circuit breakers, that are associated with the various placarded systems, are also located on the lower right subpanel.

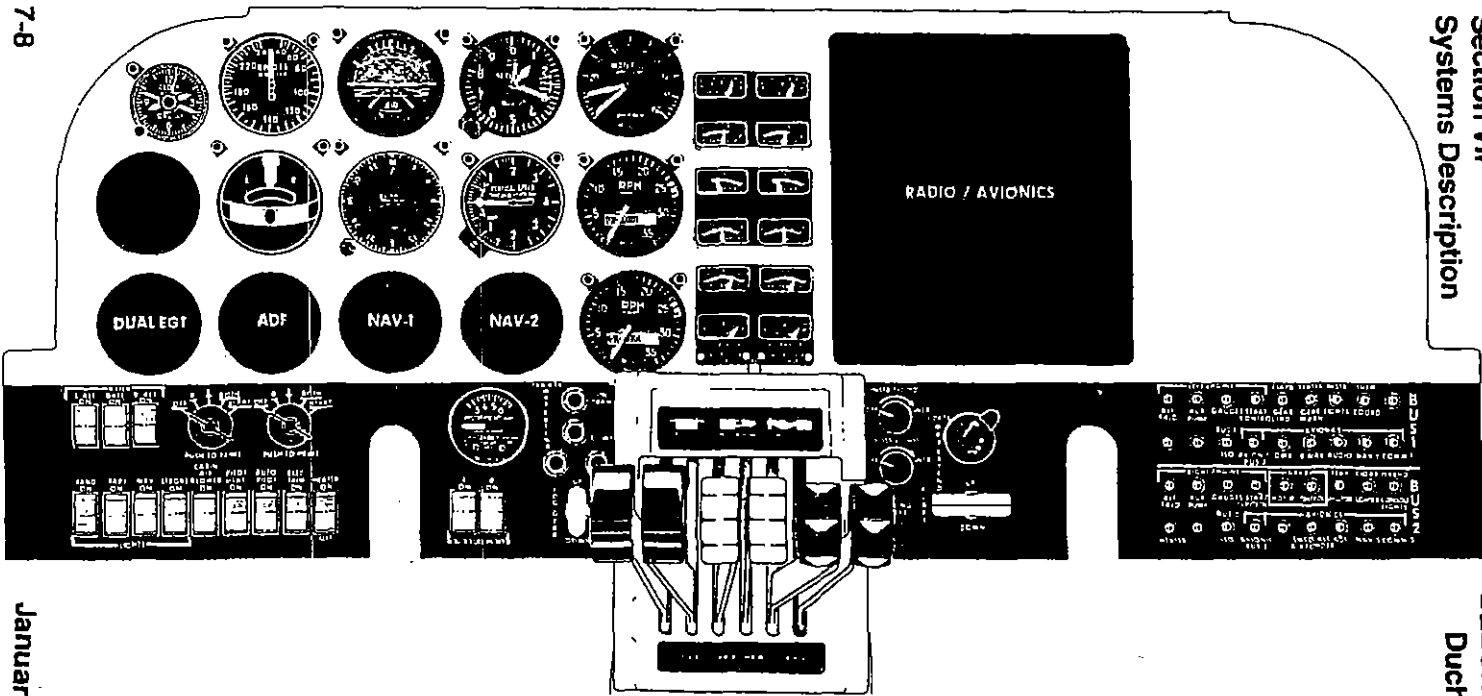

TYPICAL INSTRUMENT PANEL

FLIGHT INSTRUMENTS

The flight instruments are located on the instrument panel directly in front of the pilot's seat. Available flight instrumentation includes attitude and directional gyros, airspeed, altimeter, turn coordinator, vertical speed, and gyro pressure. The magnetic compass is mounted above the instrument panel and the outside air temperature indicator is located in the lower left corner of the windshield (ME-1 through ME-440) or in the center of the windshield above the compass (ME-441 and after). The clock is mounted in the upper left portion of the instrument panel.

ENGINE INSTRUMENTATION

Most of the engine instruments are located in the center of the instrument panel. This group includes left and right instruments for fuel quantity, fuel pressure, oil pressure, oil temperature, cylinder head temperature, and loadmeters. The alternator-out annunciator lights for each alternator and the test switch are located adjacent to the loadmeters. The balance of the engine instruments, located above the left subpanel, include a dual indicating manifold pressure gage, tachometers, and a dual indicating exhaust gas temperature indicator. A dual indicating tachometer (ME-140 and after) is offered as optional equipment in lieu of the two (left and right) standard tachometer indicators.

GROUND CONTROL

The spring-loaded linkage from the nose gear to the rudder pedals allows for nose wheel steering. Smooth turning is accomplished by allowing the airplane to roll while depressing the appropriate rudder pedal. Sharper turns require light brake pedal pressure on the depressed rudder pedal.

The minimum wing-tip turning radius of 27 feet 2 inches is accomplished by using full steering, one brake, and differential power.

Section VII
Systems Description

BEECHCRAFT
Duchess 76

WING FLAPS

The wing flaps are controlled by a three-position switch, UP, OFF, and DOWN, located on the subpanel, to the right of the control console. The switch must be pulled out of detent before it can be repositioned. A dial-type indicator, located adjacent to the flap switch, has position markings for UP, 10°, 20°, and DN.

Limit switches automatically interrupt power to the electric motor when the flaps reach the extremes of travel. Intermediate flap positions can be obtained by placing the three-position switch in the OFF position during flap extension or retraction.

Lowering the flaps in flight will produce the following effects:

Attitude - Nose Down
Airspeed - Reduced
Stall Speed - Lowered

When the flaps are extended beyond approximately 16°, the landing gear warning horn will sound (regardless of throttle position) if the landing gear is not down and locked.

LANDING GEAR SYSTEM

The retractable tricycle landing gear is fabricated from magnesium castings and aluminum forgings. Retraction and extension of the gear is accomplished through the use of an electrically driven hydraulic pump and hydraulic system terminating in a hydraulic actuator assembly mounted in each wheel well. The landing gear may be hydraulically extended or retracted, and may be lowered manually.

CONTROL SWITCH

The landing gear is controlled by a two-position switch located on the left subpanel. The switch handle must be pulled out of the safety detent before it can be moved to the opposite position.

POSITION INDICATORS

The landing gear position indicator lights are located above the landing gear switch handle. Three green lights, one for each gear, are illuminated whenever the landing gear is down and locked. The red light illuminates any time the landing gear is in transit or in any intermediate position. All of the lights will be extinguished when the gear is up.

Pressing the face of each landing gear position indicator light will verify the landing gear lights are functional. The intensity of the lamps can be controlled by turning the lens holder on each lamp.

TIME-DELAY RELAY (ME-183 and after)

Landing gear retraction operation is protected by a time-delay relay which will disengage electrical power to the hydraulic pump motor after 30 seconds of continuous pump operation. If the landing gear in-transit light remains illuminated, it indicates improper response of the landing gear. The time-delay relay can be reset by moving the landing gear switch handle to the down position. The landing gear and retract system should be checked before the next flight.

Section VII
Systems Description

BEECHCRAFT
Duchess 76

SAFETY RETRACTION SWITCH

To prevent inadvertent retraction of the landing gear on the ground, a safety pressure switch is installed in the pitot system to deactivate the hydraulic pressure pump circuit when the impact air pressure is below 59 to 63 knots.

WARNING

Never rely on the safety switch to keep the gear down during taxi, take-off roll, or landing roll. Always make certain that the landing gear switch handle is in the down position during these operations.

WARNING HORN

If either or both throttles are retarded below an engine setting sufficient to sustain flight and the landing gear is retracted, the landing gear warning horn will sound intermittently. Also, when the flaps are extended beyond approximately 16°, the warning horn will sound, regardless of throttle position, if the landing gear is not down and locked.

WARNING HORN "Q" SWITCH

An optional "Q" switch is available to prevent the gear warning horn from sounding with the throttle(s) retarded and the landing gear retracted. In order for the "Q" switch to interrupt the gear warning horn, the airspeed must be above 99 to 106 KIAS and the flaps must be retracted above approximately 16°.

WARNING HORN SILENCE BUTTON

An optional gear warning horn silence button allows the pilot to manually silence the warning horn with either throttle retarded, the landing gear retracted, and the flaps retracted above approximately 16°. The push-to-silence button is located next to the landing gear control switch and is placarded "GEAR HORN SILENCE". A red light in the button illuminates when the gear horn silence system is activated.

When either throttle is retarded sufficiently to activate the gear warning horn, the horn may be silenced with the button. If the other throttle is then retarded, the warning horn will again sound and cannot be silenced. After a single throttle has been retarded and the resulting warning horn silenced with the button, readvancing the throttle resets the warning horn and it will again sound when either throttle is retarded. The warning horn is also reset when the landing gear are lowered. When the flaps are extended beyond approximately 16°, the button will not silence the warning horn.

CIRCUIT BREAKER

The landing GEAR MOTOR circuit breaker and the landing GEAR CONTROL circuit breaker are located on the right subpanel. The circuit breakers are the pull-and-reset type and will pop out under overload conditions.

EMERGENCY EXTENSION

The landing gear can be manually extended by turning the hydraulic pressure bypass valve 90° counterclockwise. The valve is located under the access door on the floor in front of the pilot's seat. When the system pressure is released, the gear will fall into the down-and-locked position. The emergency extension procedure is outlined in the EMERGENCY PROCEDURES section.

**Section VII
Systems Description**

**BEEHCRAFT
Duchess 76**

INTENTIONALLY LEFT BLANK

BRAKES

The brakes on the main landing gear wheels are operated by applying toe pressure to the top of the rudder pedals. The parking brakes push-pull control is located on the right sub-panel just left of the flap switch. To set the parking brakes, pull the control out and pump both toe pedals until solid resistance is felt. Push the control in to release the brakes.

The hydraulic brake fluid reservoir is located on the left side of the forward cabin bulkhead and is accessible through the nose compartment. Fluid level is checked with the dipstick attached to the reservoir cap. The brakes require no adjustment, since the pistons move outward to compensate for lining wear.

CAUTION

Install wheel chocks and release the parking brake if the airplane is to be left unattended. Changes in ambient temperatures can cause the brakes to release or exert excessive pressures.

BAGGAGE COMPARTMENT

The aft baggage compartment is accessible through the utility door on the left side of the fuselage. This area extends aft of the rear seats to the rear bulkhead. Loading within the baggage compartment must be in accordance with the data in the WEIGHT AND BALANCE section. All baggage must be secured with the nylon straps, which are provided in the baggage compartment.

**Section VII
Systems Description**

**BEECHCRAFT
Duchess 76**

The hat shelf, located near the top of the aft cabin enclosure, provides an area for light miscellaneous articles. Both the baggage compartment and the hat shelf are accessible in flight.

WARNING

Do not carry hazardous material anywhere in the airplane.

Do not carry children in the baggage compartment.

SEATS, SEAT BELTS, AND SHOULDER HARNESSSES

SEATS

To adjust either of the front seats, pull the release knob located below the left forward seat corner (pull to the right, then up) and slide the seat forward or aft to the desired position. Make certain each seat is locked securely in place after adjustment. The backs of all individual seats can be placed in any of three positions by means of a release lever located on the side of each seat. Headrests are available for each of the individual seats. Outboard armrests for the front seats are attached to the cabin doors.

SEAT BELTS

All seats are provided with seat belts having a lever-action, quick-release, metal buckle. The seat belt length can be shortened or lengthened by allowing the excess belt to pull through the end of the buckle. Holding the buckle at a right angle to the belt releases the binding action, allowing the belt to slip.

SHOULDER HARNESSES

The shoulder harness is a standard installation for all seats and should be used with the seats in the upright position. The spring loading at the inertia reel keeps the harness snug, but will allow normal movement during flight operations. The inertia reel is designed with a locking device that will secure the harness in the event of sudden forward movement or an impact action. The strap is worn over the shoulder and down across the body, where it is fastened by a metal loop to the seat belt buckle. The inertia reels for the front and middle seats are attached to the lower cabin sidewall structure at the aft edge of the respective seat. The inertia reel is covered with an escutcheon, and the strap runs up from the reel to a looped fitting attached to the window frame just aft of the seat. For stowing these shoulder harness straps, stowage attach points are provided adjacent to the inertia reel on the cabin sidewall.

WARNING

The seat belt is independent of the shoulder harness; however, the shoulder harness may be used only when the seat belt is fastened.

Occupants shorter than 4'7" are not to use shoulder harness.

DOORS AND EXITS

FORWARD CABIN DOORS

The airplane has a conventional cabin door on each side of the fuselage adjacent to the forward seats. When closed, the outside cabin door handle is spring-loaded to fit into a recess

Section VII Systems Description

BEECHCRAFT Duchess 76

in the door. The door can be locked with a key. To open the door from the outside, lift the handle from its recess and pull until the door opens. To close the cabin door from the inside, grasp the armrest attached to the door and firmly pull the door closed. Opening the storm window will alleviate pressure inside the cabin as the door is being closed. Press firmly outward at the upper aft edge of the door. If any movement of the door is detected, completely open the door and close again following the above instructions. To open the door from the inside, grasp the door release handle and pull until door latch releases.

AFT UTILITY DOOR

The aft utility door on the left side of the fuselage is provided for loading baggage into the aft cabin area. This door can be opened from outside the airplane or from the inside. To open the door from the outside, lift the handle from its recess and pull until the door opens. To open the door from the inside, pull out on the locking pin adjacent to the door handle, then rotate the handle counterclockwise (approximately $\frac{1}{4}$ turn) until the door opens. The door handle is equipped with a keyhole and can be locked, as desired.

EMERGENCY EXITS

An emergency exit can be accomplished through either of the forward cabin doors, or the aft utility door.

CONTROL LOCK

A control lock is provided with the loose tools. When installed on ME-1 thru ME-338 it prevents movement of the control column and impairs access to the magneto/start

switches. On Serials ME-339 and after, and airplanes prior to ME-339 complying with BEECHCRAFT Service Instructions No. 1136, the control lock prevents movement of the control column, impairs access to the magneto/switches, and also prevents movement of the throttles and rudder pedals.

To Install the Control Lock (Serials ME-1 thru ME-338):

1. Rotate control wheel and move control column so the holes in the control column hanger and the control column will align to accept the pin.
2. Push the control column lock pin through the hole provided in the control column hanger and into the hole in the underside of the control column tube assembly.
3. Ensure positive retention of the lock pin by positioning the hook over the control column.

WARNING

Before starting the engines, remove the control lock by reversing the above procedure.

To Install the Control Lock (ME-339 and after, and airplanes prior to ME-339 complying with BEECHCRAFT Service Instructions No. 1136):

1. Install throttle control lock on the engine control quadrant.
2. Install rudder lock by inserting the upright tabs of the rudder lock between the bottom of the rudder pedals and the rudder bars.
3. Rotate the control wheel and move control column so the holes in the control column hanger and the control column will align to accept the pin. Push the control column lock pin through the hole provided in the control column hanger and into the hole in the

Section VII
Systems Description

BEEHCRAFT
Duchess76

INTENTIONALLY LEFT BLANK

underside of the control column tube assembly. Ensure positive retention of the lock pin by positioning the hook over the control column.

NOTE

Tension on the cable between the rudder lock and the control column lock holds the rudder lock in place.

WARNING

Before starting the engines, remove the control lock by reversing the above procedure.

ENGINES

Two direct-drive, four-cylinder, horizontally opposed, Avco Lycoming engines are installed. An O-360-A1G6D (clockwise rotating as viewed from the pilot's seat) engine is mounted on the left wing, and an LO-360-A1G6D (counterclockwise rotating) engine is mounted on the right wing. Each engine is rated at 180 horsepower at 2700 rpm.

ENGINE CONTROLS

THROTTLE, PROPELLER, AND MIXTURE

The control levers are grouped along the upper portion of the control console. Pushing forward on a control lever increases its appropriate function, pulling back decreases it. The knobs

Section VII
Systems Description

BEECHCRAFT
Duchess 76

on the levers are shaped to standard government configuration so they can be identified by touch. The controls are centrally located for ease of operation from either the pilot's or the copilot's seat. A controllable friction knob, located to the right of the control levers, is provided to prevent creeping of the control levers.

ENGINE INSTRUMENTATION

Most of the engine instruments are located in the center of the instrument panel. This group includes left and right instruments for fuel quantity, fuel pressure, oil pressure, oil temperature, cylinder head temperature, and loadmeters. The alternator-out annunciator lights for each alternator, and the test switch for the lights, are located adjacent to the loadmeters. The balance of the engine instruments, located above the left subpanel, include a dual-indicating manifold pressure gage, tachometers, and a dual-indicating exhaust gas temperature indicator.

MANIFOLD PRESSURE GAGE

The dual-indicating manifold pressure gage indicates the pressure of the fuel/air mixture entering the engine cylinders of each engine, and is calibrated in inches of mercury.

EXHAUST GAS TEMPERATURE INDICATOR (EGT)

This installation provides for a sensitive and rapid indication of exhaust gas temperature to assist in adjusting the fuel/air mixtures during cruise. Procedures pertaining to leaning the mixture using the EGT indicator are contained in the NORMAL PROCEDURES section.

ENGINE BREAK-IN INFORMATION

New engines have been carefully run-in by the engine manufacturer. However, the engines should be operated on straight mineral oil for a minimum of 50 hours or until oil consumption stabilizes. After the first 25 hours of operation, drain and replace the mineral oil. A change to an approved engine oil should be made after the break-in period. Refer to Lycoming Engine Operator's Manual.

NOTE

In order to promote proper ring seating, cruise power settings of 65% to 75% should be used until a total of 50 hours has accumulated or until oil consumption has stabilized. This recommendation is applicable to in-service engines following cylinder replacement or top-overhaul of one or more cylinders, as well as to new engines.

ENGINE LUBRICATION

The engines are equipped with a wet-sump, pressure-type oil system. Each engine sump has a capacity of 8 quarts. The oil level may be checked through the access door in each engine cowling. A calibrated dipstick attached to the filler cap indicates the oil level. Due to the canted position of the engines, the dipsticks are calibrated for either right or left engines and are not interchangeable.

Oil operating temperatures are controlled by an automatic thermostat bypass control. The bypass control will limit the oil flow through the oil cooler when operating temperatures are below normal, and will permit the oil to bypass the cooler if it should become blocked.

ENGINE ICE PROTECTION

The possibility of induction system icing is reduced by the carburetor air heat system.

Section VII
Systems Description

BEECHCRAFT
Duchess 76

CARBURETOR HEAT

The carburetor heat control levers are located just below the control console on the pedestal. The levers have two placarded positions: OFF - ON. When the levers are in the OFF (up) position, cold and filtered air enters the induction system. Placing the levers in the ON (down) position allows heated and unfiltered air to enter the induction system to alleviate the possibility of carburetor ice. Carburetor air heat should be used in accordance with the recommendations in the NORMAL PROCEDURES section.

INDUCTION AIR

Induction air is available from filtered ram air or unfiltered carburetor heat air. Filtered ram air enters from above the engine inside the nacelle area.

COWL FLAPS

The manual cowl flaps are controlled by separate levers located just below the carburetor heat controls on the pedestal. Each control lever has three placarded positions: CLOSE (up) - HALF - OPEN (down). The control levers allow the cowl flaps to be positioned so that the desired cylinder head temperatures can be maintained.

STARTERS

The magneto/start switches are located on the subpanel to the left of the pilot's control column and incorporate R (right), L (left), and BOTH magneto positions in addition to the OFF and START positions. After activation of the starter, the spring-loaded switch returns to the BOTH position when released. Also, the switches include a PUSH TO PRIME position that activates the electric fuel priming function for the purpose of supplying additional fuel to the engine during starting.

■ The warning light placarded STARTER ENGAGED (ME-

333, ME-346 and after) is located between the Left Magneto/Start and Right Magneto/Start switches on the pilot's left subpanel. The starter engaged warning light will illuminate whenever electrical power is being supplied to the starter. If the light remains illuminated after starting, the starter relay has remained engaged and loss of electrical power may result.

PROPELLERS

The airplane is equipped with two Hartzell, 76-inch diameter, constant-speed, full-feathering, two-blade propellers. Propeller rpm is controlled by the engine-driven propeller governor which regulates hydraulic oil pressure to the hub. The propeller controls, on the control console, allow the pilot to select the governor's rpm range. Springs and dome air pressure, aided by counterweights, move the blades to high pitch. Engine oil under governor-boosted pressure moves the blades to the high rpm (low pitch) position.

The propellers should be cycled occasionally during cold weather operation. This will help maintain warm oil in the propeller hubs so that the oil will not congeal.

FUEL SYSTEM

The airplane is designed for operation on grade 100 (green) or 100LL (blue) aviation gasoline. The fuel system is an ON - CROSSFEED - OFF arrangement. The fuel selector panel, located on the lower portion of the center pedestal, contains the fuel selector levers for each engine.

The fuel is drawn from the respective tank through the fuel strainer and to the fuel selector valve, located aft of the firewall in each nacelle. From the fuel selector valve, the fuel passes through a check valve and then through the engine-driven fuel pump and delivered to the carburetor. The cabin heater, located in the nose compartment, uses fuel (approximately 2/3 gallon per hour) from the right wing tank fuel system only.

Section VII
Systems Description

BEECHCRAFT
Duchess 76

FUEL TANKS

The fuel system consists of a bonded leading-edge fuel tank located outboard of the nacelle in each wing. The fuel tank in each wing has a capacity of 51.5 gallons for a total fuel capacity of 103 gallons (100 gallons usable). Each wing is serviced through a single filler located in the outboard portion of each wing. The filler neck of each tank contains a visual measuring tab which facilitates partial filling of the fuel system. When the fuel level reaches the bottom of the tab, it indicates 30 (28.5 usable) gallons of fuel in that tank. The center mark on the tab indicates 40 (38.5 usable) gallons of fuel and the mark at the top indicates a full tank of 51.5 (50 usable) gallons of fuel.

FUEL SELECTOR VALVES

The fuel selector valves are located in each nacelle on the outboard side just forward of the wing leading edge. The valve is of the rotary type and is operated by push-pull cable from the floor console between the front seats. The valve has three positions, ON - CROSSFEED - OFF, which are determined by detents in the valve. The floor console has a slot for each selector valve lever, with notches which correspond to the valve detents.

NOTE


During operation, make certain fuel selector valves are in detent in the ON position. This can be determined by moving the levers slightly within the detent notch. Operation with the valve slightly out of detent could result in fuel transferring from one wing tank to the other.

The fuel selector valves also function as a preflight drain point and firewall fuel shutoff. The lower portion of the valve serves as a sediment bowl and contains the fuel strainer screen.

January 1978

7-23

FUEL SYSTEM SCHEMATIC

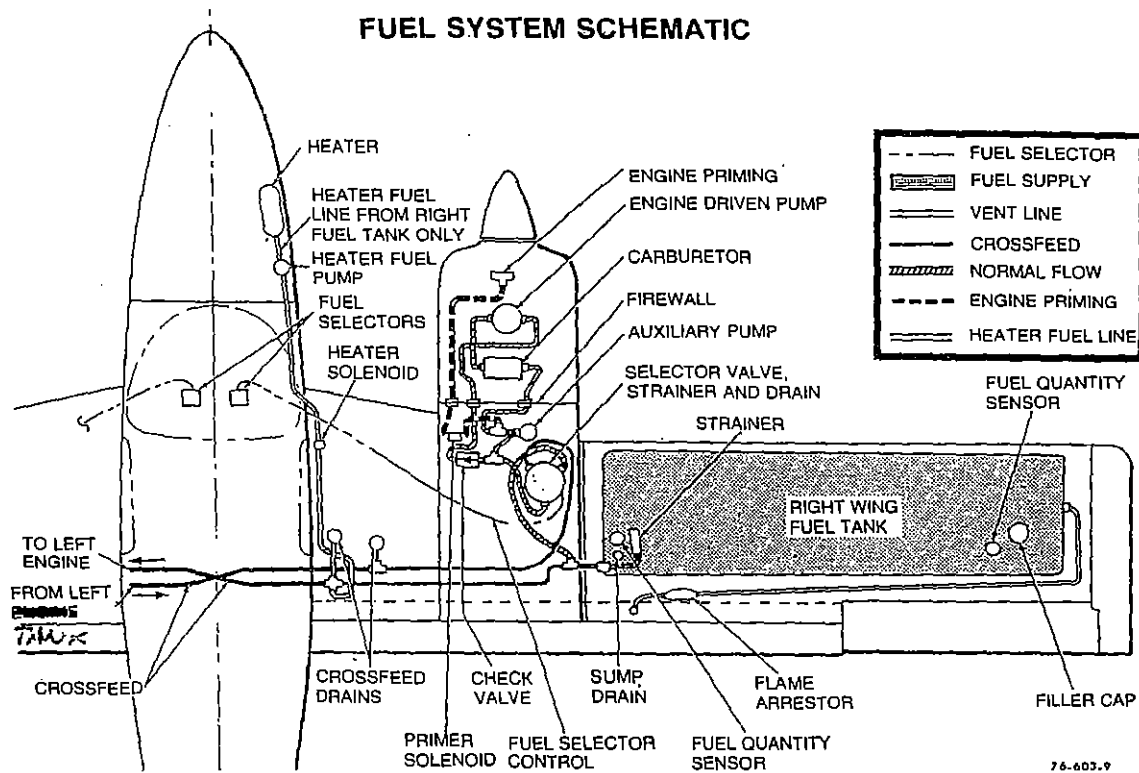

BEECHCRAFT
Duchess 76

Section VII
Systems Description

Section VII
Systems Description

BEECHCRAFT
Duchess 76

FUEL DRAINS

The fuel system is drained at eight locations, four on each wing. A flush sump drain valve is located outboard of each nacelle on the underside of each wing tank. A drain is also provided for the fuel selector valve, located in the outboard underside of each nacelle aft of the firewall. Two flush drains are located inboard of each main gear wheel well for draining the crossfeed fuel lines.

The fuel selector valve drains are actuated manually by pushing up, approximately one-quarter inch, on the lower portion of the drain valve. All other fuel drains are flush-type valves and are actuated by using the combination fuel drain/emergency landing gear tool provided with the loose tools and equipment. Flush-type fuel drains are actuated by pushing in on the valve and then releasing when the desired amount of fuel has been drained. These drain valves can be locked open for the purpose of fuel off-loading or for totally draining the fuel system. Pushing in and turning counterclockwise will lock the drains in the open position. To close, turn clockwise and release.

FUEL QUANTITY INDICATORS

Fuel quantity is measured by two float-operated sensors located in each wing tank system. The sensors transmit electrical signals to the individual indicators, located on the instrument panel, which indicate the amount of fuel remaining in each tank.

AUXILIARY FUEL PUMPS

The electric auxiliary fuel pumps, one for each engine, are located in the nacelle just aft of the firewall. They are controlled by separate rocker-type ON-OFF switches, placarded AUX FUEL PUMP - L ON - R ON, located on the pilot's subpanel. The auxiliary fuel pumps provide pressure for

priming, starting, taxiing, takeoff, and landing. Also, the auxiliary fuel pump provides sufficient pressure for continued engine operation in case the engine-driven fuel pump becomes inoperative.

ENGINE PRIMING

Each engine is equipped with a three-point (no. 1, 2, and 4 cylinders) fuel priming system. The magneto/start switches incorporate a PUSH TO PRIME function to aid in engine starting. The BATTERY MASTER and the AUX FUEL PUMP (L or R) switches must be turned on prior to activating the fuel priming system. The PUSH TO PRIME switch may be actuated in either the BOTH or START position. Pushing in on the magneto/start switch activates a solenoid, located behind the firewall in each nacelle, and supplies fuel directly into the no. 1, 2, and 4 cylinders for engine priming. Engine priming should be used in accordance with the recommendations in the NORMAL PROCEDURES section.

FUEL CROSSFEED

The fuel lines for the engines are interconnected by crossfeed lines. During normal operation each engine uses its own fuel pumps to draw fuel from its respective wing fuel system. However, on emergency crossfeed operations, either engine can consume all the available fuel from the opposite side.

The fuel crossfeed system is provided for use during level flight, emergency conditions only. The system cannot transfer fuel from one wing system to the other. The procedure for using the crossfeed system is described in the EMERGENCY PROCEDURES section.

FUEL REQUIRED FOR FLIGHT

Flight planning and fuel loading are facilitated by the use of fuel quantity indicators that have been coordinated with the usable fuel supply. It is the pilot's responsibility to ascertain

Section VII Systems Description

BEECHCRAFT Duchess 76

that the fuel quantity indicators are functioning and maintaining a reasonable degree of accuracy, and be certain of ample fuel for each flight. A minimum of 9 gallons of fuel is required in each wing system before takeoff.

ELECTRICAL SYSTEM

The system circuitry is the single-wire, ground-return type, with the airplane structure used as the ground return. The alternator switches, battery switch, magneto/start/prime switches, and auxiliary fuel pump switches are located on the pilot's subpanel. This panel contains most of the electrical system switches and switch-type circuit breakers. Each is placarded as to its function. The right subpanel contains the protective circuit breakers for the various electrical systems, and all avionics circuit breakers.

BATTERY

ME-315

One 24-volt, 15.5-ampere-hour, lead-acid battery (ME-183 and after) or one 12-volt, 35-ampere-hour, lead-acid battery (ME-1 thru ME-182) is installed in a battery box in the aft fuselage compartment. An optional installation (ME-183 and after) provides two 12-volt, 25-ampere-hour, lead-acid batteries, electrically connected in series and installed in the battery box. Battery servicing procedures are described in the HANDLING, SERVICING, and MAINTENANCE section.

The battery box is fitted with a lid for access to the battery or batteries. The lid is held in place with two lift-to-release latches.

Battery fumes and gases are vented to the outside through two vents in the lower fuselage skin below the battery box. The vents are so designed that there is a flow of air from the vent to the top of the box and out through the vent at the bottom of the box.

Section VII Systems Description



Section VII
Systems Description

BEECHCRAFT
Duchess 76

ALTERNATORS

Two 55-ampere, 28-volt, belt-driven alternators (*ME-183 and after*) or two 60-ampere, 14-volt, belt-driven alternators (*ME-1 thru ME-182*) are installed in the airplane.

The output of each alternator is controlled by a separate voltage regulator. The alternator systems are completely separate, except for the BUS TIE FUSE (on airplanes ME-103 and after), the mutual tie to the battery bus through two bus isolation circuit breakers, and the paralleling circuit between the regulators. The bus-isolation circuit breakers are used to isolate Bus 1 and Bus 2 from the battery bus circuit. The regulators automatically maintain the bus voltage at a set value for all loads up to the alternator rating. The voltage regulators also maintain approximately equal load sharing between the two alternators.

The self-excitation load capability of the alternators is directly related to engine RPM. The self-excitation feature will not come on until approximately 1200 to 1400 RPM, with a load capability of approximately 50%. However, it will remain on as engine speed is reduced to approximately 850 to 1000 RPM. A maximum load capability of approximately 80% should be obtainable at approximately 2300 RPM engine speed.

CAUTION

During an in-flight emergency, under no condition, shall more load be applied than is absolutely necessary for safe flight condition. Initiation of any flight using the self-excitation feature is strictly prohibited.

Individual alternator output is indicated by the two loadmeters (as opposed to the charge/discharge-type ammeter) located on the instrument panel. The loadmeters give a percentage reading of the load on the system.

There are two pairs of alternator-out warning lights, each pair placarded ALTERNATOR OUT - UNDER/OVER VOLTAGE. Each pair is adjacent to its corresponding loadmeter, located on the instrument panel. Anytime either alternator voltage is $4 \pm .1$ volts (28-volt system) or $2 \pm .1$ volts (14-volt system) below the bus voltage, the corresponding undervoltage alternator-out light will illuminate. When the battery is turned on with both alternators off, both alternator-out undervoltage lights will illuminate. The alternator-out overvoltage light (one for each alternator) will illuminate when the corresponding overvoltage relay is actuated. The overvoltage relay opens the affected alternator field, and the affected alternator voltage will drop to zero. The alternator-out lamps can be tested by pressing the TEST switch located adjacent to the lamps.

STARTERS

The starters are relay-controlled and are actuated by rotary-type, momentary-on switches, incorporated in the magneto/start/prime switches located on the pilot's subpanel. To energize the starter circuit, hold the magneto/start/prime switch in the START position.

Section VII
Systems Description

BEECHCRAFT
Duchess 76

STARTER ENGAGED WARNING LIGHT (ME-333, ME-346 AND AFTER)

The warning light placarded STARTER ENGAGED will illuminate whenever electrical power is being supplied to the starter. If the light remains illuminated after starting, the starter relay has remained engaged and loss of electrical power may result. The battery and alternator switches should be turned off if the light remains illuminated after starting. If the light does not illuminate during starting, the indicator system is inoperative and the loadmeters should be monitored to ensure that the starter does not remain energized after starting.

EXTERNAL POWER

The external power receptacle is located either on the right (ME-1 through ME-440) or on the left (ME-441 and after) side of the fuselage, just aft of the cabin area. A negatively grounded external power source may be used for engine starting or for ground electrical system checks. Airplanes equipped with 14-volt systems (ME-1 through ME-182) require a power unit setting of 14 volts, $\pm .2$ volts. Airplanes equipped with 28-volt system (ME-183 and after) require a power unit setting of 28 volts, $\pm .2$ volts.

CAUTION

On 14-volt airplanes, the power pin for external power is connected directly to the battery and continually energized. Turn off alternator switches, all electrical and avionics switches, and turn on battery switch before connecting the auxiliary power unit plug. Assure correct polarity (negative ground) before connecting auxiliary power unit.

CAUTION

On 28-volt airplanes, a reverse polarity diode protection system is between the external power receptacle and the main bus. With external power applied, the bus is powered. Turn on the battery switch only with all other switches including avionics switches off before connecting the auxiliary power unit. Assure correct polarity before connecting external power.

When auxiliary power is desired, connect the clamps of the power cable to the remote power source, ensuring proper polarity. Turn OFF the ALT switches and ensure that all avionics equipment is OFF, and then turn ON the BATT switch. Insert the power cable plug into the receptacle, turn on auxiliary power unit, and start engine using the normal starting procedures.

Section VII
Systems Description

BEEHCRAFT
Duchess 76

INTENTIONALLY LEFT BLANK

**BEEHCRAFT
Duchess 76**

**Section VII
Systems Description**

INTENTIONALLY LEFT BLANK

Section VII
Systems Description

BEECHCRAFT
Duchess 76

LIGHTING SYSTEMS

INTERIOR LIGHTING

Lighting for the instrument panel is controlled by two rheostat switches located on the copilot's subpanel to the right of the control console. One switch, placarded INSTR FLOOD, controls the intensity of the overhead instrument flood light and the overhead map light. The other switch, placarded POST LIGHTS, adjusts the intensity of all post lights installed, magnetic compass light, and the internally lit engine instruments. The cabin dome light is controlled by the switch located adjacent to the light.

EXTERIOR LIGHTING

The switches for all exterior lights are located on the lower portion of the pilot's subpanel. Each circuit is protected by a circuit-breaker-type switch.

The exterior lights consist of a landing light on the outboard leading-edge portion of the left wing, a taxi light on the outboard leading-edge portion of each wing, navigation lights on the wing tips and empennage, and a strobe light located on each wing tip. For longer battery and lamp life, use the landing light and the taxi lights sparingly; avoid prolonged operation which could cause overheating during ground maneuvering.

NOTE

Particularly at night, reflections from anti-collision lights on clouds, dense haze, or dust can produce optical illusions and intense vertigo. Such lights, when installed, should be turned off before entering an overcast; their use may not be advisable under instrument or limited VFR conditions.

ENVIRONMENTAL SYSTEMS

CABIN HEATING

A 45,000 Btu-per-hour combustion air heater, located on the right side in the nose compartment, provides heated air for cabin warming and windshield defrosting. The heater system consists of a combustion air heater, three-position control switch, three push-pull control knobs, heater circuit breaker, manual reset limit (overheat) switch, combustion air blower, ventilation air blower, and a duct thermostat.

Fuel for the combustion heater is routed from the right wing fuel system, through a solenoid valve, to the heater fuel pump located under the heater, and into the combustion chamber of the heater. Fuel consumption of the heater is approximately $\frac{2}{3}$ gallons per hour and should be considered during flight planning.


NOTE

The fuel solenoid is energized only if the duct thermostat, which controls the heater, requires a higher temperature.

Three outlets are located in the cabin to distribute the heated air into the cabin. One outlet is located on the lower forward cabin bulkhead and provides heated air for the pilot and copilot compartment. The second outlet is located between the pilot and copilot seats and faces aft, to provide heated air to the aft cabin area. The defrost duct is routed from the heater to the windshield outlet for windshield defrosting.

**Section VII
Systems Description**

**BEECHCRAFT
Duchess 76**

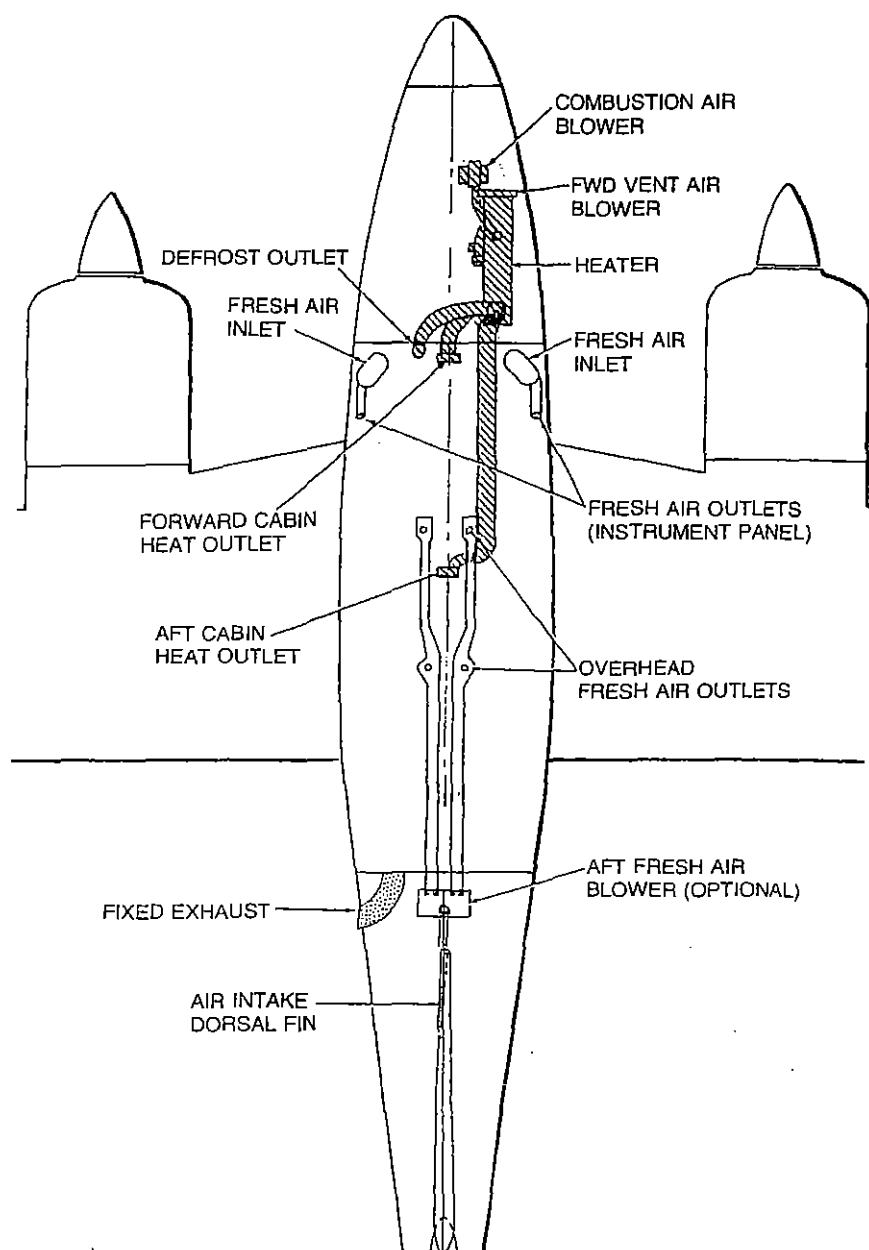

ENVIRONMENTAL SCHEMATIC

The manual reset limit (overheat) switch (inaccessible during flight), located on the heater, shuts off the heat system in case the discharge temperature reaches 300° F.

CAUTION

The entire system should be inspected and the malfunction determined and corrected before re-setting the overheat switch.

HEATER OPERATION

1. The three-position switch on the pilot's subpanel, placarded HEATER - ON, BLOWER ONLY, OFF, must be in the ON position to place the heating system in operation.
2. The push-pull knob on the left sidewall, placarded DEFROST - PULL ON, controls the amount of air required for windshield defrosting.
3. The push-pull knob, located below the defrost knob, placarded CABIN AIR - PULL OFF, controls the amount of air entering the cabin from the heater. Pulling the knob more than approximately one-half closed deactivates the heater in order to prevent heater overtemp.

NOTE

For maximum heat, the CABIN AIR control can be pulled partially out to reduce the volume of incoming cold air and permitting the heater to raise the temperature of the admitted air. However, if the CABIN AIR control is pulled out more than halfway, the heater will not operate.

Section VII
Systems Description

BEECHCRAFT
Duchess 76

4. The push-pull knob, located below the cabin air control, placarded CABIN TEMP - PULL TO INCREASE, controls the temperature of the air entering the cabin. Pulling aft on the knob increases the temperature at which the duct thermostat switch opens (controlling the heater).

CABIN VENTILATION

In flight, to provide unheated air through the same outlets used for heating, push the CABIN AIR and CABIN TEMP controls forward. The air intake for this system is located on the right side of the nose compartment.

For ventilation through these same outlets during ground operation, push the CABIN AIR control forward and place the three-position switch, on the pilot's subpanel, in the BLOWER ONLY position. The BLOWER ONLY position is for ground operation only and will shut off the blower when the landing gear is retracted.

Fresh ram air is also provided through an outlet located on each side of the instrument panel. Fresh air for these outlets enters the two vents located immediately forward of the windshield. Rotation of the outlets controls the flow of air.

OVERHEAD FRESH AIR OUTLETS

Fresh air from the intake on the left side of the dorsal fin is ducted to the individual outlets located above each seat. The volume of air at each outlet can be regulated by rotating the outlet. Each outlet can be positioned to direct the flow of air as desired. An optional fresh air blower for this system is located in the aft fuselage. The blower is controlled by the

circuit breaker switch on the pilot's subpanel placarded CABIN AIR BLOWER. The blower is designed for ground operation and climb-out and should be turned off during cruise.

EXHAUST VENT

A fixed cabin exhaust vent is located on the left side of the aft fuselage and provides for flow-through ventilation.

PITOT AND STATIC SYSTEMS

The pitot and static systems provide a source of impact and static air for the operation of the flight instruments.

PITOT SYSTEM

A standard pitot tube for the pilot's flight instruments is located on the outboard portion of the left wing leading edge. The optional pitot tube (ME-44 and after) for the copilot's flight instruments is located on the outboard portion of the right wing leading edge.

PITOT HEAT

A heating element is installed in the pitot mast and is controlled by the rocker-type switch located on the pilot's subpanel. The switch is placarded PITOT HEAT - ON, and should remain off during ground operations except for testing or for short intervals of time to remove ice or snow from the mast. One switch controls the heating elements in both pitot masts.

Section VII Systems Description

BEECHCRAFT Duchess 76

STATIC SYSTEM

Static air is taken from a flush static port located on each side of the aft fuselage. The static air is routed to the rate-of-climb indicator, altimeter, and airspeed indicator.

The alternate static air source is designed to provide a source of static pressure to the instruments from inside the fuselage should the outside static air ports become blocked. An abnormal reading of the instruments supplied with static air could indicate a restriction in the outside static air ports. A lever on the lower sidewall adjacent to the pilot, is placarded OFF NORMAL - ON ALTERNATE. When it is desired or required to use this alternate source of static air, select the ON ALTERNATE position. To recognize the need and procedures for the use of alternate static air, refer to the EMERGENCY PROCEDURES section. Airspeed Calibration and Altimeter Correction graphs are in the PERFORMANCE section.

The static air plumbing is drained by placing the lever in the ON ALTERNATE position momentarily and then returning it to the OFF NORMAL position.

PRESSURE SYSTEM

Pressure for the flight instruments and autopilot (if installed) is supplied by two, engine-driven, dry, pressure pumps interconnected to form a single system. If either pump fails, check valves automatically close and the remaining pump continues to operate all gyro instruments. A pressure gage on the pilot's subpanel indicates pressure in inches of mercury. Two red buttons on the pressure gage serve as source failure indicators, each for its respective side of the system. The pressure system incorporates a central filter which protects the instruments. This disposable filter is installed in the nose compartment and must be replaced in accordance with the recommendations in the SERVICING section.

STALL WARNING

The stall warning system consists of a sensing vane installed on the leading edge of each wing, a circuit breaker located on the right subpanel placarded STALL & GEAR WARN, and a stall warning horn in the overhead speaker console. The stall warning horn will sound a warning signal while there is time for the pilot to correct the attitude. The horn is triggered by the sensing vane on the left wing anytime the flaps are above approximately 16°. When the flaps are extended beyond approximately 16°, the vane on the right wing will activate the warning horn.

NOTE

With the BATT and ALT switches in the OFF position, the stall warning horn is inoperative.

BEECHCRAFT
Duchess 76

SECTION VIII

HANDLING, SERVICING AND MAINTENANCE

TABLE OF CONTENTS

<i>SUBJECT</i>	<i>PAGE</i>
Introduction to Servicing	8-3
Publications	8-4
Airplane Inspection Periods	8-4
Preventive Maintenance That May Be Accomplished	
By a Certificated Pilot	8-5
Alterations or Repairs to Airplane.....	8-5
GROUND HANDLING	8-6
Towing	8-6
Parking	8-6
Tie-Down	8-7
Jacking	8-8
Prolonged Out of Service Care	8-8
Flyable Storage – 7 to 30 Days	8-8
External Power	8-11
SERVICING.....	8-13
Fuel System.....	8-13
Fuel Tanks	8-13
Fuel Drains.....	8-13
Fuel Strainers.....	8-14
Oil System	8-14
Battery	8-16
Tires.....	8-17
Shock Struts	8-18

Section VIII
Handling, Serv and Maint

BEECHCRAFT
Duchess 76

TABLE OF CONTENTS (CONTINUED)

<i>SUBJECT</i>	<i>PAGE</i>
Brakes	8-20
Induction Air Filters	8-20
Instrument Air Filter	8-21
Propellers	8-22
Propeller Dome Air Pressure Setting	8-22
Propeller Blade Bearing Lubrication	8-23
MINOR MAINTENANCE.....	8-23
Cabin Heater.....	8-23
Alternators	8-24
Magnetos.....	8-25
Cleaning	8-26
Exterior Painted Surfaces.....	8-26
Windshield and Windows	8-27
Engine.....	8-28
Interior.....	8-28
Lubrication Points	8-30
Recommended Servicing Schedule.....	8-38
Consumable Materials	8-46
Approved Engine Oils	8-48
Lamp Bulb Replacement Guide	8-51
Overhaul and Replacement Guide.....	8-52
Wing Structure Inspection Schedule.....	8-55

INTRODUCTION TO SERVICING

The purpose of this section is to outline the requirements for maintaining the airplane in a condition equal to that of its original manufacture. This information sets the time frequency intervals at which the airplane should be taken to a BEECHCRAFT Aero or Aviation Center or International Distributor or Dealer for periodic servicing or preventive maintenance.

The Federal Aviation Regulations place the responsibility for the maintenance of this airplane on the owner and the operator, who must ensure that all maintenance is done by qualified mechanics in conformity with all airworthiness requirements established for this airplane.

All limits, procedures, safety practices, time limits, servicing and maintenance requirements contained in this handbook are considered mandatory.

Authorized BEECHCRAFT Aero or Aviation Centers or International Distributors or Dealers can provide recommended modification, service, and operating procedures issued by both the FAA and Beech Aircraft Corporation, which are designed to get maximum utility and safety from the airplane.

If a question should arise concerning the care of the airplane, it is important to include the airplane serial number in any correspondence. The serial number appears on the model designation placard, attached to the right side of the fuselage adjacent to the inboard end of the flap. The placard is visible when the flaps are lowered.

PUBLICATIONS

The following publications are available through BEECHCRAFT Aero or Aviation Centers or International Distributors or Dealers.

1. Maintenance Manual
2. Parts Catalog
3. Wiring Diagram Manual
4. Continuous Care Inspection Guide
5. 100-Hour Inspection Guide
6. Service Instructions

Neither Service Publications, Reissues, nor Revisions are automatically provided to the holder of this handbook. For information on how to obtain "Revision Service" applicable to this handbook, consult a BEECHCRAFT Aero or Aviation Center or International Distributor or Dealer or refer to the latest revision of BEECHCRAFT Service Instructions No. 0250-010.

AIRPLANE INSPECTION PERIODS

1. FAA Required 100-Hour and/or Annual Inspections.
2. Continuous Care Inspection Guide.
3. See "Recommended Servicing Schedule" and "Overhaul or Replacement Schedule" for further inspection schedules.
4. Check the wing bolts for proper torque at the first 100 hour inspection and at the first 100 hour inspection after each reinstallation of the wing attach bolts.

**PREVENTIVE MAINTENANCE THAT MAY BE ACCOM-
PLISHED BY A CERTIFICATED PILOT**

1. A certificated pilot may perform limited maintenance. Refer to FAR Part 43 for the items which may be accomplished. To ensure proper procedures are followed, obtain a BEECHCRAFT Duchess 76 Maintenance Manual before performing preventive maintenance.
2. All other maintenance must be performed by licensed personnel.

NOTE

Pilots operating airplanes of other than U. S. registry should refer to the regulations of the country of certification for information on preventive maintenance that may be performed by pilots.

ALTERATIONS OR REPAIRS TO AIRPLANE

The FAA should be contacted prior to any alterations on the airplane to ensure that the airworthiness of the airplane is not violated.

NOTE

Alterations or repairs to the airplane must be accomplished by licensed personnel.

GROUND HANDLING

The three-view drawing shows the minimum hangar clearances for a standard airplane. Allowances must be made for any special radio antennas.

CAUTION

To ensure adequate propeller clearance, always observe recommended shock strut servicing procedures and tire inflation pressures.

TOWING

One person can move the airplane on a smooth and level surface with the hand tow bar. Attach the tow bar to the nose landing gear tow bar fitting. It is recommended to have someone in the airplane to operate the brakes.

CAUTION

Do not exert force on the propellers or control surfaces. When towing with a tug, limit turns to prevent damage to the nose gear. Do not tow when the main gear is obstructed by mud or snow.

PARKING

The parking brake push-pull control is located to the right of the control console on the copilot's subpanel. To set the

parking brakes, pull the control out and depress each toe pedal until firm. Push the control in to release the brakes.

NOTE

The parking brake should be left off and wheel chocks installed if the airplane is to remain unattended. Changes in ambient temperature can cause the brakes to release or to exert excessive pressures.

TIE-DOWN

It is advisable to nose the airplane into the wind. Three tie-down lugs are provided; one on the lower side of each wing, and a third at the rear of the fuselage.

1. Install the control lock assembly.
2. Chock the main wheels fore and aft.
3. Using nylon line or chain of sufficient strength, secure the airplane at the three points provided. DO NOT OVER TIGHTEN; if the line at the rear of the fuselage is excessively tight, the nose may rise and produce lift due to the angle of attack of the wings.
4. Release the parking brake.

If high winds are anticipated, a vertical tail post should be installed at the rear tie-down lug, and a tie-down line attached to the nose gear.

JACKING

Place a scissors jack under the axle to raise the individual gear for wheel and tire removal.

Jack pads are installed inboard of the main gears to facilitate landing gear retraction checks. Use of a tail stand, and the tail anchored to a ground tie-down or a weight of 450 lbs secured to the airplane tail tie-down ring, is required when jacking.

CAUTION

Never raise the airplane higher than necessary and use extreme caution when entering or leaving the airplane while it is on jacks.

The landing gear circuit breaker should be pulled and the emergency gear extension valve should be open to relieve pressure in the hydraulic system, in order to prevent inadvertent retraction of the landing gear when airplane is jacked.

PROLONGED OUT OF SERVICE CARE

The storage procedures are intended to protect the airplane from deterioration while it is not in use. The primary objectives of these measures are to prevent corrosion and damage from exposure to the elements.

FLYABLE STORAGE - 7 to 30 DAYS

MOORING

Place the airplane in a hangar. If the airplane cannot be placed in a hangar, tie down securely at the three tie-down

**BEECHCRAFT
Duchess 76**

**Section VIII
Handling, Serv and Maint**

points provided on the airplane. Do not use hemp or manila rope. It is recommended a tail support be used to lightly compress the nose strut, which will reduce the wing angle of attack. Attach a line to the nose gear.

FUEL TANKS

Fill fuel tanks to capacity to minimize fuel vapor.

FLIGHT CONTROL SURFACES

Lock flight control surfaces with internal and external locks.

GROUNDING

Static ground airplane securely and effectively.

PITOT TUBE

Install pitot tube cover.

WINDSHIELD AND WINDOWS

Close all windows. It is recommended that covers be installed over the windshield and windows.

DURING FLYABLE STORAGE

In a favorable atmospheric environment the engine of an airplane that is flown intermittently can be adequately protected from corrosion by turning the engine over five revolutions by means of the propeller. This will dispel any beads of moisture that may have accumulated and spread the residual lubricating oil around the cylinder walls. Unless the airplane is flown, repeat this procedure every five days.

WARNING

Be sure the magneto/start switch is OFF, the throttle CLOSED, and mixture control in the IDLE CUT-OFF position before turning the propeller. Do not stand in the path of propeller blades. Also, ground running the engine for brief periods of time is not a substitute for turning the engine over by hand; in fact, the practice of ground running will tend to aggravate rather than minimize corrosion formation in the engine.

After 30 days, the airplane should be flown for 30 minutes or a ground runup should be made long enough to produce an oil temperature within the lower green arc range. Excessive ground runup should be avoided.

PREPARATION FOR SERVICE

Remove all covers, clean the airplane, and give it a thorough inspection, particularly landing gear, wheel wells, flaps, control surfaces, and pitot and static pressure openings.

Preflight the airplane.

If the airplane is to be stored longer than 30 days, refer to the appropriate airplane shop manual and Avco Lycoming Service Letter L180.

EXTERNAL POWER

To supply power for ground checks or to assist in starting, use only an external power source that is negatively grounded. The receptacle is located on the right side (ME-1 through ME-440), or on the left side (ME-441 and after), of the aft fuselage.

CAUTION

On 14-volt airplanes, the power pin for external power is connected directly to the battery and continually energized. Turn off alternator switches, all electrical and avionics switches, and turn on battery switch before connecting the auxiliary power unit plug. Assure correct polarity (negative ground) before connecting auxiliary power unit.

On 28-volt airplanes, a reverse polarity diode protection system is between the external power receptacle and the main bus. With external power applied, the bus is powered. Turn on the battery switch only with all other switches including avionics switches off before connecting the auxiliary power unit. Assure correct polarity before connecting external power.

Observe the following precautions when connecting an external power source:

1. Remove the protective cover from the external power receptacle of the airplane.

Section VIII
Handling, Serv and Maint

BEECHCRAFT
Duchess 76

2. Use only an auxiliary power source that is negatively grounded which has a voltage of $28.0 \pm .2$ vdc (*ME-183 and after*). For *ME-1 through ME-182* voltage: $14.0 \pm .2$ vdc. If the polarity of the power source is unknown, determine the polarity with a voltmeter before connecting the unit to the airplane.
3. Before connecting an auxiliary power source, turn OFF all radio equipment, the alternator switches, and turn ON the battery switch.
4. Turn the auxiliary power source OFF prior to connecting the external power cable to the auxiliary power source. Connect the positive clamp of the cable to the positive terminal of the power source and the negative clamp to the negative terminal of the power source. (If a battery is used as the power source, connect the positive terminal of the cable to the positive terminal of the power source or battery. Isolate the negative cable clamp.)
5. Connect the external power cable into the external power receptacle. Turn the auxiliary power source ON. (If a battery is used as the power source, connect the negative cable clamp to the negative terminal of the power source or to a suitable ground point.)
6. On 14-volt airplanes only, the battery switch must be ON to connect the auxiliary power source to the airplane bus.

Observe the following precautions when disconnecting an external power source:

1. Turn the auxiliary power source OFF. (If a battery has been used for a power source, disconnect the negative clamp of the external power cable and isolate it.)
2. Remove the external power cable from the airplane receptacle. Replace the protective cover in the external power receptacle.
3. Disconnect the external power cable from the auxiliary power source.

SERVICING

FUEL SYSTEM

FUEL TANKS

See CONSUMABLE MATERIALS for recommended fuel grades. The fuel system has a total capacity of 103 gallons. The fuel filler caps, one in each wing, are located outboard of each nacelle. Refer to the LIMITATIONS section for usable fuel.

CAUTION

Connect a grounding cable from the fuel service unit to the airframe, and connect grounding cables from both the fuel service unit and the airplane to ground during fueling operations. This procedure reduces fire hazard.

To prevent damage to the fuel tanks, do not insert the fuel nozzle more than three inches into the filler neck. Secure the filler caps immediately after filling.

FUEL DRAINS

The fuel system is equipped with a total of 8 drains, 4 drains per wing. A drain valve is located outboard of each nacelle on the underside of each wing tank. A drain is also provided for the selector valve, located in the outboard underside of each nacelle, behind the firewall. Two drains are located inboard of each main gear wheel well for draining crossfeed fuel lines.

Section VIII
Handling, Serv and Maint

BEECHCRAFT
Duchess 76

The fuel selector valve drains are actuated by a manual "up" movement of .1 to .25 inch. All other fuel drains are flush valves and are opened by using the combination fuel drain/landing gear emergency extension tool.

Open each of the eight fuel drains daily to allow condensed moisture to drain from the system.

FUEL STRAINERS

To preclude the possibility of contaminated fuel, always cap any disconnected fuel lines or fittings. Most fuel system malfunctions can be attributed to contaminated fuel. Inspecting and cleaning the fuel strainers should be considered to be of the utmost importance as a regular part of preventive maintenance.

Normally, the fuel selector valve strainer should be cleaned and inspected every 100 hours of operation. However, the strainer should be inspected and cleaned at more frequent intervals depending on service conditions, fuel handling equipment, and when operating in localities where there is an excessive amount of sand or dust.

Ordinarily, the fuel strainers in the fuel tank outlets should not require cleaning unless there is a definite indication of solid foreign material in the tanks, or the airplane has been stored for an extended period.

OIL SYSTEM

The engines are equipped with a wet sump, pressure-type oil system. Each engine sump has a capacity of 8 quarts. Ser-

ving the oil system is provided through access doors in the engine cowlings.

NOTE

Due to the canted position of the engines, the dipsticks are calibrated for either right or left engines and are not interchangeable.

The oil should be changed every 100 hours and the oil filter should be changed every 50 hours, under normal operating conditions. The engines should be warmed to operating temperature to assure complete draining of the oil. The cowlings should be removed from the engines for changing the oil and the oil filter. Check the used oil filter for metal particles. (Refer to the Duchess 76 Maintenance Manual.)

The engine manufacturer recommends the use of ashless dispersant oil after the oil consumption has stabilized, or after the first 50 hours of operation. In order to promote faster ring seating and oil control, a straight mineral type oil conforming to MIL-L-6082 may be used until the oil consumption has stabilized, not to exceed 50 hours of operation. Oil of seasonal viscosity, added to maintain the proper oil level during this period, must comply with MIL-L-6082. After the oil consumption has stabilized or after the first 50 hours of operation, aviation grade ashless dispersant oil complying with MIL-L-22851 should be used.

Section VIII
Handling, Serv and Maint

BEECHCRAFT
Duchess 76

RECOMMENDED OIL GRADES FOR ENGINES

AVERAGE AMBIENT AIR TEMPERATURE	MIL-L-6082 Grades	MIL-L-22851 Ashless Dispersant Grades
Above 60° F	SAE 50	SAE 40 or SAE 50
30° F to 90° F	SAE 40	SAE 40
0° F to 70° F	SAE 30	SAE 40, SAE 30 or SAE 20W40
Below 10° F	SAE 20	SAE 30 or SAE 20W30

Refer to Avco Lycoming Service Instruction 1014J or later revision for additional information.

BATTERY

Access to the lead acid battery or batteries is obtained by removing the rear baggage compartment panel and the battery box lid, located aft of the panel. Check the electrolyte level after each 25 hours of operation and add only distilled water as required.

NOTE

Do not fill the battery or batteries over one-half inch above the separators. Only lead-acid equipment should be used when servicing lead-acid type batteries. Use electrolyte of 1.285 Specific Gravity Only.

A systematic battery maintenance program should be established and carefully followed and a log maintained of services performed. The battery must be kept clean and dry for peak performance. If foreign materials are present in sufficient quantities, the resultant deposits may form conductive paths that permit a rapid discharge of the battery. The battery should be serviced and cleaned after each 100 hours of service or 30 days, whichever occurs first, as outlined in the Duchess 76 Maintenance Manual. Clean, tight connections should be maintained at all times.

Battery vents should be checked periodically for obstructions and for proper protrusion (one to three inches) from the skin line. Since either vent may serve as the intake, one vent chamfer should face forward, the other aft (*ME-1 thru ME-182*). Airplanes *ME-183 and after* have no protruding tubes. These vents are designed to produce a venturi effect.

TIRES

The main wheel tires are 6.00x6, 6-ply rating, type III tube type. The nose wheel tire is a 5.00x5, 6-ply rating, type III tube type.

Inflate the tires to 38 psi. When installing a new nose wheel tire, ensure that there is .15 to .25 inch clearance between the fork and the inflated new tire. Maintaining the recommended tire inflation will help to avoid damage from landing shock and contact with sharp stones and ruts, and will minimize tread wear. When inflating tires, inspect them visually for cracks, breaks, wear, or evidence of internal damage.

CAUTION

Beech Aircraft Corporation cannot recommend the use of recapped tires. Recapped tires have a tendency to swell as a result of the increased temperature generated during takeoff. Increased tire size can jeopardize proper function of the landing gear retract system, with the possibility of damage to the landing gear doors and retract mechanism.

SHOCK STRUTS

The shock struts are filled with compressed air and MIL-H-5606 hydraulic fluid. The same procedure is used for servicing both the main and nose shock struts. The shock strut may be served as follows:

1. Remove the air valve cap and depress the valve core to release the air pressure.

WARNING

Do not unscrew the air valve assembly until the air pressure has been released. Otherwise, it may be blown off with considerable force, causing injury to personnel or property damage.

2. Remove the air valve assembly.
3. With the strut in the vertical position and approximately one-fourth inch from fully compressed, fill with MIL-H-5606 hydraulic fluid until the fluid overflows.

4. Cycle the strut (full extension to compressed) and refill as described in step "3". Repeat until fluid cannot be added to the strut in the compressed position.

NOTE

Cycling of the shock strut is necessary to expel any trapped air within the strut housing.

5. Install the air valve assembly.
6. With the airplane on jacks, inflate the nose gear strut with dry air or nitrogen to 250 psi and the main gear strut to 300 psi; or, with the airplane resting on the ground and the fuel tanks full, inflate the nose gear strut until four and one-fourth inches of the piston is exposed, and main gear strut until two inches of the piston is exposed. Rock the airplane gently to prevent possible binding of the piston in the barrel while inflating with the airplane on the ground.

NOTE

The preferred method of inflation is with the airplane on jacks and set the pressure rather than trying to set the strut extension. It is recommended that the nose strut inflation dimension and the tire inflation pressure be carefully adhered to. Properly inflated tires and struts reduce the possibility of ground damage occurring to the propellers. Exercise caution when taxiing over rough surfaces.

Section VIII
Handling, Serv and Maint

BEECHCRAFT
Duchess 76

7. The shock strut piston must be clean. Remove foreign material by wiping the strut with a cloth dampened in hydraulic fluid.

WARNING

NEVER FILL SHOCK STRUTS WITH OXYGEN.

BRAKES

Brake system servicing is limited primarily to maintaining the hydraulic fluid level in the reservoir. The brake fluid reservoir is located on the left forward side of the forward cabin bulkhead, and is accessible through the small access door on the large access door on the left side of the nose compartment. Fill the reservoir with the MIL-H-5606 hydraulic fluid to the FULL mark on the dipstick. Maintain the fluid level between the FULL and ADD marks. Do not overfill.

The brake disc should be replaced when its thickness measures 0.450 inch.

INDUCTION AIR FILTERS

The induction air filters should be removed, cleaned, and inspected each 50 hours of service. Replacement is recommended at 300 hours for normal operation, and more frequently should conditions warrant. The filter should be cleaned in accordance with the instructions printed on the filter.

1. Remove the upper engine cowl to gain access to the induction air filter, located at the rear of each engine.

**BEECHCRAFT
Duchess 76**

**Section VIII
Handling, Serv and Maint**

2. Remove the screws which secure the filter to the inlet and outlet ducts.
3. Remove the filter from the airplane.

NOTE

When reinstalling the induction air filter, observe the direction of the air flow as marked on the filter.

4. Position the filter and install the screws to secure the filter to the inlet and outlet ducts.
5. Install the upper engine cowling.

INSTRUMENT AIR FILTER

A central filter for the instrument air system is a disposable unit and must be discarded and replaced at 300 to 500 hour intervals, or more often if conditions warrant.

1. Remove the nose compartment access panel and access plates on the nose compartment floor to gain access to the filter located below the floor on the left side, forward of the cabin bulkhead.
2. Remove the clamps at the inlet and outlet of the filter.
3. Remove the filter from the airplane.
4. Position the new filter (note direction of air flow), install the inlet and outlet hoses, and secure in place with clamps at the inlet and outlet of the filter.
5. Install access plates on the nose compartment floor and nose compartment access panel.

PROPELLERS

Propeller Owners Manual and Log Book, and Overhaul Instructions are furnished with the airplane. Maintenance instructions are provided in the Duchess 76 Maintenance Manual.

WARNING

When servicing a propeller, always make certain the MAGNETO/START switches are OFF and the engines have cooled completely. **STAND IN THE CLEAR WHEN MOVING A PROPELLER. THERE IS ALWAYS SOME DANGER OF A CYLINDER FIRING WHEN A PROPELLER IS MOVED.**

PROPELLER DOME AIR PRESSURE SETTING

1. Remove the propeller spinner dome cap retaining screws and remove the propeller spinner dome cap.
2. Service the propeller air dome cylinder with dry air or nitrogen to a correct pressure as follows:

70° F to 100° F — 41 ± 1 psi

40° F to 70° F — 38 ± 1 psi

0° F to 40° F — 36 ± 1 psi

-30° F to 0° F — 33 ± 1 psi

3. Position the propeller spinner dome cap and secure with the retaining screws.

PROPELLER BLADE BEARING LUBRICATION

1. Remove the spinner dome cap retaining screws and remove the spinner dome cap.
2. Remove the spinner dome retaining screws and remove the spinner dome.
3. Remove the safety wire and covers from the grease fittings.
4. Remove one grease fitting from each blade.
5. Lubricate the blade bearings with MIL-G-23827 grease by placing the grease gun fitting on the remaining fittings on each blade. Fill until the grease is visible in the hole where the opposite fitting was removed.
6. Clean the excess grease from the propeller, reinstall the grease fittings, covers, and safety wire on each blade.
7. Position the spinner dome and install the retaining screws.
8. Position the spinner dome cap and install the retaining screws.

WARNING

The propellers are not interchangeable between left and right engines.

MINOR MAINTENANCE

CABIN HEATER

The heater fuel pump is located on the right side of the nose compartment below the heater, and is accessible through the right side nose compartment access panel.

The manual reset limit (overheat) switch, located on the heater, shuts off the system until reset in case the discharge temperature reaches 300° F.

CAUTION

The entire system should be inspected and the malfunction determined and corrected before re-setting the overheat switch.

Every 500 hours of heater operation, the heater should be removed from the airplane and disassembled. All parts should be thoroughly inspected, necessary repairs made and parts replaced. (Refer to the Duchess 76 Maintenance Manual.)

ALTERNATORS

Since the alternators and electronic voltage regulators are designed for use on only one polarity system, the following precautionary measures must be observed when working on the charging circuit or serious damage to the electrical equipment will result:

1. When installing a battery, make certain that the ground polarity of the battery and the ground polarity of the alternator are the same.
2. When connecting a booster battery, be sure to connect the negative battery terminals together and the positive battery terminals together.
3. When using a battery charger, connect the positive lead of the charger to the positive battery terminal and the negative lead of the charger to the negative battery terminal.
4. Do not operate an alternator on open circuit. Be sure all circuit connections are secure.
5. Do not short across or ground any of the terminals on the alternator or electronic voltage regulator.
6. Do not attempt to polarize an alternator.

MAGNETOS

CAUTION

Before installing a new magneto, it is vitally important to check the identification plate for the proper part number to ensure the correct magneto is installed on the proper engine. The magnetos are not interchangeable between left and right engines.

The magneto ignition system should be checked after the first 50 hours of operation and every 100 hours thereafter. Contact point clearance for the magneto right main breaker is $.016 \pm .004$, left main breaker is $.016 \pm .002$. Points with deep pits or with excessively burned areas should be discarded. Inspect the cam follower felt pad for proper lubrication and clean the breaker compartment with a clean dry cloth.

WARNING

To be safe, treat all magnetos as hot whenever the ground lead is disconnected. To ground the magneto, disconnect the ignition switch lead wire at the capacitor and ground the capacitor pole. If this is impractical, remove the ignition harness on the magneto or disconnect the spark plug leads.

CLEANING

EXTERIOR PAINTED SURFACES

NOTE

Acrylic urethane paint finishes are fully cured at the time of delivery.

Because wax seals the paint from the outside air, a new acrylic urethane or lacquer paint job should not be waxed for a period of 90 days to allow the paint to cure. Wash uncured painted surfaces with only cold or lukewarm (never hot) water and a mild non-detergent soap. Any rubbing of the painted surface should be done gently and held to a minimum.

CAUTION

When washing the airplane with mild soap and water, use special care to avoid washing away grease from any lubricated area. After washing with solvent in the wheel well areas, lubricate all lubrication points. Premature wear of lubricated surfaces may result if the above precautions are not taken.

Prior to cleaning, cover the wheels, making certain the brake discs are covered. Attach the pitot cover securely, and plug or mask off all other openings. Be particularly careful to mask off all static air buttons before washing or waxing.

**BEECHCRAFT
Duchess 76**

**Section VIII
Handling, Serv and Maint**

After the paint cures, a thorough waxing will protect painted and unpainted metal surfaces from a variety of highly corrosive elements. Flush loose dirt away first with clear water, then wash the airplane with a mild soap and water. Harsh, abrasive, or alkaline soaps or detergents should never be used. Use a soft cleaning cloth or chamois to prevent scratches when cleaning. Any good grade of non-abrasive and non-silicone wax may be used to preserve painted surfaces. To remove stubborn oil and grease, use a soft cloth dampened with aliphatic naphtha. After cleaning with naphtha, the surface should be rewaxed.

WINDSHIELD AND WINDOWS

CAUTION

Do not scratch windows when cleaning. Do not use an ice scraper to remove ice from windows.

A commercial cleaning compound made specifically for acrylic plastic windows may be used. When using a commercial cleaner, follow the instructions on the container.

If a commercial cleaner is not available, the following instructions should be followed:

Cleaning of the acrylic plastic windows should never be attempted when dry. Use only clean water (an open bucket of water can collect sand/debris which could scratch windshields) and a mild soap for cleaning. Wash the windows with plenty of soap and water, using the palm of the hand to dislodge dirt and mud. Follow up with soapy water to remove grease or stains. Flush the surface with rinse water and rub

Section VIII
Handling, Serv and Maint

BEECHCRAFT
Duchess 76

slightly with a grit-free soft cloth, chamois or sponge. Stubborn grease or oil deposits are readily removed with aliphatic naphtha or hexane. Rinse with clear water.

CAUTION

Do not use thinner or aromatic abrasive cleaners to clean the windows as they will damage the surface of the plastic. Aliphatic naphtha and similar solvents are highly inflammable, and extreme care must be exercised when used.

ENGINE

Clean the engine with kerosene, solvent, or any standard engine cleaning fluid. Spray or brush the fluid over the engine, then wash off with water and allow to dry.

INTERIOR

The seats, rugs, upholstery panels, and headliner should be vacuum-cleaned frequently. Do not use water to clean fabric surfaces. Commercial foam-type cleaners or shampoos can be used to clean carpets, fabrics, and upholstery; however, the instructions on the container should be followed carefully.


Proper care and cleaning of the interior cabin trim (Noryl and Kydex plastics) is of primary importance to maintain a desirable appearance. Washing the interior cabin trim with a detergent soap and water, and brush scrubbing with a soft bristle brush, will dislodge most dirt. Rinse with clean water and

wipe dry. Alcohol may be used to remove foreign material that is alcohol soluble.

CAUTION

The interior cabin trim can be easily damaged if cleaned with methyl ethyl ketone, naphtha, Mufti standard solvent, gasoline, lacquer thinner and other types of thinners. Sharp edges or cuts on the edge of the interior cabin trim material may cause it to crack.


76-604-10

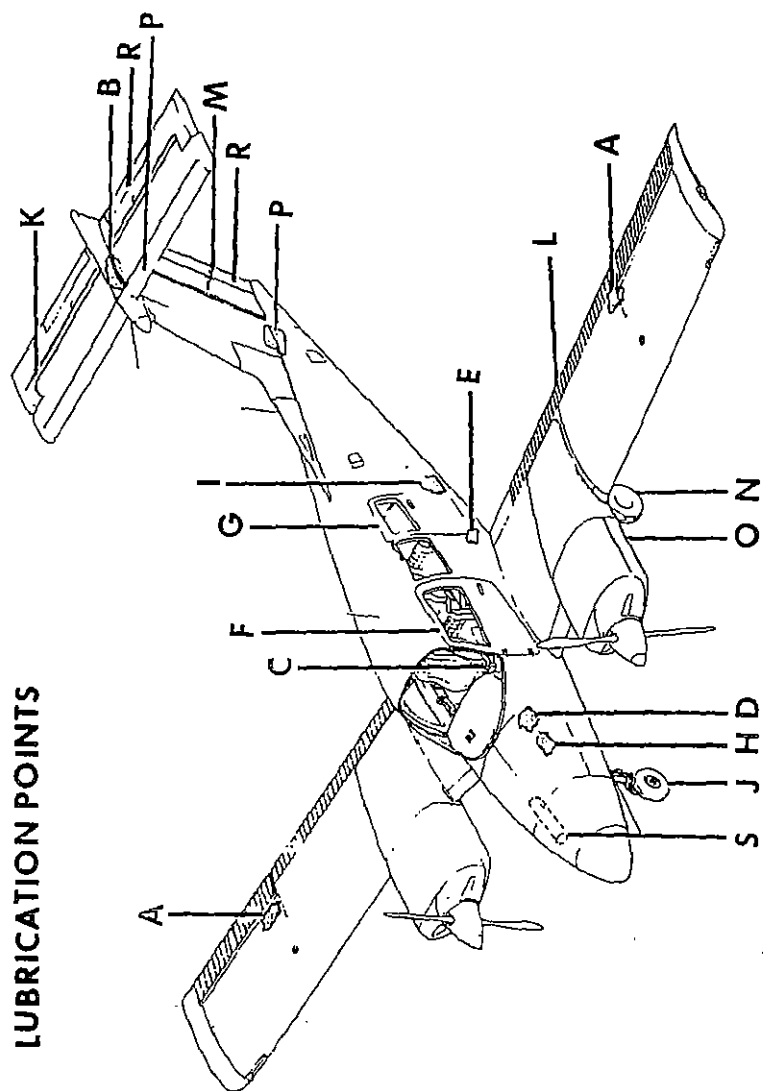

**BEECHCRAFT
Duchess 76**


**Section VIII
Handling, Serv and Maint**

A

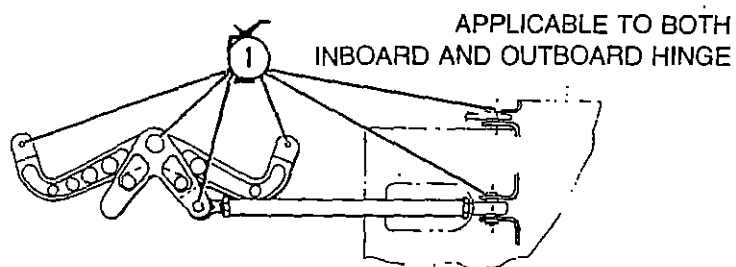


AILERON BELL CRANK AND PUSHROD

B

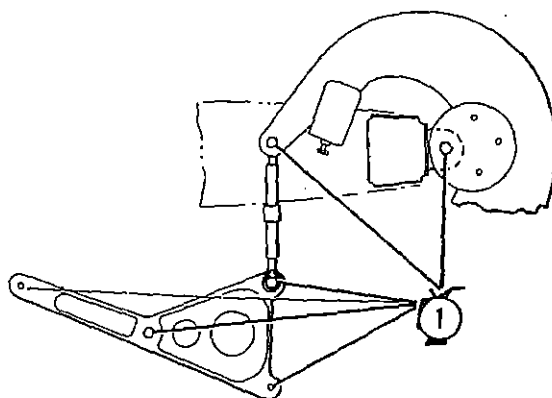

ELEVATOR BELL CRANK, PUSHROD AND HORN


C

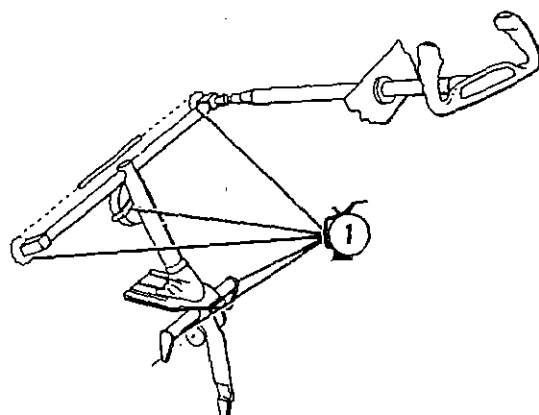

CONTROL COLUMN


76-604-11

D

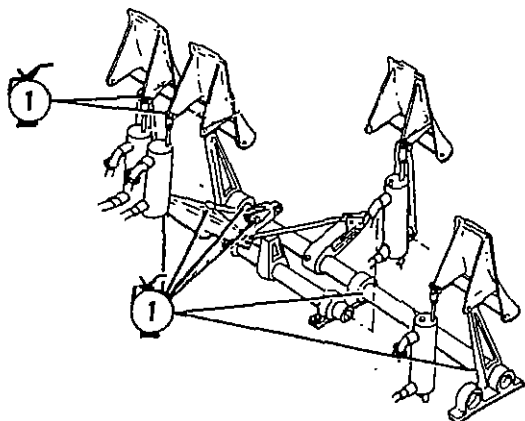


**RUDDER PEDAL ASSEMBLY AND
BRAKE MASTER CYLINDERS**

E

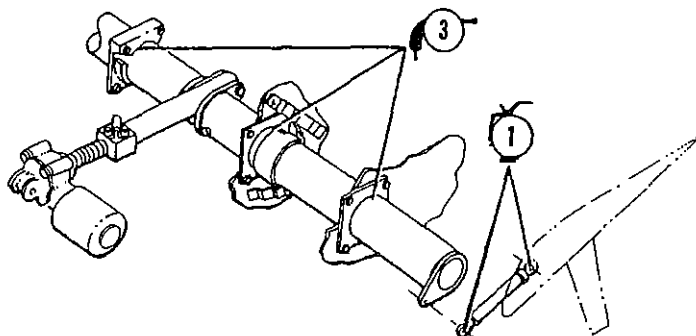

ELECTRIC FLAP ACTUATOR ASSEMBLY

F

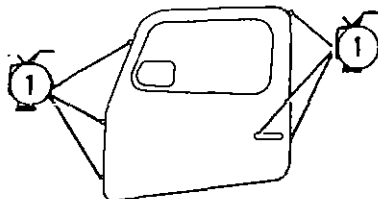


CABIN DOOR

76-604-12

**BEECHCRAFT
Duchess 76**


**Section VIII
Handling, Serv and Maint**

G

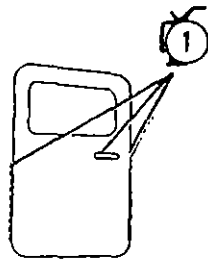


BAGGAGE DOOR

H

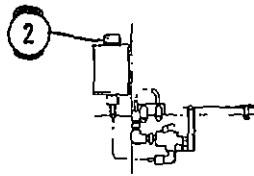


BRAKE RESERVOIR AND PARKING BRAKE VALVE

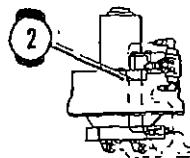

LANDING GEAR HYDRAULIC PUMP AND RESERVOIR


76-604-13

J

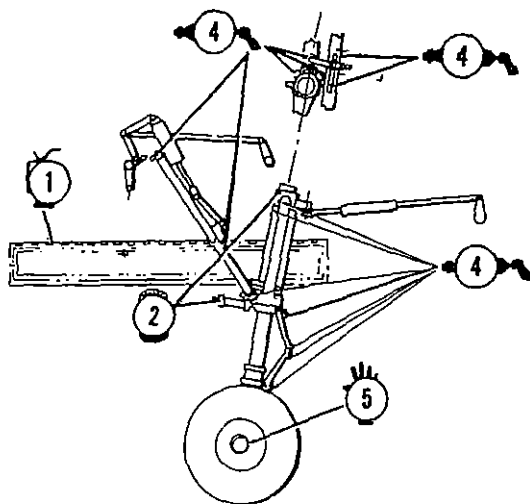


NOSE GEAR INSTALLATION AND DOORS

K

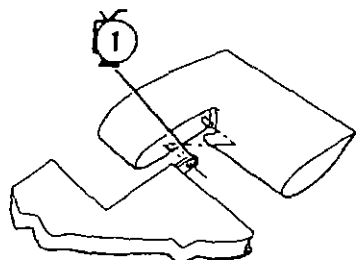

ELEVATOR STABILIZER HINGE

L

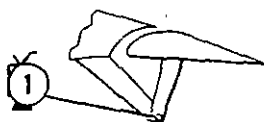


FLAP INSTALLATION

76-604-14

BEECHCRAFT
Duchess 76


Section VIII
Handling, Serv and Maint

M

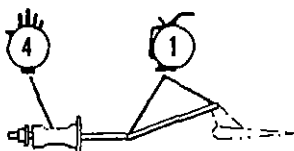


RUDDER AND ELEVATOR TAB ACTUATOR

N

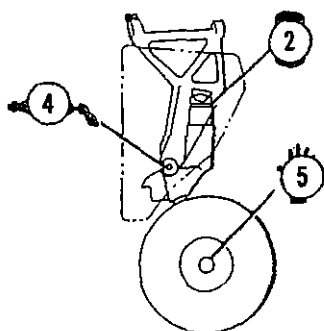

MAIN LANDING GEAR


O

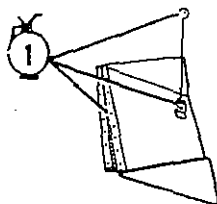

COWL FLAP

76-604-15

P

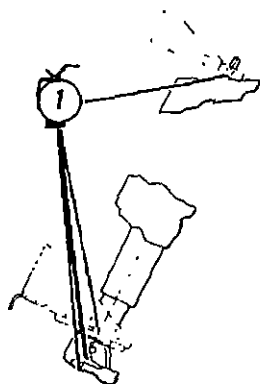


UPPER AND LOWER RUDDER INSTALLATION

R



ELEVATOR AND RUDDER TAB HINGE

S

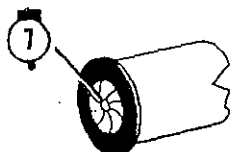

HEATER

76-604-16



ZERK FITTING



FLUID CONTAINER



SQUIRT CAN



HAND OR PACK



SPRAY



BRUSH

76-604-17

Letters are keyed to the Recommended Servicing Schedule. Numbers refer to items in Consumable Materials chart. Symbols, as shown above, indicate the method of lubrication.

Lubricate all plain bearing bushings, all push-pull control housings and all flight control pulley bushings, as required, or every 500 hours with SAE 10W30 oil.

Exercise care when using MIL-G-23827 greases as they contain a rust preventative which will discolor painted surfaces.

RECOMMENDED SERVICING SCHEDULE

INTER- VAL	ITEM	LOCATION (Letters refer to Lubri- cation Points Diagram)	MATERIALS (Numbers refer to Items in Consumable Materials)
25 Hrs	Check Battery Electrolyte Level	Aft of aft cabin bulkhead	Distilled water only
	Lube Nose Landing Gear Linkage (13 places)	Nose landing gear (J)	(4)
	Lube Lower Fork Attach Point (2 places)	Main landing gear (N)	(4)
50 Hrs	Change Engine Oil Filters	Remove engine cowl	Refer to Maintenance Manual
	Clean Engine Induction Air Filters	Remove upper engine cowling	Clean per instructions on filter

January 1978

8-39

100 Hrs	Change Engine Oil	Remove engine cowl	(8) Refer to Maintenance Manual
	Clean Fuel Selector Valve Fuel Strainers	Remove the access cover on the bottom of each nacelle (O)	Clean with clean solvent (10)
	Clean, Test and Regap Spark Plugs	Remove engine cowl, both sides of each engine	—
	Check Magneto Timing	Remove engine cowl	Refer to Maintenance Manual
	Check Emergency Locator Transmitter	Right side of aft fuselage	Tune radio to 121.5 MHz on VHF or 243 MHz on UHF, then turn ELT switch to ON and monitor for one signal. Turn ELT switch OFF, then place in ARM position.
	Lube Aileron Bell Crank and Push Rod Linkage (12 places)	Left and right ailerons (A)	(1)

BEECHCRAFT
Duchess 76Section VIII
Handling, Serv and Maint

8-40

January 1978

INTER- VAL	ITEM	LOCATION (Letters refer to Lubri- cation Points Diagram)	MATERIALS (Numbers refer to Items in Consumable Materials)
100 Hrs (Cont'd)	Lube Elevator Bell Crank Link- age (6 places)	Elevator (B)	(1)
	Lube Electric Flap Actuator Torque Shaft (3 places)	Under aft cabin floorboards under rear passenger seats (E)	(3)
	Lube Electric Flap Actuator Rod Assembly (4 places)	Flap (E)	(1)
	Lube Cabin Door Hinges and Latch Mechanisms (12 places)	Left and right cabin doors (F)	(1)
	Lube Baggage Door Hinge and Latch Mechanisms (3 places)	Baggage door (G)	(1)

Section VIII
Handling, Serv and Maint

BEECHCRAFT
Duchess 76

January 1978

8-41

100 Hrs (Cont'd)	Lube Nose Landing Gear Door Hinges	Nose landing gear doors (J)	(1)
	Lube Nose Landing Gear Wheel Bearing	Nose landing gear (J)	(5)
	Lube Elevator Stabilizer Hinge (2 places)	Elevator (K)	(1)
	Lube Flap Installation Hinge (6 places)	Flap (L)	(1)
	Lube Rudder and Elevator Tab Actuator Rod Hinges (2 places)	Empennage (M)	(1)
	Lube Main Landing Gear Wheel Bearings	Main landing gear (N)	(5)
	Lube Cowl Flap Hinge and Attach Points (4 places)	Left and right nacelles (O)	(1)

BEECHCRAFT
Duchess 76Section VIII
Handling, Serv and Maint

INTER- VAL	ITEM	LOCATION (Letters refer to Lubri- cation Points Diagram)	MATERIALS (Numbers refer to Items in Consumable Materials)
100 Hrs (Cont'd)	Lube Upper and Lower Rudder Installation Attach Points (4 places)	Rudder (P)	(1)
	Lube Elevator Tab and Rudder Tab Hinges	Elevator tab and rudder tab (R)	(7)
	Clean Static Air Buttons	Aft fuselage	Clean with solvent (10) and wipe dry with a clean rag
	Drain Static Air Lines	Flight compartment left side panel, forward of door frame	—
	Check Scupper Drains - Drain Guards Open, Facing Aft and Drain Holes are Free from Ob- structions	Rear fuselage and empen- nage	—

January 1978

8-43

300 Hrs	Replace Induction Air Filters	Remove upper engine cowl	Refer to Maintenance Manual
300 to 500 Hrs	Replace Instrument Air Filter	Under nose compartment floor, left side	Refer to Maintenance Manual
500 Hrs	Lube Rudder Pedals and Linkage (18 places)	Flight Compartment (D)	(1)
1000 Hrs	Lube Control Column Linkage (5 places)	Forward of instrument panel (C)	(1)
1200 Hrs	Lube Rudder Tab and Elevator Tab Actuator	Empennage	(4) Refer to Maintenance Manual
As Req.	Lube Magneto Cam Follower Felt (2 places)	Remove engine cowl	(9)
	Service Brake Reservoir	Through small access door on large access door - left side of nose compartment (H)	(2)

BEECHCRAFT
Ducess 76Section VIII
Handling, Serv and Maint

8-44

January 1978

INTER- VAL	ITEM	LOCATION (Letters refer to Lubri- cation Points Diagram)	MATERIALS (Numbers refer to Items in Consumable Materials)
As Req. (Cont'd)	Service Hydraulic Pump Re- servoir	Aft of aft cabin bulkhead (I)	(2)
	Service Nose Landing Gear Shock Strut and Shimmy Dampener	Nose landing gear (J)	(2) Refer to Maintenance Manual
	Service Main Landing Gear Shock Struts	Main landing gear (N)	(2) Refer to Maintenance Manual
	Lube Heater Iris Valve	Through access door, right lower nose compartment (S)	(7)
††	Check Emergency Locator Transmitter Battery	Right side of aft fuselage	-

Section VIII
Handling, Serv and MaintBEECHCRAFT
Duchess 76

- NOTES:
1. Any time the control surfaces are repainted, or repaired, they must be rebalanced per Maintenance Manual.
 2. Check the wing bolts for proper torque at the first 100-hour inspection and at the first 100-hour inspection after each reinstallation of the wing attach bolts.

†† Rechargeable Batteries: Recharge after one cumulative hour of use or after 50% of the useful charge life.
Non-Rechargeable Batteries: Replace after one cumulative hour or after 50% of the useful life.

CONSUMABLE MATERIALS

Only the basic number of each Military Specification is included in the Consumable Materials Chart. No attempt has been made to update the basic number with the letter suffix that designates the current issues of the various specifications.

Vendors listed as meeting Federal and Military Specifications are provided as reference only and are not specifically recommended by Beech Aircraft Corporation; consequently, any product conforming to the specification listed may be used. The products listed below have been tested and approved for aviation usage by Beech Aircraft Corporation, by the vendor, or by compliance with the applicable specifications. Other products that are locally procurable which conform to the requirements of the applicable Military Specification may be used even though not specifically included herein.

It is the responsibility of the operator/user to determine the current revision of the applicable Military Specification prior to usage of that item. This determination may be made by contacting the vendor of a specific item.

ITEM MATERIAL	SPECIFICATION
1. Lubricating Oil	SAE 10W30
2. Hydraulic Fluid	MIL-H-5606
3. Lubricant Krylon Heavy Duty	Silicon Spray No. 1325, No. 1329 or Equivalent
4. Lubricating Grease (Aircraft & Instrument, High and Low Temperature)	MIL-G-23827
*5. Grease (Hi-Temp)	MIL-G-81322
6. Item deleted	

**BEECHCRAFT
Duchess 76**

**Section VIII
Handling, Serv and Maint**

****7. Molybdenum Disulfide	MIL-M-7866
**8. Engine Oil	MIL-L-22851
9. Lubricant, Felt	10-86527
10. Solvent	Federal Specification PD 680
11. Engine Fuel	100 (Green) or 100 LL (Blue) Minimum Grade Fuel
12. Corrosion Preventive Compound	MIL-C-6529 (Anti-Corrode No. 205)
***13. Engine Fuel Additive	ALCOR TCP Concentrate

* In extremely cold climates use MIL-G-23827 grease in place of MIL-G-81322. (These greases are harmful to paint.)

** Ashless dispersant oil complying with MIL-L-22851 is recommended after the oil consumption has stabilized or after the first 50 hours of operation. A straight mineral oil conforming to MIL-L-6082 may be used until the oil consumption has stabilized, not to exceed 50 hours of operation. Oil of seasonal viscosity, added to maintain the proper oil level during this break-in period, must comply with MIL-L-6082.

*** Product of Alcor, Inc., San Antonio, Texas 78284

**** For use on elevator and rudder tab hinge mix with naphtha into a paste and apply with a brush.

Section VIII
Handling, Serv and Maint

BEECHCRAFT
Duchess 76

APPROVED ENGINE OILS

COMPANY	BRAND NAME
Delta Petroleum Co., Inc.	*Global Concentrate A
Enjay Chemical Company	*Paranox 160 and 165
Mobil Oil Corporation	*RT-451, RM-173E, RM-180E
Shell Oil Company	*Shell Concentrate A - Code 60068 *Aeroshell W120 *Aeroshell W80
Texaco Incorporated	*TX-6309 *Aircraft Engine Oil Premium AD120 *Aircraft Engine Oil Premium AD80
American Oil and Supply Co.	*PQ Aviation Lubricant 753
Chevron Oil Company	*Chevron Aero Oil Grade 120
Humble Oil and Refining Co.	*Esso Aviation Oil E-120 *Enco Aviation Oil E-120 *Esso Aviation Oil A-100 *Enco Aviation Oil A-100 *Esso Aviation Oil E-80 *Enco Aviation Oil E-80
Standard Oil Company of California	*Chevron Aero Oil Grade 120

**BEECHCRAFT
Duchess 76**

**Section VIII
Handling, Serv and Maint**

Castrol Oils, Canada Ltd. **Castrolaero 113, Grade 1065
 **Castrolaero 117, Grade 1100

Champlin Oil and Re- **Grade 1065
fining Co. **Grade 1100

Chevron Oil Company **Chevron Aviation Oil 65
 **Grade 1100

Continental Oil **Conoco Aero Oil 1065
Company **Conoco Aero Oil 1100

Mobil Oil Corporation **Avrex 101/1065
 ** 101/1100

Phillips Petroleum Co. **Phillips 66 Aviation Engine Oil,
 Grade 1065
 **Phillips 66 Aviation Engine Oil,
 Grade 1100

Shell Oil Company **Aeroshell Oil 65
 **Aeroshell Oil 100

* Ashless Dispersant Oils Complying with MIL-L-22851

NOTE

Ashless dispersant oil complying with MIL-L-22851 is recommended after the oil consumption has stabilized or after the first 50 hours of operation.

Section VIII
Handling, Serv and Maint

BEEHCRAFT
Duchess 76

**** Straight Mineral Oils Complying with MIL-L-6082**

NOTE

A straight mineral oil conforming to MIL-L-6082 may be used until the oil consumption has stabilized, not to exceed 50 hours of operation. Oil of seasonal viscosity, added to maintain the proper oil level during this break-in period, must comply with MIL-L-6082.

Vendors listed as meeting Federal and Military Specifications are provided as reference only and are not specifically recommended by Beech Aircraft Corporation. Any product conforming to the specification may be used.

April 1979

LAMP BULB REPLACEMENT GUIDE

LOCATION	NUMBER	
	*14 VOLT	**28 VOLT
Post Lights	330	327
Compass Light	330	327
Cabin Dome Light	89	303
Taxi Lights	4595	4594
Landing Light	4313	4596
Tail Light	1777	1683
Landing Gear In-transit Lights	330	327
Overhead Instrument Panel Lights	89	303
Engine Instrument Cluster Light	266	267
Wing Tip Lights	A7512-12	A7512-24
Strobe Light, Wing	55-0221-3 (Flashtube)	55-0221-3 (Flashtube)
Engine Instrument Post Lights	330	327
Landing Gear Down and Locked Lights	330	327

*14-VOLT: ME-1 thru ME-182
 **28-VOLT: ME-183 and after

BEECHCRAFT
 Duchess 76

Section VIII
 Handling, Serv and Maint

8-51

OVERHAUL AND REPLACEMENT GUIDE

The first overhaul or replacement should be performed not later than the required period. The condition of the item at the end of the first period can be used as a criterion for determining subsequent periods applicable to the individual airplane or fleet operation, providing the operator has an approved monitoring system.

The time periods for inspections noted in this handbook are based on average usage and average environmental conditions.

SPECIAL CONDITIONS CAUTIONARY NOTICE

Airplanes operated for Air Taxi or other than normal operation, and airplanes operated in humid tropics or cold and damp climates, etc., may need more frequent inspections for wear, corrosion and/or lack of lubrication. In these areas, periodic inspections should be performed until the operator can set his own inspection periods based on experience.

NOTE

The required periods do not constitute a guarantee that the item will reach the period without malfunction as the aforementioned factors cannot be controlled by the manufacturer.

NOTE

On-condition items are to be overhauled or replaced when inspection or performance of these items reveal a potentially unsafe or unserviceable condition.

COMPONENT OVERHAUL OR REPLACE

POWER PLANT

NOTE

A TBO (time between overhaul) recommendation is in no way to be construed as a warranty or engine life proration basis. The TBO recommendation is based on the projected time for most advantageous initial overhaul. The individual operator's experience may indicate a departure in either direction from the recommended TBO for the particular operation.

NOTE

When an engine has been overhauled, or a new engine installed, it is recommended that low power settings NOT be used until oil consumption has stabilized. The average time for piston ring seating is approximately 50 hours. Refer to Lycoming Engine Operator's Manual.

Engines	Refer to latest edition Avco-Lycoming SI 1009
Propellers	Refer to latest edition Hartzell Bulletin 61
Magnetos	At engine overhaul
Dry air pressure pumps	Every 1400 hours or on condition
All hoses	Hoses carrying flammable liquids; at engine overhaul or every 5 years, whichever occurs first.

OVERHAUL AND REPLACEMENT GUIDE (Cont'd)

COMPONENT	OVERHAUL OR REPLACE
-----------	---------------------

FUEL SYSTEM

All hoses	Hoses carrying flammable liquids; at engine overhaul or every 5 years whichever occurs first.
-----------	---

ELECTRICAL SYSTEM

Starter	At engine overhaul
Alternator	At engine overhaul
Battery (Emergency Locator Transmitter)	Per applicable regulations, or by date stamped on battery, whichever occurs first.

UTILITY SYSTEM

Cabin heater	Refer to latest edition Janitrol Maintenance & Overhaul Manual 11D74 and applicable Airworthiness Directives.
--------------	--

WING STRUCTURE INSPECTION SCHEDULE

The basic wing structure has a substantiated life of 20,000 flight hours provided the mandatory inspection requirements of chapter four of the BEECHCRAFT DUCHESS 76 MAINTENANCE MANUAL are complied with.

NOTE

Anytime the control surfaces are repaired or repainted, they must be rebalanced as described in the Maintenance Manual.

BEECHCRAFT
Duchess 76

SECTION IX

SUPPLEMENTS

NOTE

The supplemental data contained in this section is for equipment that was delivered on the airplane including standard optional equipment that was available, whether it was installed or not. Airplane Flight Manual Supplements for equipment for which the vendor obtained a Supplemental Type Certificate were included as loose equipment with the airplane at the time of delivery. These and other Airplane Flight Manual Supplements for other equipment that was installed after the airplane was delivered new from the factory should be placed in this Supplemental Data Section IX, of this Pilot's Operating Handbook and FAA Approved Airplane Flight Manual.

**Section IX
Supplements**

**BEEHCRAFT
Duchess 76**

INTENTIONALLY LEFT BLANK

BEECHCRAFT
Duchess 76

Section IX
Supplements

PILOT'S OPERATING HANDBOOK
and
FAA APPROVED AIRPLANE FLIGHT MANUAL

LOG OF SUPPLEMENTS

FAA Supplements must be in the airplane for flight operation when subject equipment is installed:				
Supp. No.	Part Number	Subject	Rev. No.	Date
1	105-590000-25	King KNS-80 Integrated Navigation System		1/80

January 1980

BEECHCRAFT DUCHESS 76

LANDPLANE

PILOT'S OPERATING HANDBOOK AND FAA APPROVED AIRPLANE FLIGHT MANUAL SUPPLEMENT for the KING KNS-80 INTEGRATED NAVIGATION SYSTEM

GENERAL

The information in this supplement is FAA-approved material and must be attached to the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual when the airplane has been modified by installation of the King KNS-80 Navigation System in accordance with Beech-approved data.

The information in this supplement supersedes or adds to the basic Pilot's Operating Handbook and FAA Approved Airplane Flight Manual only as set forth within this document. Users of the manual are advised always to refer to the supplement for possibly superseding information and placarding applicable to operation of the airplane.

LIMITATIONS

1. The Area Navigation mode may not be used as a primary system under IFR conditions except on approved approach procedures, approved airways, and random area navigation routes when approved by Air Traffic Control.

2. The Area Navigation mode can only be used with colocated facilities (VOR and DME signals originate from the same geographical location).

FAA Approved
Issued January, 1980
P/N 105-590000-25

3. VOR or VOR-PAR modes must be selected when flying directly to or from a VORTAC facility.

EMERGENCY PROCEDURES

CAUTION

DME may unlock due to loss of signal with certain combinations of distance from station, altitude and angle of bank.

1. If NAV flag appears while in the Area Navigation mode, check for correct frequency.
2. If VOR or DME equipment is intermittent or lost, utilize other navigation equipment as required.
3. If NAV flag appears during an approach, execute published missed approach and utilize another approved facility.

NORMAL PROCEDURES

PREFLIGHT

AREA NAVIGATION FUNCTIONAL TEST

The following procedure applies only to airports equipped with, or in range of, a colocated VOR/DME station.

1. Place the KNS-80 in VOR mode.
2. Find and record the angle to the VOR station by centering the D-Bar with a TO indication.

FAA Approved
Issued January, 1980
P/N 105-590000-25

3. Program a waypoint radial angle 120° greater than the indicated VOR radial.

4. Program a waypoint distance equal to the indicated DME value.

5. Place the KNS-80 in RNAV ENR.

6. Rotate the OBS until the D-Bar centers with a TO indication.

The KNS-80 distance-to-station should now read a value equal to the DME distance ($\pm .5\text{NM}$), and the indicated selected course should read 60° greater than the recorded VOR angle to station.

PROGRAMMING

Pertinent information (waypoint number, station frequency, waypoint bearing, and waypoint distance) for up to four waypoints is entered into the memory from the control unit. Programming may be completed prior to takeoff or during the flight. Any combination of navigational facilities (RNAV waypoint, VOR/DME, ILS) may be loaded into the computer; however, it is desirable that each facility be numbered and loaded in the sequence it is to be used.

RNAV WAYPOINTS

1. Turn the system on by rotating the ON/OFF switch clockwise.

2. Put waypoint 1 in the DSP window by depressing the DSP button. Push button as many times as necessary to go through the 1-2-3-4-1 sequence to reach "1".

3. Select the waypoint 1 frequency using the data input controls, which are the two concentric knobs on the right.

4. Select the waypoint 1 radial by depressing the DATA button. This will cause the radial for the previous waypoint 1 to appear over the annunciation RAD. Select the new radial with the data input controls.

5. Select the waypoint 1 distance by again depressing the DATA button. This will cause the distance for the previous waypoint 1 to appear over the annunciation DST. Select the new distance with the data input controls.

6. This completes the programming for the first waypoint. Follow these procedures for all selected waypoints up to a maximum of four.

CONVENTIONAL VOR

The programming technique for conventional navigation directly toward or away from a VOR facility without a colocated DME is similar to that for RNAV waypoints. Inputting the waypoint number and frequency into the memory is accomplished in the same manner. Since the station has no DME, it cannot be electronically "moved" to a new location (waypoint). Therefore, no values are programmed in the RAD or DST displays.

ILS APPROACH (Front course and Back course)

Programming an ILS approach is accomplished in the same manner as programming conventional VOR.

MISSED APPROACH

If the published missed approach utilizes an RNAV waypoint or VOR facility, it may be entered into the memory any time prior to the approach. This is accomplished in the same manner set forth in CONVENTIONAL VOR and RNAV WAYPOINTS in this section.

**FAA Approved
Issued January, 1980
P/N 105-590000-25**

INFLIGHT

Preset waypoints may be recalled from memory and put into active use as required.

1. Press the DSP button as required to select the desired waypoint. The preset waypoint frequency will replace the active waypoint frequency on the display. The selected waypoint number will appear (blinking) over the DSP annunciation. This blinking display is to indicate that the frequency displayed is other than the active waypoint. The waypoint radial and distance may also be checked at this time by pressing the DSP button for each.

2. Verify that the data is correct.

NOTE

Revisions to the waypoint data can be programmed at this time by entering the new waypoint parameters.

3. When navigation to the displayed waypoint is desired, press the USE button. The waypoint number will appear above the USE annunciation on the display board and the number above the DSP annunciation will cease blinking. The new waypoint frequency will automatically appear.

NOTE

When "Time To Station" indicates "0," actual time may be anything from 0 to 59 seconds.

RNAV OPERATION

If the system is receiving valid signals from a colocated VOR-LOC facility, it will supply linear deviation information to the Horizontal Situation Indicator (or Course Deviation Indicator). Enroute (RNV ENR) sensitivity, available by pressing the RNAV button, provides a constant course width of ± 5 NM. Approach (RNV APR) sensitivity, available by pushing the RNAV button again, provides a constant course width of $\pm 1\frac{1}{4}$ NM. Approach sensitivity should be used when within 10 miles of the terminal waypoint. Time and distance to the waypoint, and computed groundspeed are displayed at the top of the display panel.

CONVENTIONAL VOR OPERATION

VOR or VOR-PAR modes are selected by pressing the VOR button; once for VOR and a second time for VOR-PAR. In VOR mode DME is automatically tuned, and distance, groundspeed and time-to-station to the VORTAC station will be displayed upon lock-on. The HSI (CDI) will display conventional angular crosstrack deviation from the selected course ($\pm 10^\circ$ full scale). In VOR-PAR mode operation is identical to VOR except the HSI (CDI) will display crosstrack deviation of ± 5 NM full scale from the selected course. Course width will be constant irrespective of distance from the VORTAC.

ILS OPERATION

The ILS mode is annunciated whenever an ILS frequency is put "in use". LOC/GS functions are annunciated by the LOC and GS flags in the HSI (CDI). Only angular deviation is provided in the ILS mode.

DME HOLD OPERATION

The DME Hold (HLD) function inhibits changing the DME

FAA Approved
Issued January, 1980
P/N 105-590000-25

receiver frequency. Pressing the HOLD button and then selecting a new waypoint forces the KNS-80 into either a conventional VOR or ILS mode of operation according to the newly selected frequency.

Engage DME HOLD as follows:

1. Press the HOLD button.
2. Select the new frequency using the data input controls. HLD will now annunciate. Distance will continue to be read to the VORTAC and information to the HSI (CDI) will be from the newly selected station.

RNAV APPROACH

The RNAV Approach (RNV-APR) mode may be used for runway location (by placing a waypoint at the approach end of the runway) during an approach to an airport. Press the RNAV button to select RNV-APR. In RNV-APR the deviation needle on the HSI (CDI) will display crosstrack deviation of $\pm 1\frac{1}{4}$ NM full scale. All other aspects of the RNV-APR mode are identical to the RNV-ENR mode.

PERFORMANCE - No change

WEIGHT AND BALANCE - No change

SYSTEMS DESCRIPTION

The King KNS-80 is an integrated navigation system combining a 200 channel VOR/Localizer receiver, a 40 channel glideslope receiver, a 200 channel DME, and a digital RNAV computer with a capability for preselection and

storage of 4 VOR/LOC frequencies and RNAV waypoint parameters.

The KNS-80 can be operated in any one of three basic modes: VOR, RNAV, or ILS. To change from one mode to another the appropriate pushbutton switch is pressed, except that the ILS mode is entered automatically whenever an ILS frequency is channeled in the USE waypoint. The display will annunciate the mode by lighting a message above the pushbutton. In addition to the standard VOR and RNAV enroute (RNV ENR) modes, the KNS-80 has a constant course width or parallel VOR mode (VOR-PAR) and an RNAV approach mode (RNV APR). To place the unit in either of these secondary modes, the VOR pushbutton or the RNAV pushbutton, as the case may be, is pushed a second time. Repetitive pushing of the VOR button will cause the system to alternate between the VOR and VOR-PAR modes, while repetitive pushing of the RNAV button causes the system to alternate between RNV ENR and RNV APR modes.

All waypoint information, station frequency, waypoint distance, and waypoint radial are entered with the increment/decrement rotary switch on the right side of the panel and displayed in the right hand readout. The small knob affects the lower significant digits while the large knob changes the most significant digits. The tenth's position of waypoint radial and distance can be changed by pulling the small knob to the out position. The type of data being displayed is indicated by the illuminated messages (FRQ, RAD, DST) located directly below the displayed data. Frequency, radial, or distance information for a waypoint can be displayed sequentially by pressing the "DATA" pushbutton. The increment/decrement switch changes only the information being displayed.

The KNS-80 can store frequency, radial, and distance information for up to four waypoints. The waypoint number

FAA Approved
Issued January, 1980
P/N 105-590000-25

of the data being displayed is located above the message DSP. The DSP waypoint number is changed by pressing the DSP button. The number of the waypoint being used for navigation is indicated by the number above the message USE. If the waypoint in use is different from the displayed waypoint, the DSP waypoint number blinks. Pressing the USE button causes the waypoint in use to match the displayed waypoint.

Normally, the DME is tuned to the station paired with the VOR frequency. The tuning of the DME may be frozen by depressing the HOLD button. Subsequent rechanneling of the NAV receiver will cause the HLD light to illuminate. The DME will "hold" the frequency it was tuned to at the time the button was depressed.

DISPLAYS

1. NM Display

a. VOR and VOR-PAR modes

Displays DME distance in 0.1 NM increments from 0 to 99.9 NM and in 1 NM increments from 100 to 200 NM. Displays dashes whenever DME goes into search.

b. RNV APR and RNV ENR modes

Displays RNAV distance to waypoint in 0.1 NM increments from 0 to 99.9 NM and in 1 NM increments from 100 to 400 NM. Displays dashes if DME is in search, if VOR flags, or if the VOR is rechanneled with the HOLD button depressed.

2. KT Display

a. VOR and VOR-PAR modes

Displays ground speed to the DME ground station in 1 knot increments from 0 to 999 knots. Displays dashes whenever DME goes into search.

b. RNV APR and RNV ENR modes

Displays ground speed to the active waypoint in increments of 1 knot from 0 to 999 knots. Displays dashes whenever DME goes into search, if VOR flags or if the VOR is rechanneled with the HOLD button depressed.

3. MIN Display

a. VOR and VOR-PAR modes

Displays time to DME ground station in 1 minute increments from 0 to 99 minutes. Displays dashes whenever DME goes into search or when calculated time exceeds 99 minutes.

b. RNV APR and RNV ENR modes

Displays time to the active waypoint in 1 minute increments from 0 to 99 minutes. Displays dashes if DME is in search, if VOR flags, if the VOR is rechanneled with the HOLD button depressed, or if calculated time exceeds 99 minutes.

4. FRQ, RAD, DST Display

a. FRQ mode

Displays frequency from 108.00 to 117.95 MHz in

FAA Approved
Issued January, 1980
P/N 105-590000-25

increments of .05 MHz. Least significant digit displays only zero or five.

b. RAD mode

Displays ground station radial on which waypoint is located from 0.0 to 359.9 degrees.

c. DST mode

Displays the offset distance of the waypoint from the ground station over a range of 0.0 to 199.9 NM.

5. USE Display

Displays waypoint number of data (1 to 4) actually being used by the system. In VOR modes only the frequency has meaning. When changed, always takes on DSP value.

6. DSP Display

Displays waypoint number (1 to 4) of data being displayed.

7. PAR, VOR, ENR, APR, RNV Displays

System status lights.

8. HLD Display

Indicates when the station to which the DME is actually tuned is different than the station to which the VOR is tuned.

9. DATA Display

Displays waypoint data. The messages FRQ, DST, and RAD tell what is being displayed at any one time.

10. ILS Display

Indicates that the frequency in use is an ILS frequency.

CONTROL

1. VOR Button

Momentary pushbutton which, when pushed while the system is in either RNV mode, causes the system to go to VOR mode. Otherwise, the button causes the system to toggle between VOR and VOR-PAR modes.

2. RNAV Button

Momentary pushbutton which, when pushed while the system is in either VOR mode, causes the system to go to RNV ENR mode. Otherwise the button causes the system to toggle between RNV ENR and RNV APR modes.

3. HOLD Button

Two position pushbutton which, when in the depressed position, inhibits DME from channeling to a new station when the VOR frequency is changed. Pushing the button again releases the button and channels the DME to the station paired with the VOR station.

4. USE Button

Momentary pushbutton which, when pressed, causes the active waypoint to take on the same value as the

displayed waypoint and the DATA display to go to FRQ mode.

5. DSP Button

Momentary pushbutton which, when pushed, causes displayed waypoint to increment by 1 and DATA display to go to FREQUENCY mode.

6. DATA Button

Momentary pushbutton which, when pressed, causes waypoint DATA display to change from FRQ to RAD to DST and back to FRQ.

7. OFF/PULL ID Control

Rotary switch/potentiometer which, when turned clockwise, applies power to the KNS-80 and increases audio level. Turned counterclockwise it will decrease audio level and switch off power. The switch may be pulled out to hear VOR ident.

8. DATA INPUT Control

Dual concentric knobs with the center knob having an "in" and "out" position.

a. Frequency Data

The outer knob varies the 1MHz digit and the center knob varies the frequency in .05 MHz increments regardless of whether the switch is in its "in" or "out" position.

b. Radial Data

The outer knob varies the 10 degree digit with a

carryover occurring from the tens to hundreds position. The center knob in the "in" position varies the 1 degree digit and in the "out" position varies the 0.1 degree digit.

c. Distance Data

The outer knob varies the 10 NM digit with a carryover occurring from the tens to hundreds place. The center knob in the "in" position varies the 1 NM digit and in the "out" position varies the 0.1 NM digit.

HANDLING SERVICE AND MAINTENANCE

BATTERY REPLACEMENT

The waypoint memory is powered by two silver oxide watch cells located in the lower left hand corner of the front panel. Typical life of the cells is two years although high temperature and humidity conditions can shorten this period. If the batteries should become weak, waypoint storage will be lost and the radio will "wake up" tuned to 110.00 MHz in the VOR mode. The cells can be replaced by opening the battery pocket with a thin blade screwdriver. The holder was designed so that the cells can only be inserted with the correct polarity.

APPROVED:



For

W. H. Schultz
Beech Aircraft Corporation
DOA CE-2

Section IX Supplements

LOG OF SUPPLEMENTS

FAA Supplements must be in the airplane for flight operation when subject equipment is installed:				
Supp. No.	Part Number	Subject	Rev. No.	Date
1	685770	AUTOPILOT	-	11/78

January 1978



CENTURY III

AUTOPILOT FLIGHT SYSTEM

PILOT'S OPERATING HANDBOOK

NOVEMBER 1998
68S25

NOTICE

This manual contains General Information on operation of Century III Autopilot, specific FAA approved information on Special Techniques, Limitations and Emergency Procedures for a particulate model airplane are contained in either an Airplane Flight Manual Supplement or a placard. Be sure and familiarize yourself with the information contained therein before flight.

68S25

REVISION LOG

Original dated March 1981

Revision 1 dated November 1998

Pages and Figure Drawings renumbered and book reformatted in computer.

INTRODUCTION

The Century Flight Systems, Inc. Century III is a light weight (18 lbs.) automatic flight system utilizing an advanced electronic design for maximum performance and utility. Operating on the versatile and adaptable 5000 cycle audio frequency, the Century Flight Systems, Inc. Century III represents a new design concept in which the conventional follow up, or control position feed back signals, are replaced by solid state analytical computers. In addition to providing a more stable and adaptable auto-pilot platform for advanced navigational coupling, this new system can cope with uneven fuel loads directional mis-trim and power changes without the usual directional errors, altitude losses, or command change requirements.

Roll and pitch responses are time controlled for human-like control action and smooth attitude transactions.

This manual describes the basic characteristics of each control function and its relationship to other functions in the flight system. Maximum utility will be realized after familiarization and practice.

TABLE OF CONTENTS

NOTICE	2
REVISION LOG	3
INTRODUCTION	4
TABLE OF CONTENTS	5
COMMAND CONSOLE	6
Roll (Aileron) Engagement	6
Roll Command Knob	7
Heading Mode	7
Course Selector	7
Aircraft Trim Effects	8
Trim Indicator and Pitch Command Wheel	8
Pitch (Elevator) Engagement	9
Altitude Hold	9
AUTOMATIC TRIM OPERATIONS	10
GENERAL OPERATIONS	10
Pilots Preflight Procedures	11
Trim Check	12
AIR FILTER	13
Filter and Element	13
LATERAL GUIDANCE SYSTEM	14
Omni Mode	15
Nav Mode	15
Heading Mode	16
Localizer (Normal) Mode	16
Localizer (Reverse) Mode	16
Lateral Guidance System Operation	17
VOR Navigation	18
VOR Approach	20
ILS Approach - Normal	22
ILS Approach - Back Course	24
INTERCEPT CHARACTERISTICS	26
LOCALIZER AND/OR GLIDESLOPE COUPLER	28
ILS Approach Procedures	30
Limited Warranty Century Flight Systems Autopilot	32

COMMAND CONSOLE

The Century III console is designed to provide convenient fingertip command of all basic autopilot functions. Magnetic engage and mode switches are designed with logical interlocking features for operational ease and simplicity. The lucite face panel incorporates optically engineered night lighting with provisions for dimming control through the standard aircraft rheostat.

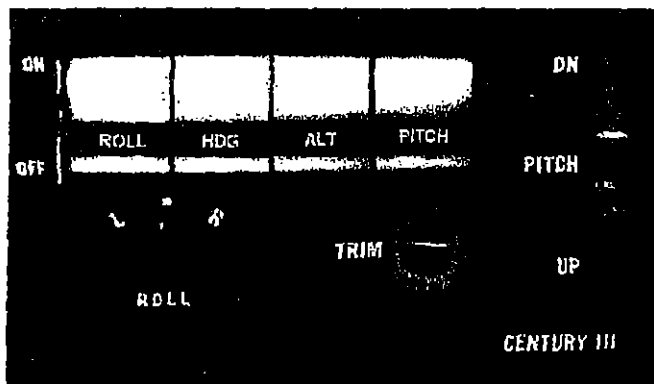


FIG. 1

ROLL (AILERON) ENGAGEMENT



FIG. 2

The Century III is separated into two distinct systems, the Roll/Heading and Pitch/Altitude. Each is engaged separately by means of a fail safe electronic servo engage mechanism.

Because the roll is first in logical sequence, the roll engage acts as an autopilot master switch. In this capacity the roll must be engaged for all other engage and mode switches to become operative. With this roll switch only engaged, the autopilot is responsive only to the roll axis of the attitude gyro and the commands of the console roll/turn control.

ROLL COMMAND KNOB



FIG. 3

The roll command knob controls the roll axis of the aircraft when roll mode switch is engaged. It is useful in maneuvering and will permit steeper bank angles (up to 30°) than those resulting from D.G. heading commands. When the heading mode switch is engaged the roll knob is removed from the autopilot circuit and is ineffective. However, it should be left in the centered position for convenience.

NOTE: Do not use roll mode during approach configuration on twin engine aircraft as engine failure will result in excessive heading deviation.

HEADING MODE

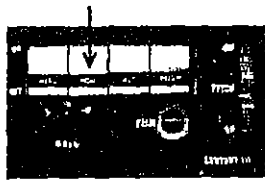


FIG. 4

The heading mode switch is located directly adjacent and to the right of the roll engage switch. It is the function of the heading mode switch to remove the roll command knob from the autopilot circuit and add the D.G., heading command and coupler functions to the basic roll attitude control. This switch is interlocked with the roll engage so that the roll function will be engaged simultaneously with the heading mode switch. Prior to engagement of the heading mode, the D.G. course selector and coupler modes should be set. (See sections on coupler operation when optional coupler is installed.)

COURSE SELECTOR D.G.

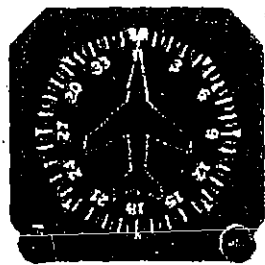


FIG 5

The course selector D.G. replaces the standard directional gyro and provides a fully visible course indicator around the normal D.G. opening. The D.G. dial is marked in 5° intervals and numbered each 30° around its azimuth. A center indice is provided at the top to align selected headings. Additional indices are located each 45° to facilitate rapid turn selection without mental arithmetic. Any heading may be selected, either before or after engagement, and turns up to 180° may be programmed directly, either right or left. If the course indicator is rotated beyond 180° from the D.G. card heading, the course selector will command a reversal in bank to reach the resultant selected heading in the shortest direction.

The D.G. card is normally set to the magnetic compass with the caging knob on the left in the usual fashion, while the course selector indicator is rotated by the heading knob on the right. Direction of rotation of both the knob and indicator commands the same direction of turn.

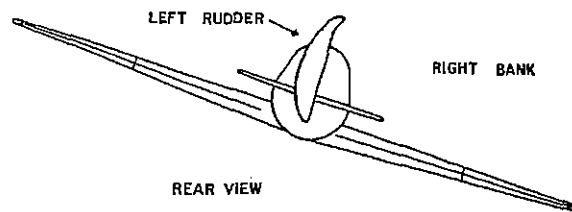


FIG. 6

AIRCRAFT TRIM EFFECTS

An important axiom to remember is that if the airplane is properly *trimmed*, a CENTURY FLIGHT SYSTEM INC. autopilot in heading mode will never fly the airplane with a wing down.

This statement can be changed slightly to apply to an airplane without an auto pilot: In order to fly a *trimmed* airplane on a constant heading, the wings must be held level.

Consider the effect of rudder trim in the above drawing (Fig. 6). Viewing the airplane from the rear, note that with left rudder applied the right wing must be lowered to offset the rudder effect and keep the heading constant, i.e. the left turn effect of the rudder is canceled by the right turn effect of the bank.

Since the Century III is slaved to heading, this is exactly what it will do in order to hold a heading when the rudder is out of trim.

Thus when operating on autopilot heading mode the pilot knows rudder trim in the direction toward the low wing is required.

TRIM INDICATOR AND PITCH COMMAND WHEEL

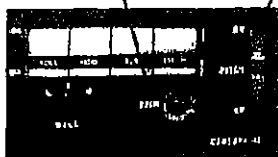


FIG. 7

Prior to the engagement of the pitch axis, it is desirable to adjust the autopilot pitch to match the attitude being flown in, this way the pilot can transition from hand flight to autopilot smoothly during the climbout or other pitch maneuvering. The pitch servo effort meter (trim) to the left of the pitch control wheel indicates the position of the pitch command wheel with relation to the attitude being flown.

Thus, if it is pointing upward prior to engagement it indicates that the aircraft can be expected to increase pitch attitude upon engagement, conversely a down meter indicates pitch attitude will be decreased upon engagement. The pitch command wheel is in the autopilot circuit when the pitch mode switch only is engaged. It is removed from the circuit and becomes ineffective upon engagement of the altitude hold. During altitude hold operation it may be set to level or preprogrammed to produce climb or descent upon altitude hold disengagement.

PITCH (ELEVATOR) ENGAGEMENT



FIG. 8

The pitch mode switch engages the autopilot pitch servo and makes the autopilot responsive to the pitch attitude of the gyro horizon and the commands of the pitch control wheel. Constant attitudes may be directed by rotating the command wheel in the appropriate direction. The computer system in combination with the automatic trim will maintain this constant attitude through power changes and during gear and flap position transitions. On aircraft not equipped with Century Flight Systems, Inc. automatic trim, it will be necessary to disengage the pitch and manually trim the airplane during attitude, airspeed, or gear flap transitions. (See section on automatic trim.)

ALTITUDE HOLD

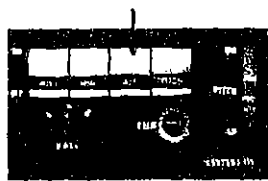


FIG. 9

The altitude hold is a "command" type which requires no pitch command adjustment prior to engagement. Engagement of the altitude mode switch will remove the pitch command wheel from the circuit and initiate a smooth transition to the pressure altitude at which it was engaged. Barometric sensors provide precise altitude holding with nominal climb and dive limitations for operation in turbulence.

AUTOMATIC TRIM OPERATIONS

Three different versions of CENTURY FLIGHT SYSTEM INC. Automatic Pitch Trim Systems are used with Century III Autopilots.

	AUTOPILOT PITCH ON	AUTOPILOT OFF
Normal	Automatic	Push Button
Dual Contact	Automatic	Push Button
Toggle	Automatic	Toggle Switch

The type used is based on the characteristics of the aircraft and FAA approval.

Trim operation with all three types is identical when the Autopilot Pitch is engaged. the Trim System operates on a full time basis and will automatically correct aircraft trim for airspeed changes that are called for by the Autopilot Pitch Command, Altitude Hold or power changes.

Push Button Automatic Trim operates when the autopilot is OFF. The pilot may press the wheel mounted push button any time he wishes to automatically relieve control forces. This will be particularly helpful during approaches when speed is being reduced and to make trim changes caused by lowering of flaps or gear.

Toggle Switch Trim operates when the autopilot is OFF. The pilot may press the wheel switch to cause electric trim action in the desired direction to relieve control wheel forces.

The pilot can override the trim system at any time by manual operation of the aircraft trim control. In addition, the circuit breaker switch labeled "Trim" on the instrument panel may be pulled to disconnect the trim from the aircraft electrical system.

GENERAL OPERATIONS

The Century III coupler and automatic trim systems are FAA approved on each make and model aircraft under a "Supplemental Type Certificate" (STC).

There are no restrictions to operations in turbulence and , as a general rule, autopilot operation in turbulence will result in lower "G" forces being imposed on the structure.

Autopilot and automatic trim operating airspeed limitations (if any) will be specified on the operation placard or in the flight manual supplement.

The Century III servo mechanisms are designed with a fail safe electric engage and disengage features. The autopilot may also be overridden by the pilot without damage to the system. Override forces are adjusted to the servo power output requirements of particular aircraft.

NOTE: Only CENTURY FLIGHT SYSTEM INC. trained specialists at approved service centers should adjust servo torque outputs.

PILOTS PREFLIGHT PROCEDURE

1. With engines running and gyros erected, check vacuum gage readings. Should be 4.75" to 5.00" Hg.
2. With all mode switches off, place coupler in HDG position (if applicable) and center roll and pitch commands and D.G. course selector indicator.
3. Engage roll mode master switch, rotate roll knob left and right and note that wheel responds in each direction.

NOTE: Without the aerodynamic response of flight continue to stop with command off center.

4. Engage "HDG" mode switch and rotate course selector indicator to either side, note roll servo response; again, without aerodynamic response, servo action is not limited.
5. While engaged, override the roll in both directions. Force required should be 10-15 lbs. at wheel edge dependent on aircraft model.
6. Center D.G. course selector so as to stop roll servo action while checking pitch.
7. Adjust pitch command knob so as to center "Trim" indicator.
8. Engage pitch mode switch and rotate pitch command knob in each direction. Observe pitch control action in each direction.

NOTE: Without the aerodynamic response of flight, pitch action is not limited in ground operation.

NOTE: If aircraft has heavy controls due to loading springs or bob weights, it may be necessary to assist the pitch control motion as servo input power may be limited to match inflight responses and override requirements.

NOTE: If autopilot ground check is prolonged, automatic trim may run to up or down limit. In such cases it may be desirable to temporarily pull the trim circuit breaker switch.

9. Check pitch override in each direction. Override forces will vary considerably with aircraft and direction of motion due to elevator spring and bob weight effect and the servo force adjustment.

TRIM CHECK**(Autopilot)**

10. The Automatic trim is activated by engagement of autopilot pitch mode switch. On systems equipped with CENTURY FLIGHT SYSTEMS INC. automatic pitch trim, note that trim action follows control force, (not motion) on ground check.

(Manual Push Button)

11. With all autopilot controls off, depress automatic trim butt on control wheel. Apply forward and aft load on control wheel and note that trim wheel or handle follows.

11a. (Manual Toggle Switch)

With all autopilot controls OFF, press Toggle Switch in both directions and note that Trim Wheel or handle runs in correct direction

NOTE: Aircraft equipped with dual contact trim system require a special pre-flight check— consult airplane flight manual supplement or placards for these procedures.

NOTE: On aircraft equipped with springs and/or bob weights it may not be possible to apply a down loading on the elevator system.

12. Check pilot's trim control override in each direction.
13. Be sure all autopilot controls are off, that trim circuit breaker is reset, and that elevator trim is set prior to takeoff.

AUTOPILOT ENGAGE SEQUENCE (IN FLIGHT)

1. Trim aircraft to desired flight attitude.
2. Center roll knob and engage "Roll" mode switch.
3. Center D.G. course selector indicator and engage "HDG" mode switch.
4. Center "Trim" indicator with pitch command wheel and engage "Pitch" mode switch.
5. Engage "Alt" mode switch at desired altitude.


NOTE: When system is not equipped with CENTURY FLIGHT SYSTEM INC. automatic pitch trim, and manually adjust aircraft pitch trim for attitude and airspeed changes.

AIR FILTER**AIR FILTER AND ELEMENT**

The 1X314 central air filter is incorporated on all 3" gyro systems with the exception of aircraft with original equipment filters of like quality.

The 1X314 filter system uses the 51A5 replaceable filter element which is capable of removing 97% of all contaminating substances above .3 microns. This includes tobacco tars that would otherwise be harmful to bearings and vanes. Because of this exceptional filtering ability, contaminants tend to accumulate at a higher rate than in other types. It is therefore considered necessary that filter elements be replaced at each 100 hour period and that filters subjected to tobacco tars, industrial smoke and like environment, be inspected each 50 hours for possible replacement.

Gyro warranty is dependent upon following this procedure.

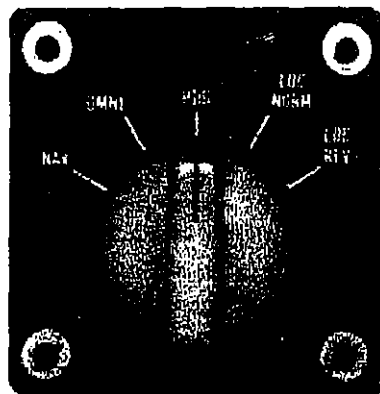LATERAL GUIDANCE SYSTEM**FIGURE 10****LATERAL GUIDANCE SYSTEM**

The Century Flight Systems, Inc. Lateral Guidance System contains. Track interception angles a completely automatic, analog computer that directs the autopilot in both VOR and ILS navigation. The system contains a five position mode selector switch which mounts in the instrument panel are 45° and an automatic 15° crosswind correction capabilities is provided. The complete capture, intercept and tracking sequence is accomplished automatically without monitoring or multiple switching.

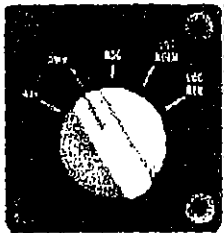


Figure 11

OMNI MODE

When in the OMNI MODE position, the system is coupled to the Radio Omni Bearing Indicator. By setting the D.G. Course Indicator to match the Omni Course selection, all headings are then controlled by the Omni radio signals. A full deflection on the Omni Indicator (10 or more off selected radial) will produce a 45° interception angle. Inside the 10° area, the system will automatically compute the location and closure rate to direct a smooth, tangential intercept without overshoot and arrive over the radial with crosswind correction established. The same dynamic intercept is accomplished whether 2 miles or maximum reception distance from station. Below 2 miles, the aircraft bank limitations will allow a slight overshoot when making maximum angle interception.

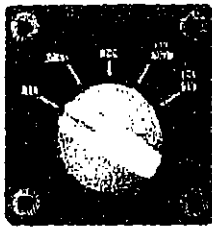


Figure 12

NAV MODE

The NAV Mode is designed to extend the coupler utility by making operation practical under the adverse conditions of unsteady or erratic VOR Signals. Several factors such as terrain, distance, bent courses, etc., produce short term needle deflections which can cause excessive roll motion when in the OMNI Mode. The NAV Mode incorporates an extended time delay in the computer circuit which reduces reaction to these short term needle deflections. Close in OMNI approach work requires the proportioned dynamic response as provided in the OMNI Mode. Therefore the NAV Mode should not be used for close in work.

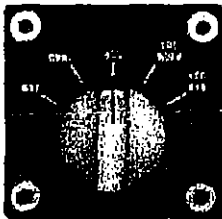


Figure 13

HEADING MODE

When in the HDG mode, the Century III Autopilot will function in the same manner as described in section I of this manual.

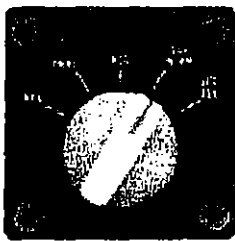


Figure 14

LOCALIZER (Normal) MODE

In the LOC NORM mode, the system automatically adjusts its sensitivity to accommodate the $2\frac{1}{2}^\circ$ full needle signal instead of the 10° as found in Omni navigation. As the Localizer beam which is only $\frac{1}{4}$ as wide as the Omni, additional damping circuits are also switched in to produce the same smooth intercept track as described for the Omni. Intercept angles of 45° are still automatic with full signal deflection and tangential intercepts with automatic crosswind correction are accomplished beyond the Outer Marker. As with the Omni mode, the Course Selection D.G. must be set to correspond with the desired magnetic track.

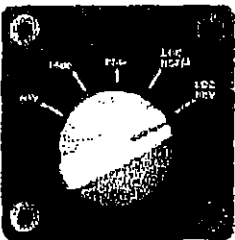


Figure 15

LOCALIZER (Reverse) MODE

All Century Flight Systems, Inc. Lateral Guidance Systems are equipped with the Localizer Reverse feature to permit automatic backcourse approaches and to track outbound on the Front Course prior to procedure turn. The features of LOC-NORM except that the aircraft will fly away from the Localizer Indicator needle instead of toward. When using the LOC-REV mode, the Course Selector D.G. is set to the reciprocal of the Front-Course heading.

LATERAL GUIDANCE SYSTEM OPERATION

- A. Establish aircraft in normal flight with autopilot as outlined in first part of manual.
- B. With Guidance Mode Selector in HDG position, engage the HDG Mode Switch on autopilot console.
- C. Lateral control is now directed by the "Lateral Guidance" Mode Selector.
- D. Set D.G. Card to the magnetic compass in normal manner.

NOTE: Some navigation receivers are designed in same package as the associated transmitter in such a manner that the visual navigation signal is temporarily interrupted when transmitting.

CAUTION: The NSD has an optional slaving feature that requires initial heading setting on start-up. Subsequent resetting of the heading card, required manually on non-slaved versions, is automatically accomplished with the slaved version.

Proper heading synchronization must be verified on other non-slaved and slaved NSD-360A units. This is accomplished by comparing the heading displayed under the lubber line with the magnetic compass.

The NSD-360A incorporates a heading warning flag to warn of loss of either air or electric power. Appearance of the flag during flight should be sufficient grounds to question the validity of the displayed heading. In slaved versions, the slaving meter should oscillate about a 45° point to show that the slaving meter are accomplishing their function. Should the needle remain motionless or either vertical or horizontal for an extended period (two minutes) in level flight, the heading should be manually set using the magnetic compass and the performance of the heading card observed. If this condition persists, set the slaving mode switch to SL#2 on free gyro. In free gyro mode, the instrument must be periodically reset to manually counteract the effects of gyro precession.

VOR NAVIGATION

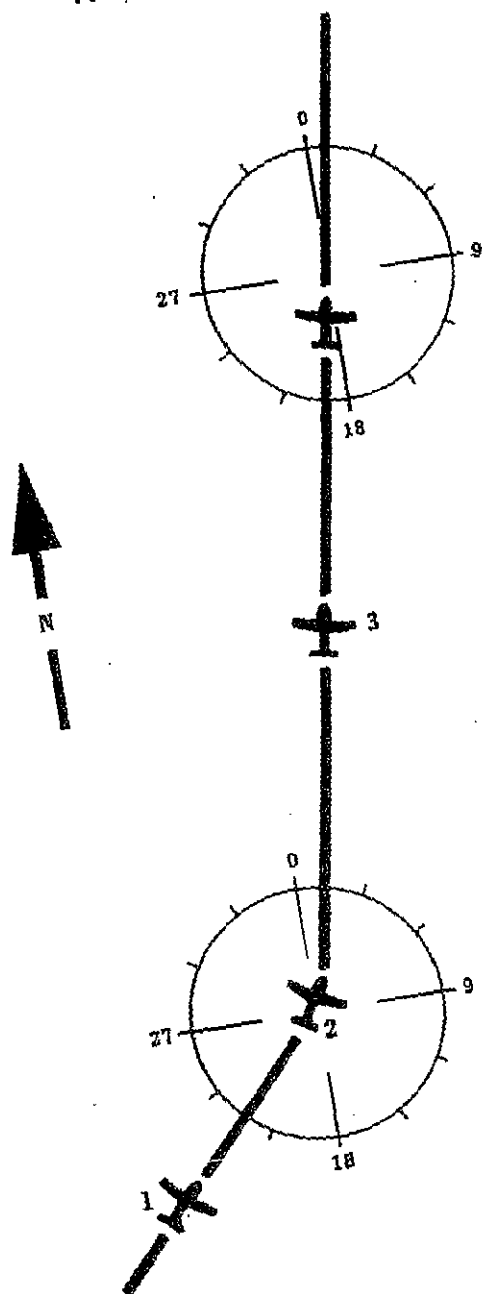


Figure 16

VOR NAVIGATION (See Fig. 16)**1. TO INTERCEPT**

- A. Using Bearing Selector, dial desired course, inbound or outbound.
- B. Set identical heading on Course Selector D.G.
- C. After aircraft has stabilized, position coupler mode selector knob to OMNI mode.

NOTE: If less than 45° from selected radial, aircraft will intercept before station. If more than 45°, interception will occur after station passage.

- D. As aircraft nears selected radial, interception and crosswind will be automatically accomplished without further switching.
- E. As the aircraft nears the OMNI station, (½ mile) the zone of confusion will direct an "S" turn in alternate directions as the OMNI indicator needle swings. This alternate banking, limited to the standard D.G. bank angle, is an indication of station passage.

2. TO SELECT NEW COURSE

- A. To select any different outbound course or radial, including reciprocal of the previous inbound radial, dial the new course into the Course Selector D.G.
- B. Rotate OBS to the new course.
- C. Aircraft will automatically turn, in the shortest direction to the interception heading for the new course.

3. TO CHANGE STATIONS

- A. If same course is desired, merely tune receiver to new station frequency.
- B. If different course is desired, position coupler mode selector to HDG Mode.
- C. Dial Course Selector D.G. to new course.
- D. Dial OBS to new course.
- E. Position mode selector to OMNI mode.

68S25

VOR APPROACH

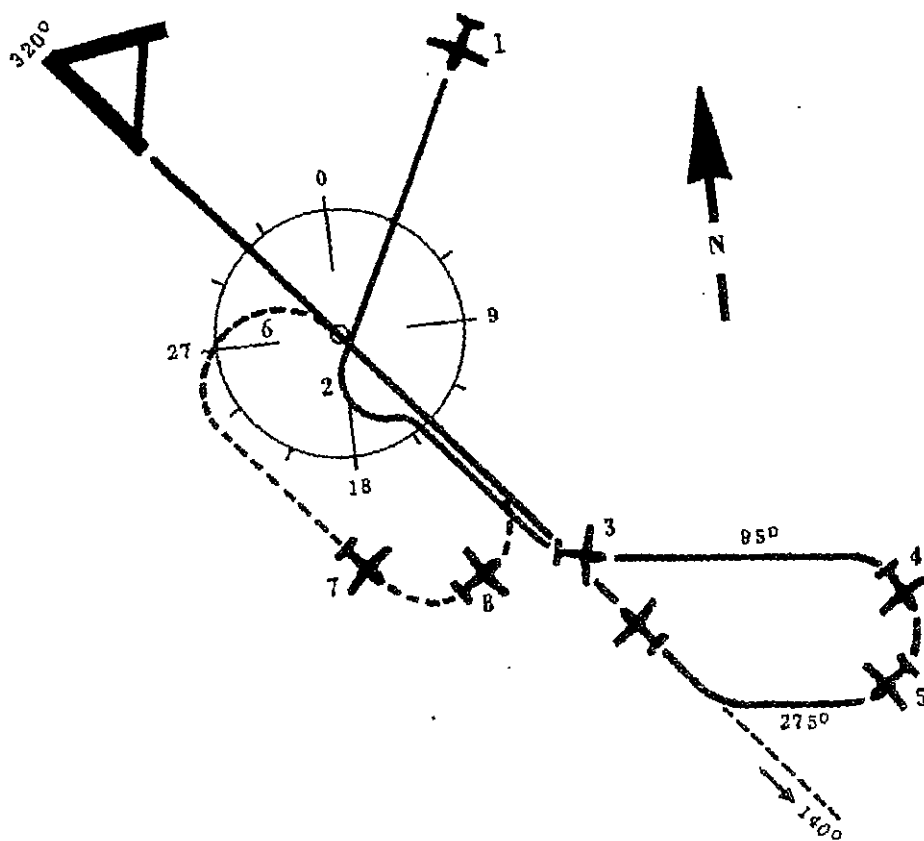


Figure 17

VOR APPROACH (See Fig.17)

1. Track inbound to station as described in VOR Navigation section.
2. After station passage (when "S" turn starts) dial outbound course on Course Selector in D.G. then dial same course on OBS.
3. After established on outbound radial, position mode selector to HDG mode and select outbound procedure turn heading.
4. After one minute, dial inbound procedure turn heading on Course Selector D.G. dialing toward desired turn. Set OBS to inbound course.
5. When 90° to inbound course, dial Course Selector D.G. to inbound course and position mode selector to OMNI mode.
6. If holding pattern is desired, position mode selector on HDG mode at station passage inbound and select outbound heading in direction of turn.
7. After elapsed time, dial inbound course on Course Selector D.G.
8. When 90° to radial, position mode selector on OMNI mode.

NOTE

NOTE: For precise tracking over Omni Station, without "S" turn, position mode selector on HDG. Until station passage.

68S25

ILS APPROACH—NORMAL

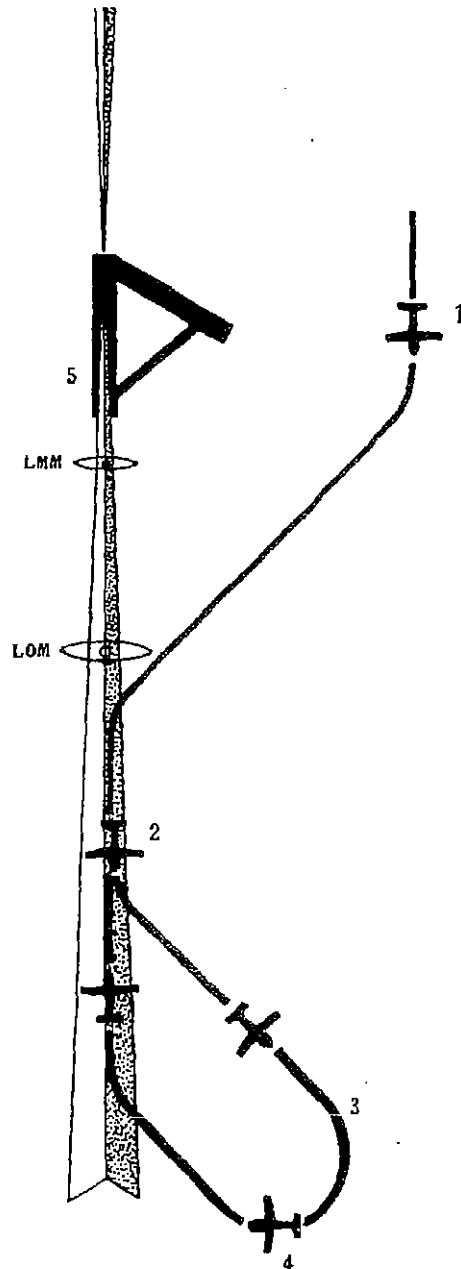


Figure 18

68S25

ILS APPROACH--NORMAL (See Fig. 18)

1. To Intercept
 - A. Dial ILS outbound on Course Selector D.G.
 - B. When stabilized; position mode selector to LOC REV mode.
2. After interception and when beyond outer marker, position mode selector to HDG and dial outbound procedure turn heading.
3. After one minute, dial inbound procedure turn heading in direction of turn.
4. When between 90° and 45° to ILS inbound course, dial inbound course on Course Selector D.G. and position mode selector to LOC NORM mode.
5. When beyond midpoint of runway, or when missed approach is elected, position mode selector to HDG mode and execute missed approach procedure.

ILS APPROACH-BACK COURSE

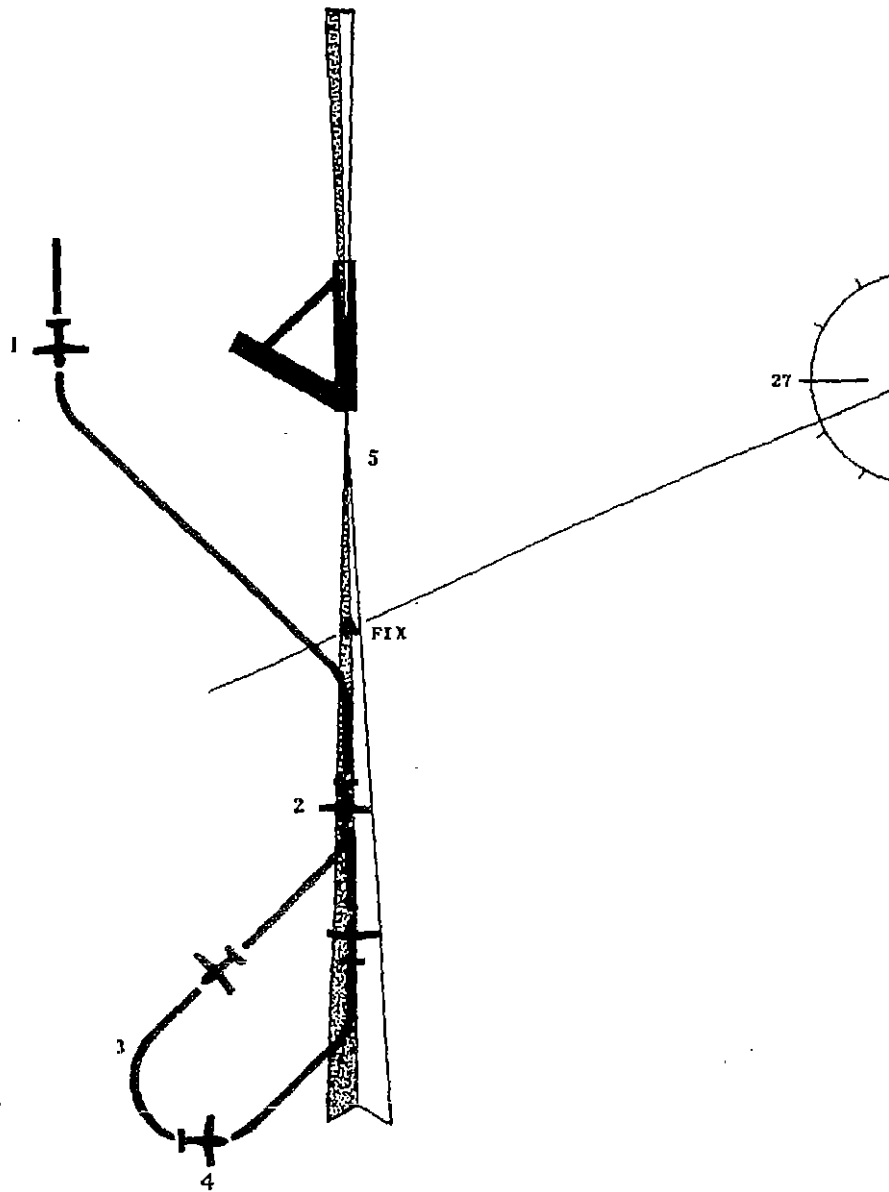


FIG. 19

ILS APPROACH--BACK COURSE (See Fig. 19)

1. To Intercept
 - A. Dial ILS Back Course outbound heading on Course Selector D.G.
 - B. When stabilized, position mode selector to LOC NORM mode.
2. After interception and when beyond fix, position mode selector to HDG and dial outbound procedure turn heading.
3. After one minute, dial inbound procedure turn heading indirection of turn.
4. When between 90° and 45° to inbound course, dial inbound course on Course Selector D.G. and position mode selector on LOC REV mode.
5. Approximately ½ mile away from runway, position mode selector to HDG mode to prevent "S" turn over ILS station near runway threshold.

INTERCEPT CHARACTERISTICS

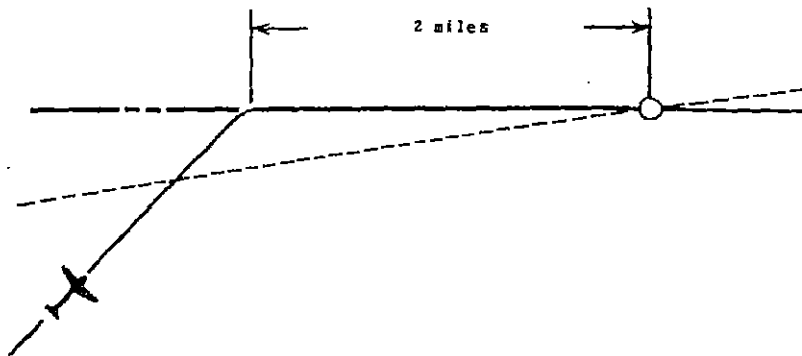


Figure 20

- (1) BEYOND 2 MILES FROM STATION: Aircraft approaches course at approximately 45° intercept angle until omni needle deflection is 50% of full scale, then turns to required heading (cross wind corrected for) with no overshoot of course.

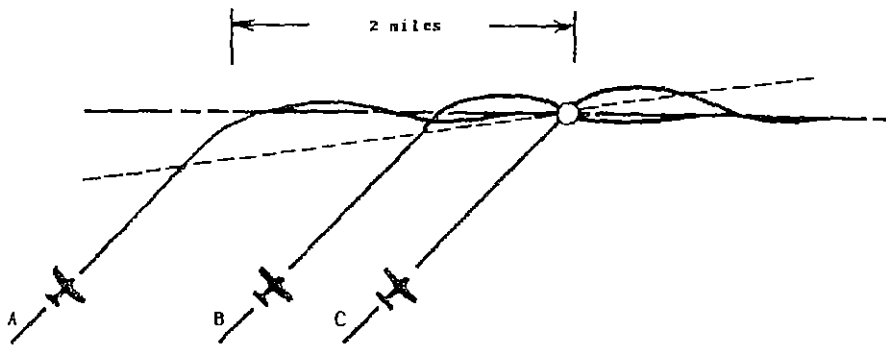


Figure 21

- (2) CLOSE IN INTERCEPT: With a given intercept angle established the time required to pass through the active region near the desired radial (-50% full needle deflection) is proportional to the distance from the station. For this reason overshoot occurs when close in intercepts are made. (This is true of all systems, since the turning rate or bank angle must be limited). the three paths show what might be expected as the intercept distance is made nearer and then finally at the station. It will be noted that if the intercept heading takes the aircraft very near to the station, no maneuvering would occur until the aircraft has passed the station.

- (3) INTERCEPT BEYOND THE STATION: Behavior beyond the station is similar to that explained in paragraph 2 in that as the intercept distance is made larger the tendency for overshoot is reduced.

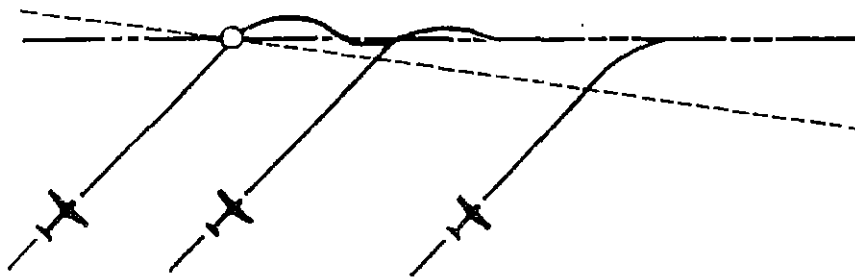


Figure 22

- (4) CROSS WIND EFFECTS: Crosswind effects which might be expected are illustrated in the three plots below. curve A is the no wind condition and performance will be as per sections (1) thru (3). Curve B shows the effect of approaching the desired course. Because this rate is reduced by the wind, the tendency to overshoot is likewise reduced. Curve C shows the effect of a wind which tends to increase the rate at which the aircraft approaches the course. As would be expected, this will tend to cause an overshoot.

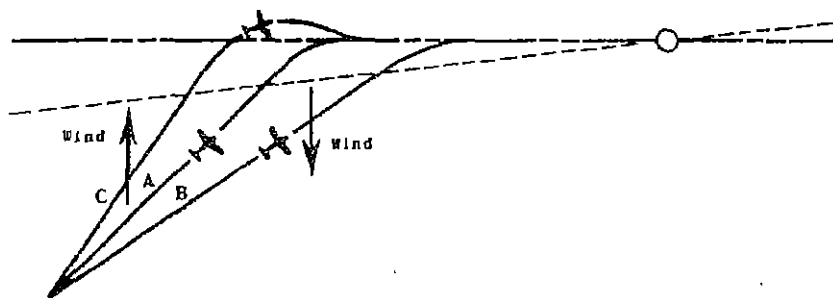


Figure 23

The Century Flight Systems, Inc. Glideslope Coupler is a completely automatic analog computer that directs the Autopilot to intercept and track the approach glide path. The system automatically provides for variances in glide path angle, wind direction and various approach configurations of the aircraft. A self contained Logic Circuit provides for certain necessary conditions to be prevalent before automatic Glideslope coupling will occur. These conditions are explained in the following sections.



The Radio Coupler Mode Selector must be in the LOC NORM mode for at least 20 seconds before the Logic Circuit of the Glideslope Coupler is armed. This provides safety against inadvertent coupling when flying reverse course or tracking outbound on the front course. After coupling, the Glideslope may be de-coupled by the momentary switching of the mode selector from LOC-NORM position.

ALTITUDE MODE



30

GLIDESLOPE DEVIATION INDICATOR

The Glideslope Deviation Indicator must be deflected upward for at least 20 seconds before the logic circuit of the Glideslope Coupler is armed. This provides assurance that the Glide path will be intercepted from below in the normal manner and prevents inadvertent coupling from above. A 60% full scale deflection for 20 seconds will always accomplish arming.

NOTE: Once coupled, the deviations Indicator will not de-couple the Glide regardless of needle deflection. The Deviation Indicator however must be monitored during approach to determine the aircraft's true position relative to the localizer beam and the glide path.

INDICATOR LIGHT

The Glideslope Coupler incorporates a panel mounted green indicator light. This light will turn ON at the same time automatic switching takes place to couple the Autopilot to the glide path. This light will stay lit until such time as the unit is de-coupled. As this light *only* shows that the Glideslope Coupler is switched into the Autopilot and not actual position relative to glide path. The deviation indicator must be monitored during the approach.

ILS APPROACH PROCEDURES GLIDESLOPE APPROACH (Typical)

1. To intercept ILS
 - a) Dial ILS outbound course on course selector D.G.
 - b) Position Radio Coupler mode switch to LOC REV mode.
 - c) Altitude Hold or Pitch Mode, for Altitude Control.
2. After intercept and at appropriate time, descent to approach altitude.
3. Press ALT Hold switch on console at published approach altitude. Dial procedure turn outbound heading on D.G. and position mode selector to HDG.
4. After one minute, dial the published inbound procedure turn heading moving D.G. course selector in direction of turn. When between 90 and 45 degrees to the inbound heading, dial inbound course on Course Selector D.G. and position mode selector to LOC NORM mode. NOTE: For optimum results, switch to localizer normal at 45°. At this point the airplane will automatically intercept and track the localizer beam, you should be at the proper altitude and on ALT Hold and the glideslope deviation needle should be up. If the above conditions are met for 20 seconds or more, the Glideslope Coupler logic circuit will be armed. Adjust power for the gear down or normal approach speed.
5. Upon interception of glide path (when deviation needle drops to center) the Glideslope Coupler will automatically engage the indicator light will come on, and the aircraft will assume a preset nose-down attitude for descent. Drop gear and re-adjust power as necessary to maintain approach speed. Position flaps not to exceed 15° for approach at this time. Do not change gear or flap setting after initial glideslope intercept for remainder of glideslope coupler operation. Power and airspeed changes must be made carefully to prevent excessive attitude changes.

NOTE: Monitor deviation indicators for actual position on Localizer and glide path. Transmissions may cause deviation needle to fluctuate on some radio installations. On such installations, the coupler will attempt to follow these deviations.

- A) Upon completion of Glideslope Coupler approach, or when VFR, disconnect Autopilot and adjust aircraft for landing configuration.
 - B) For missed approach procedure, set Pitch Command to Climb Attitude. Switch Coupler to HDG mode and apply climb power, gear and flap up, disengage Altitude Hold and set Autopilot to missed approach HDG.
6. To de-couple any one of the following methods may be used:
 - A) Switch ALT Hold OFF. this will de-couple Glideslope and revert pitch control to the "Pitch Command Knob," which may be preset to desired climb attitude.
 - B) Switch ALT Hold OFF. then ON. this will de-couple Glideslope and return to altitude hold.
 - C) Switch Radio Coupler OFF, LOC-Norm mode. this will de-couple Glideslope and return pitch control to ALT Hold.
 - D) Disconnect entire autopilot and hand fly aircraft.

CAUTION:

Do not fly airplane on Autopilot below height above ground specified on placard (or flight manual supplement) for "ALT" loss, approach configuration, with 1 second delay recovery."

Emergency Operation

1. In the event of a malfunction in the ROLL or PITCH SECTION, push the ROLL ON/OFF button "OFF." This disengages both ROLL and PITCH SECTIONS of the Century III from the control system.
2. The PITCH TRIM SECTION may be overpowered manually. In the event of a malfunction in the PITCH-TRIM SECTION, pull the Pitch Trim circuit breaker.
3. The Century III ROLL SECTION may be overpowered manually on either control wheel. The Century III PITCH SECTION may be overpowered manually on either control wheel.
4. Engine Failure (Multi-Engine Airplanes)
 - a) When on ROLL and PITCH mode only, any one of the following applies during engine failure.
 1. Disengage Autopilot and trim aircraft.
 2. Level wings with roll knob, and handle emergency.
 3. Switch to HDG mode, (Course Selected) see (b).
 - b) Autopilot on HDG or coupled: Autopilot will compensate for yaw caused by engine power loss by banking toward the operating engine. Perform normal Engine Out Emergency Procedures and re-trim aircraft.

CAUTION

When electrical power is first applied to the NSD-360A instrument, the compass card may rotate or "slew" rapidly. This is NOT an indication that the compass system is orienting itself to the proper magnetic heading. The proper heading orientation must be verified and set prior to takeoff and should be verified prior to approach to landing using the magnetic compass.

Effective: July 4, 1975

LIMITED WARRANTY CENTURY FLIGHT SYSTEMS, INC. AUTOPILOT

Each new Century Flight Systems, Inc. Autopilot is warranted by the manufacturer to be free from defects in material and workmanship under normal use, subject to the following conditions:

1. Century Flight Systems, Inc. will through its designated service facilities at its option either repair or replace new components which shall within (12 months after date of installation, be found to Century Flight Systems, Inc. satisfaction, to have been defective in material or workmanship under normal use.
2. The warranty registration must be signed and returned to Century Flight Systems, Inc. within ten days of equipment installation date. In the event that the registration card is not returned within this time, the date of shipment from the factory will be deemed to be the installation date.
3. This warranty will not apply to any product which has been installed, repaired, or altered in any way whatsoever in Century Flight Systems, Inc. opinion to adversely affect its performance or reliability, or which has been subject to mis-use, contamination, negligence, or accident.
4. Cost of transportation, removal, or reinstallation are at the option of Century Flight Systems, Inc.
5. This is Century Flight Systems, Inc. sole express warranty with respect to the goods supplied herein. CENTURY FLIGHT SYSTEMS, INC. MAKES NO OTHER EXPRESS WARRANTY OF ANY KIND WHATSOEVER. CENTURY FLIGHT SYSTEMS, INC. EMPLOYEES MAY HAVE MADE ORAL STATEMENTS ABOUT THE PRODUCTS DESCRIBED IN THIS CONTRACT. SUCH STATEMENTS DO NOT CONSTITUTE WARRANTIES, SHALL NOT BE RELIED UPON BY THE CUSTOMER, AND ARE NOT PART OF THE SALE CONTRACT.
6. THE DURATION OF ANY IMPLIED WARRANTY, AND OF ALL WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO (12) MONTHS COMMENCING AT DATE OF INSTALLATION TO THE FULL EXTENT PERMITTED BY APPLICABLE LAW, CONSEQUENTIAL DAMAGE OR BREACH OF ANY WARRANTY ARE HEREBY DISCLAIMED AND EXCLUDED BY CENTURY FLIGHT SYSTEMS, INC.

Century Flight Systems, Inc.
P.O. Box 610
Municipal Airport
Mineral Wells, Texas
76067
August 1983

68S25

NOTES

NOTES

68S25

Beechcraft
Twin Engine (Piston)

SECTION X
SAFETY INFORMATION
TABLE OF CONTENTS

<i>SUBJECT</i>	<i>PAGE</i>
Introduction	10-5
General	10-7
Do's	10-7
Don'ts	10-8
Sources of Information	10-9
Pilot's Operating Handbook and FAA Approved Airplane Flight Manual	10-9
BEECHCRAFT Service Publications	10-10
Federal Aviation Regulations	10-12
Airworthiness Directives	10-12
Airman's Information Manual	10-13
Advisory Information	10-14
FAA Advisory Circulars	10-14
FAA General Aviation News	10-17
FAA Accident Prevention Program	10-18
Additional Information	10-19
General Information on Specific Topics	10-20
Maintenance	10-20
Hazards of Unapproved Modifications	10-22
Flight Planning	10-23
Passenger Information Cards	10-24
Stowage of Articles	10-24
Flight Operations	10-25
General	10-25
October, 1990	10-1

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

TABLE OF CONTENTS (Cont'd)

<i>SUBJECT</i>	<i>PAGE</i>
Preflight Inspection	10-25
Weight and Balance	10-25
Autopilots and Electric Trim Systems	10-26
Turbulent Weather	10-30
Wind Shear	10-32
Flight in Icing Conditions	10-33
Weather Radar	10-39
Mountain Flying	10-41
VFR - Low Ceilings	10-42
VFR at Night	10-43
Vertigo - Disorientation	10-43
Flight of Multi-Engine Airplanes With One Engine Inoperative.....	10-45
Minimum Control Speed Airborne (V_{MCA})	10-47
Intentional One-Engine Inoperative Speed (V_{SSE})	10-48
Best Single Engine Rate-of-Climb Speed (V_{YSE})	10-49
Best Single Engine Angle-of-Climb Speed (V_{XSE})	10-49
Single Engine Service Ceiling	10-50
Basic Single Engine Procedures	10-50
Engine Failure on Takeoff	10-51
When to Fly V_X , V_Y , V_{XSE} and V_{YSE}	10-52
Stalls, Slow Flight and Training	10-52
Spins	10-55
Descent	10-58
Vortices - Wake Turbulence	10-58
Takeoff and Landing Conditions	10-59

TABLE OF CONTENTS (Cont'd)

<i>SUBJECT</i>	<i>PAGE</i>
Medical Facts for Pilots	10-60
General	10-60
Fatigue	10-60
Hypoxia	10-60
Hyperventilation	10-63
Alcohol	10-63
Drugs	10-65
Scuba Diving	10-66
Carbon Monoxide and Night Vision	10-66
A Final Word	10-66

**Section X
Safety Information**

**Beechcraft
Twin Engine (Piston)**

(This Page Intentionally Left Blank)

INTRODUCTION

Beech Aircraft Corporation has developed this special summary publication of safety information to refresh pilots' and owners' knowledge of safety related subjects. Topics in this publication are dealt with in more detail in FAA Advisory Circulars and other publications pertaining to the subject of safe flying.

The skilled pilot recognizes that safety consciousness is an integral - and never-ending - part of his or her job. Be thoroughly familiar with your airplane. Know its limitations and your own. Maintain your currency, or fly with a qualified instructor until you are current and proficient. Practice emergency procedures at safe altitudes and airspeeds, preferably with a qualified instructor pilot, until the required action can be accomplished without reference to the manual. Periodically review this safety information as part of your recurrency training regimen.

BEECHCRAFT airplanes are designed and built to provide you with many years of safe and efficient transportation. By maintaining your BEECHCRAFT properly and flying it prudently you will realize its full potential.

..... Beech Aircraft Corporation

WARNING

Because your aircraft is a high performance, high speed transportation vehicle, designed for operation in a three-dimensional environment, special safety precautions must be observed to reduce the risk of fatal or serious injuries to the pilot(s) and occupant(s).

It is mandatory that you fully understand the contents of this manual and the other manuals which accompany the aircraft; that FAA requirements for ratings, certifications and review be scrupulously complied with; and that you allow only persons who are properly licensed and rated, and thoroughly familiar with the contents of the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual to operate the aircraft. IMPROPER OPERATION OR MAINTENANCE OF AN AIRCRAFT, NO MATTER HOW WELL BUILT INITIALLY, CAN RESULT IN CONSIDERABLE DAMAGE OR TOTAL DESTRUCTION OF THE AIRCRAFT ALONG WITH SERIOUS OR FATAL INJURIES TO ALL OCCUPANTS.

GENERAL

As a pilot, you are responsible to yourself and to those who fly with you, to other pilots and their passengers and to people on the ground, to fly wisely and safely.

The following material in this Safety Section covers several subjects in limited detail. Here are some condensed Do's and Don'ts.

DO'S

Be thoroughly familiar with your airplane, know its limitations and your own.

Be current in your airplane, or fly with a qualified instructor until you are current. Practice until you are proficient.

Preplan all aspects of your flight - including a proper weather briefing and adequate fuel reserves.

Use services available - weather briefing, inflight weather and Flight Service Station.

Carefully preflight your airplane.

Use the approved checklist.

Have more than enough fuel for takeoff, plus the trip, and an adequate reserve.

Be sure your weight loading and C.G. are within limits.

Use seatbelts and shoulder harnesses at all times.

Be sure all loose articles and baggage are secured.

Check freedom and proper direction of operation of all controls during preflight.

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

Maintain the prescribed airspeeds in takeoff, climb, descent, and landing.

Avoid wake turbulence (Vortices).

Preplan fuel and fuel tank management before the actual flight. Utilize auxiliary tanks only in level cruise flight. Take off and land on the fullest main tank, NEVER use auxiliary fuel tanks for take off or landing.

Practice emergency procedures at safe altitudes and airspeeds, preferably with a qualified instructor pilot, until the required action is instinctive.

Keep your airplane in good mechanical condition.

Stay informed and alert; fly in a sensible manner.

DON'TS

Don't take off with frost, ice or snow on the airplane.

Don't take off with less than minimum recommended fuel, plus adequate reserves, and don't run the tank dry before switching.

Don't fly in a reckless, show-off, or careless manner.

Don't fly into thunderstorms or severe weather.

Don't fly in possible icing conditions unless the airplane is approved, properly equipped, and all required equipment is operational for flight in icing conditions.

Don't fly close to mountainous terrain.

Don't apply controls abruptly or with high forces that could exceed design loads of the airplane.

Don't fly into weather conditions that are beyond your ratings or current proficiency.

Don't fly when physically or mentally exhausted or below par.

Don't trust to luck.

SOURCES OF INFORMATION

There is a wealth of information available to the pilot created for the sole purpose of making your flying safer, easier and more efficient. Take advantage of this knowledge and be prepared for an emergency in the event that one should occur.

PILOT'S OPERATING HANDBOOK AND FAA APPROVED AIRPLANE FLIGHT MANUAL

You must be thoroughly familiar with the contents of your operating manuals, placards, and check lists to ensure safe utilization of your airplane. When the airplane was manufactured, it was equipped with one or more of the following: placards, Owner's Manual, FAA Flight Manual, Approved Airplane Flight Manual Supplements, Pilot's Operating Handbook and FAA Approved Airplane Flight Manual. Beech has revised and reissued many of the early manuals for certain models of airplanes in GAMA Standard Format as Pilot's Operating Handbooks and FAA Approved Airplane Flight Manuals. For simplicity and convenience, all official manuals in various models are referred to as the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual. If the airplane has changed ownership, the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual may have been misplaced or may not be current. Replacement handbooks may be obtained from any BEECHCRAFT Aviation Center.

BEECHCRAFT SERVICE PUBLICATIONS

Beech Aircraft Corporation publishes a wide variety of manuals, service letters, service instructions, service bulletins, safety communiques and other publications for the various models of BEECHCRAFT airplanes. Information on how to obtain publications relating to your airplane is contained in BEECHCRAFT Service Bulletin number 2001, entitled "General - BEECHCRAFT Service Publications -What is Available and How to Obtain It."

Beech Aircraft Corporation automatically mails original issues and revisions of BEECHCRAFT Mandatory and Optional Service Bulletins, FAA Approved Airplane Flight Manual Supplements, reissues and revisions of FAA Approved Airplane Flight Manuals, Flight Handbooks, Owners Manuals, Pilot's Operating Manuals and Pilot's Operating Handbooks, and original issues and revisions of BEECHCRAFT Safety Communiques to BEECHCRAFT Owners addresses as listed by the FAA Aircraft Registration Branch List and the BEECHCRAFT International Owner Notification Service List. While this information is distributed by Beech Aircraft Corporation, Beech can not make changes in the name or address furnished by the FAA. The owner must contact the FAA regarding any changes to name or address. Their address is: FAA Aircraft Registration Branch (AAC250) P.O. Box 25082, Oklahoma City, OK 73125, Phone (405) 680-2131.

It is the responsibility of the FAA owner of record to ensure that any mailings from Beech are forwarded to the proper persons. Often the FAA registered owner is a bank or financing company or an individual not in possession of the airplane. Also, when an airplane is sold, there is a lag in processing the change in registration with the FAA. If you are a new owner, contact

your BEECHCRAFT dealer and ensure your manuals are up to date.

Beech Aircraft Corporation provides a subscription service which provides for direct factory mailing of BEECHCRAFT publications applicable to a specific serial number airplane. Details concerning the fees and ordering information for this owner subscription service are contained in Service Bulletin number 2001.

For owners who choose not to apply for a Publications Revision Subscription Service, Beech provides a free Owner Notification Service by which owners are notified by post card of BEECHCRAFT manual reissues, revisions and supplements which are being issued applicable to the airplane owned. On receipt of such notification, the owner may obtain the publication through a BEECHCRAFT Aviation Center, Aero Center or International Distributor. This notification service is available when requested by the owner. This request may be made by using the owner notification request card furnished with the loose equipment of each airplane at the time of delivery, or by a letter requesting this service, referencing the specific airplane serial number owned. Write to :

Supervisor, Special Services
Dept. 52
Beech Aircraft Corporation
P.O. Box 85
Wichita, Kansas 67201-0085

From time to time Beech Aircraft Corporation issues BEECHCRAFT Safety Communiqués dealing with the safe operation of a specific series of airplanes, or airplanes in general. It is recommended that each owner/operator maintain a current file of these publications. Back issues of BEECHCRAFT Safety Communiqués may be obtained without charge by sending a request,

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

including airplane model and serial number, to the Supervisor, Special Services, at the address listed above.

Airworthiness directives (AD's) are not issued by the manufacturer. They are issued and available from the FAA.

FEDERAL AVIATION REGULATIONS

FAR Part 91, General Operating and Flight Rules, is a document of law governing operation of aircraft and the owner's and pilot's responsibilities. Some of the subjects covered are:

- Responsibilities and authority of the pilot-in-command
- Certificates required
- Liquor and Drugs
- Flight plans
- Preflight action
- Fuel requirements
- Flight Rules

Maintenance, preventive maintenance, alterations, inspection and maintenance records

You, as a pilot, have responsibilities under government regulations. The regulations are designed for your protection and the protection of your passengers and the public. Compliance is mandatory.

AIRWORTHINESS DIRECTIVES

FAR Part 39 specifies that no person may operate a product to which an airworthiness directive issued by the FAA applies, except in accordance with the requirements of that airworthiness directive.

AIRMAN'S INFORMATION MANUAL

The Airman's Information Manual (AIM) is designed to provide airmen with basic flight information and ATC procedures for use in the national airspace system of the United States. It also contains items of interest to pilots concerning health and medical facts, factors affecting flight safety, a pilot/controller glossary of terms in the Air Traffic Control system, information on safety, and accident/hazard reporting. It is revised at six-month intervals and can be purchased from the Superintendent of Documents, U.S. Government Printing Office, Washington, D.C. 20402.

This document contains a wealth of pilot information. Among the subjects are:

- Controlled Airspace
- Emergency Procedures
- Services Available to Pilots
- Weather and Icing
- Radio Phraseology and Technique
- Mountain Flying
- Airport Operations
- Wake Turbulence - Vortices
- Clearances and Separations
- Medical Facts for Pilots
- Preflight
- Bird Hazards
- Departures - IFR.
- Good Operating Practices
- En route - IFR
- Airport Location Director

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

Arrival - IFR

All pilots must be thoroughly familiar with and use the information in the AIM.

ADVISORY INFORMATION

NOTAMS (Notices to Airmen) are documents that have information of a time-critical nature that would affect a pilot's decision to make a flight; for example, an airport closed, terminal radar out of service, or enroute navigational aids out of service.

FAA ADVISORY CIRCULARS

The FAA issues Advisory Circulars to inform the aviation public in a systematic way of nonregulatory material of interest. Advisory Circulars contain a wealth of information with which the prudent pilot should be familiar. A complete list of current FAA Advisory Circulars is published in AC 00-2, which lists Advisory Circulars that are for sale, as well as those distributed free of charge by the FAA, and provides ordering information. Many Advisory Circulars which are for sale can be purchased locally in aviation bookstores or at FBO's. These documents are subject to periodic revision. Be certain the Advisory Circular you are using is the latest revision available. Some of the Advisory Circulars of interest to pilots are:

- | | |
|--------|--|
| *00-6 | Aviation Weather |
| 00-24 | Thunderstorms |
| 00-30 | Rules of Thumb for Avoiding or
Minimizing Encounters with
Clear Air Turbulence |
| *00-45 | Aviation Weather Services |

Deechcraft
Twin Engine (Piston)

Section X
Safety Information

00-46	Aviation Safety Reporting Program
20-5	Plane Sense
20-32	Carbon Monoxide (CO) Contamination in Aircraft - Detection and Prevention
20-35	Tie-Down Sense
20-43	Aircraft Fuel Control
20-105	Engine-Power Loss Accident Prevention
20-113	Pilot Precautions and Procedures to be Taken in Preventing Aircraft Reciprocating Engine Induction System and Fuel System Icing Problems
20-125	Water in Aviation Fuels
21-4	Special Flight Permits for Operation of Overweight Aircraft
43-9	Maintenance Records: General Aviation Aircraft
43-12	Preventive Maintenance
60-4	Pilot's Spatial Disorientation
60-6	Airplane Flight Manuals (AFM), Approved Manual Materials, Markings and Placards - Airplanes
60-12	Availability of Industry-Developed Guidelines for the Conduct of the Biennial Flight Review
60-13	The Accident Prevention Counselor Program

**Section X
Safety Information**

**Beechcraft
Twin Engine (Piston)**

*61-9	Pilot Transition Courses for Complex Single-Engine and Light Twin-Engine Airplanes
*61-21	Flight Training Handbook
*61-23	Pilot's Handbook of Aeronautical Knowledge
*61-27	Instrument Flying Handbook
61-67	Hazards Associated with Spins in Airplanes Prohibited from Intentional Spinning.
61-84	Role of Preflight Preparation
*67-2	Medical Handbook for Pilots
90-23	Aircraft Wake Turbulence
90-42	Traffic Advisory Practices at Nontower Airports
90-48	Pilot's Role in Collision Avoidance
90-66	Recommended Standard Traffic Patterns for Airplane Operations at Uncontrolled Airports
90-85	Severe Weather Avoidance Plan (SWAP)
91-6	Water, Slush and Snow on the Runway
91-13	Cold Weather Operation of Aircraft
*91-23	Pilot's Weight and Balance Handbook
91-26	Maintenance and Handling of Air Driven Gyroscopic Instruments

Beechcraft
Twin Engine (Piston)

Section X
Safety Information

91-33	Use of Alternate Grades of Aviation Gasoline for Grade 80/.87
91-35	Noise, Hearing Damage, and Fatigue in General Aviation Pilots
91-43	Unreliable Airspeed Indications
91-44	Operational and Maintenance Practices for Emergency Locator Transmitters and Receivers
91-46	Gyroscopic Instruments - Good Operating Practices
91-50	Importance of Transponder Operations and Altitude Reporting
91-51	Airplane Deice and Anti-ice Systems
91-59	Inspection and Care of General Aviation Aircraft Exhaust Systems
91-65	Use of Shoulder Harness in Passenger Seats
103-4	Hazards Associated with Sublimation of Solid Carbon Dioxide (Dry Ice) Aboard Aircraft
135-9	FAR Part 135 Icing Limitations
210-5A	Military Flying Activities

NOTE:

* For Sale

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

FAA GENERAL AVIATION NEWS

FAA General Aviation News is published by the FAA in the interest of flight safety. The magazine is designed to promote safety in the air by calling the attention of general aviation airmen to current technical, regulatory and procedural matters affecting the safe operation of aircraft. FAA General Aviation News is sold on subscription by the Superintendent of Documents, Government Printing Office, Washington D.C., 20402.

FAA ACCIDENT PREVENTION PROGRAM

The FAA assigns accident prevention specialists to each Flight Standards and General Aviation District Office to organize accident prevention program activities. In addition, there are over 3,000 volunteer airmen serving as accident prevention counselors, sharing their technical expertise and professional knowledge with the general aviation community. The FAA conducts seminars and workshops, and distributes invaluable safety information under this program.

Usually the airport manager, the FAA Flight Service Station (FSS), or Fixed Base Operator (FBO), will have a list of accident prevention counselors and their phone numbers available. All Flight Standards and General Aviation District Offices have a list of the counselors serving the District.

Before flying over unfamiliar territory, such as mountainous terrain or desert areas, it is advisable for transient pilots to consult with local counselors. They will be familiar with the more desirable routes, the wind and weather conditions, and the service and emergency landing areas that are available along the way. They can also offer advice on the type of emergency equipment you should be carrying.

ADDITIONAL INFORMATION

The National Transportation Safety Board and the Federal Aviation Administration periodically issue, in greater detail, general aviation pamphlets concerning aviation safety. FAA Regional Offices also publish material under the FAA General Aviation Accident Prevention Program. These can be obtained at FAA Offices, Weather Stations, Flight Service Stations or Airport Facilities. Some of these are titled:

- 12 Golden Rules for Pilots
- Weather or Not
- Disorientation
- Plane Sense
- Weather Info Guide for Pilots
- Wake Turbulence
- Don't Trust to Luck, Trust to Safety
- Rain, Fog, Snow
- Thunderstorm - TRW
- Icing
- Pilot's Weather Briefing Guide
- Thunderstorms Don't Flirt ... Skirt 'em
- IFR-VFR - Either Way Disorientation Can Be Fatal
- IFR Pilot Exam-O-Grams
- VFR Pilot Exam-O-Grams
- Flying Light Twins Safely
- Tips on Engine Operation in Small General Aviation Aircraft
- Estimating Inflight Visibility
- Is the Aircraft Ready for Flight

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

Tips on Mountain Flying
Tips on Desert Flying
Always Leave Yourself An Out
Safety Guide for Private Aircraft Owners
Tips on How to Use the Flight Planner
Tips on the Use of Ailerons and Rudder
Some Hard Facts About Soft Landings
Propeller Operation and Care
Torque "What it Means to the Pilot"
Weight and Balance. An Important Safety
Consideration for Pilots

**GENERAL INFORMATION ON SPECIFIC
TOPICS**

MAINTENANCE

Safety of flight begins with a well maintained airplane. Make it a habit to keep your aircraft and all of its equipment in airworthy condition. Keep a "squawk list" on board, and see that all discrepancies, however minor, are noted and promptly corrected.

Schedule your maintenance regularly, and have your aircraft serviced by a reputable organization. Be suspicious of bargain prices for maintenance, repair and inspections.

It is the responsibility of the owner and the operator to assure that the airplane is maintained in an airworthy condition and that proper maintenance records are kept.

Use only genuine BEECHCRAFT or BEECHCRAFT approved parts obtained from BEECHCRAFT approved

sources, in connection with the maintenance and repair of Beech airplanes.

Genuine BEEHCRAFT parts are produced and inspected under rigorous procedures to insure airworthiness and suitability for use in Beech airplane applications. Parts purchased from sources other than BEEHCRAFT, even though outwardly identical in appearance, may not have had the required tests and inspections performed, may be different in fabrication techniques and materials, and may be dangerous when installed in an airplane.

Salvaged airplane parts, reworked parts obtained from non-BEEHCRAFT approved sources or parts, components, or structural assemblies, the service history of which is unknown or cannot be authenticated, may have been subjected to unacceptable stresses or temperatures or have other hidden damage not discernible through routine visual or usual nondestructive testing techniques. This may render the part, component or structural assembly, even though originally manufactured by BEEHCRAFT, unsuitable and unsafe for airplane use.

BEEHCRAFT expressly disclaims any responsibility for malfunctions, failures, damage or injury caused by use of non-BEEHCRAFT parts.

Airplanes operated for Air Taxi or other than normal operation, and airplanes operated in humid tropics, or cold and damp climates, etc., may need more frequent inspections for wear, corrosion and/or lack of lubrication. In these areas, periodic inspections should be performed until the operator can set his own inspection periods based on experience.

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

NOTE

The required periods do not constitute a guarantee that the item will reach the period without malfunction, as the aforementioned factors cannot be controlled by the manufacturer.

Corrosion and its effects must be treated at the earliest possible opportunity. A clean, dry surface is virtually immune to corrosion. Make sure that all drain holes remain unobstructed. Protective films and sealants help to keep corrosive agents from contacting metallic surfaces. Corrosion inspections should be made most frequently under high-corrosion-risk operating conditions, such as in areas of excessive airborne salt concentrations (e.g., near the sea) and in high-humidity areas (e.g., tropical regions).

If you have purchased a used aircraft, have your mechanic inspect the aircraft registration records,

logbooks and maintenance records carefully. AnB" unexplained period of time for which the aircraft has been out of service, or unexplained significant repairs may well indicate the aircraft has been seriously damaged in a prior accident. Have your mechanics inspect a used aircraft carefully. Take the time to ensure that you really know what you are buying when you buy a used aircraft.

HAZARDS OF UNAPPROVED MODIFICATIONS

Many aircraft modifications are approved under Supplemental Type Certificates (STC's). Before installing an STC on your airplane, check to make sure that the STC does not conflict with other STC's that have already been installed. Because approval of an STC is obtained by the individual STC holder based upon modification of

Beechcraft

Twin Engine (Piston)

**Section X
Safety Information**

the original type design, it is possible for STC's to interfere with each other when both are installed. Never install an unapproved modification of any type, however innocent the apparent modification may seem. Always obtain proper FAA approval.

Aircraft owners and maintenance personnel are particularly cautioned not to make attachments to, or otherwise modify, seats from original certification without approval from the FAA Engineering and Manufacturing District Office having original certification responsibility for that make and model.

Any unapproved attachment or modification to seat structure may increase load factors and metal stress which could cause failure of seat structure at a lesser "G" force than exhibited for original certification.

Examples of unauthorized attachments found are drilling holes in seat tubing to attach fire extinguishers and drilling holes to attach approach plate book bins to seats.

FLIGHT PLANNING

FAR Part 91 requires that each pilot in command, before beginning a flight, familiarize himself with all available information concerning that flight.

Obtain a current and complete preflight briefing. This should consist of local, enroute and destination weather and enroute navaid information. Enroute terrain and obstructions, alternate airports, airport runways active, length of runways, and takeoff and landing distances for the airplane for conditions expected should be known.

The prudent pilot will review his planned en route track and stations and make a list for quick reference. It is strongly recommended a flight plan be filed with Flight

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

Service Stations, even though the flight may be VFR. Also, advise Flight Service Stations of changes or delays of one hour or more and remember to close the flight plan at destination.

The pilot must be completely familiar with the performance of the airplane and performance data in the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual. The resultant effect of temperature and pressure altitude must be taken into account in performance if not accounted for on the charts. An applicable FAA Approved Flight Manual must be aboard the airplane at all times and include the weight and balance forms and equipment list.

PASSENGER INFORMATION CARDS

Beech has available, for most current production airplanes, passenger information cards which contain important information on the proper use of restraint systems, oxygen masks, emergency exits and emergency bracing procedures. Passenger information cards may be obtained at any BEECHCRAFT Aviation or Aero Center. A pilot should not only be familiar with the information contained in the cards, but should always, prior to flight, inform the passengers of the information contained in the information cards. The pilot should orally brief the passengers on the proper use of restraint systems, doors and emergency exits, and other emergency procedures, as required by Part 91 of the FAR's.

STOWAGE OF ARTICLES

The space between the seat pan and the floor is utilized to provide space for seat displacement. If hard, solid objects are stored beneath seats, the energy absorbing

feature is lost and severe spinal injuries can occur to occupants.

Prior to flight, pilots should insure that articles are not stowed beneath seats that would restrict seat pan energy absorption or penetrate the seat in event of a high vertical velocity accident.

FLIGHT OPERATIONS

GENERAL

The pilot **MUST** be thoroughly familiar with **ALL INFORMATION** published by the manufacturer concerning the airplane, and is required by law to operate the airplane in accordance with the FAA Approved Airplane Flight Manual and placards installed.

PREFLIGHT INSPECTION

In addition to maintenance inspections and preflight information required by FAR Part 91, a complete, careful preflight inspection is imperative.

Each airplane has a checklist for the preflight inspection which must be followed. **USE THE CHECKLIST!**

WEIGHT AND BALANCE

Maintaining center of gravity within the approved envelope throughout the planned flight is an important safety consideration.

The airplane must be loaded so as not to exceed the weight and center of gravity (C.G.) limitations. Airplanes that are loaded above the maximum takeoff or landing weight limitations will have an overall lower level of

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

performance compared to that shown in the Performance section of the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual. If loaded above maximum takeoff weight, takeoff distance and the landing distance will be longer than that shown in the Performance section; the stalling speed will be higher, rate of climb, the cruising speed, and the range of the airplane at any level of fuel will all be lower than shown in the Performance section.

If an airplane is loaded so that the C.G. is forward of the forward limit it will require additional control movements for maneuvering the airplane with correspondingly higher control forces. The pilot may have difficulty during takeoff and landing because of the elevator control limits.

If an airplane is loaded aft of the aft C.G. limitation, the pilot will experience a lower level of stability. Airplane characteristics that indicate a lower stability level are; lower control forces, difficulty in trimming the airplane, lower control forces for maneuvering with attendant danger of structural overload, decayed stall characteristics, and a lower level of lateral-directional damping.

Ensure that all cargo and baggage is properly secured before takeoff. A sudden shift in balance at rotation can cause controllability problems.

AUTOPILOTS AND ELECTRIC TRIM SYSTEMS

Because there are several different models of autopilots and electric trim systems installed in Beech airplanes and different installations and switch positions are possible from airplane to airplane, it is essential that every owner/operator review his Airplane Flight Manual (AFM) Supplements and ensure that the supplements properly describe the autopilot and trim installations on his specific

airplane. Each pilot, prior to flight, must be fully aware of the proper procedures for operation, and particularly disengagement, for the system as installed.

In addition to ensuring compliance with the autopilot manufacturer's maintenance requirements, all owners/operators should thoroughly familiarize themselves with the operation, function and procedures described in the Airplane Flight Manual Supplements. Ensure a full understanding of the methods of engagement and disengagement of the autopilot and trim systems.

Compare the descriptions and procedures contained in the Supplements to the actual installation in the airplane to ensure that the supplement accurately describes your installation. Test that all buttons, switches and circuit breakers function as described in the Supplements. If they do not function as described, have the system repaired by a qualified service agency. If field service advice or assistance is necessary, contact Beech Aircraft Corporation, Customer Support Department.

As stated in all AFM Supplements for autopilot systems and trim systems installed on Beech airplanes, the preflight check must be conducted before every flight. The preflight check assures not only that the systems and all of their features are operating properly, but also that the pilot, before flight, is familiar with the proper means of engagement and disengagement of the autopilot and trim system.

Autopilot Airplane Flight Manual Supplements caution against trying to override the autopilot system during flight without disengaging the autopilot because the autopilot will continue to trim the airplane and oppose the pilot's actions. This could result in a severely out of trim condition. This is a basic feature of all autopilots with electric trim follow-up.

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

Do not try to manually override the autopilot during flight.

IN CASE OF EMERGENCY, YOU CAN OVERPOWER THE AUTOPILOT TO CORRECT THE ATTITUDE, BUT THE AUTOPILOT AND ELECTRIC TRIM MUST THEN IMMEDIATELY BE DISENGAGED.

It is often difficult to distinguish an autopilot malfunction from an electric trim system malfunction. The safest course is to deactivate both. Do not re-engage either system until after you have safely landed. Then have the systems checked by a qualified service facility prior to further flight.

Depending upon the installation on your airplane, the following additional methods may be available to disengage the autopilot or electric trim in the event that the autopilot or electric trim does not disengage utilizing the disengage methods specified in the Supplements.

CAUTION

Transient control forces may occur when the autopilot is disengaged.

1. Turn off the autopilot master switch, if installed.
2. Pull the autopilot and trim circuit breaker(s) or turn off the autopilot switch breaker, if installed.
3. Turn off the RADIO MASTER SWITCH, if installed, and if the autopilot system and the trim system are wired through this switch.

CAUTION

Radios, including VHF COMM are also disconnected when the radio master switch is off.

4. Turn off the ELECTRIC MASTER SWITCH.

WARNING

Most electrically powered systems will be inoperative. Consult the AFM for further information.

5. Push the GA switch on throttle grip, if installed, depending upon the autopilot system.
6. Push TEST EACH FLT switch on the autopilot controller, if installed.

NOTE

After the autopilot is positively disengaged, it may be necessary to restore other electrical functions. Be sure when the master switches are turned on that the autopilot does not re-engage.

The above ways may or may not be available on your autopilot. It is essential that you read your airplane's AFM SUPPLEMENT for your autopilot system and check such function and operation on your system.

The engagement of the autopilot must be done in accordance with the instructions and procedures contained in the AFM SUPPLEMENT.

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

Particular attention must be paid to the autopilot settings prior to engagement. If you attempt to engage the autopilot when the airplane is out of trim, a large attitude change may occur.

IT IS ESSENTIAL THAT THE PROCEDURES SET FORTH IN THE APPROVED AFM SUPPLEMENTS FOR YOUR SPECIFIC INSTALLATION BE FOLLOWED BEFORE ENGAGING THE AUTOPILOT.

TURBULENT WEATHER

A complete and current weather briefing is a requirement for a safe trip.

Updating of weather information en route is also essential. The wise pilot knows that weather conditions can change quickly, and treats weather forecasting as professional advice, rather than an absolute fact. He obtains all the advice he can, but stays alert to any sign or report of changing conditions.

Plan the flight to avoid areas of reported severe turbulence. It is not always possible to detect individual storm areas or find the in-between clear areas.

The National Weather Service classifies turbulence as follows:

Class of Turbulence	Effect
Extreme	Aircraft is violently tossed about and is practically impossible to control. May cause structural damage.
Severe	Aircraft may be momentarily out of control. Occupants are thrown violently against the belts and back into the seat.

	Unsecured objects are tossed about.
Moderate	Occupants require seat belts and occasionally are thrown against the belt. Unsecured objects move about.
Light	Occupants may be required to use seat belts, but objects in the aircraft remain at rest.

Thunderstorms, squall lines and violent turbulence should be regarded as extremely dangerous and must be avoided. Hail and tornadic wind velocities can be encountered in thunderstorms that can destroy any airplane, just as tornadoes destroy nearly everything in their path on the ground.

Thunderstorms also pose the possibility of a lightning strike on an aircraft. Any structure or equipment which shows evidence of a lightning strike, or of being subjected to a high current flow due to a strike, or is a suspected part of a lightning strike path through the aircraft should be thoroughly inspected and any damage repaired prior to additional flight.

A roll cloud ahead of a squall line or thunderstorm is visible evidence of extreme turbulence; however, the absence of a roll cloud should not be interpreted as denoting that severe turbulence is not present.

Even though flight in severe turbulence must be avoided, flight in turbulent air may be encountered unexpectedly under certain conditions.

The following recommendations should be observed for airplane operation in turbulent air:

Flying through turbulent air presents two basic problems, the answer to both of which is proper airspeed. On one

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

hand, if you maintain an excessive airspeed, you run the risk of structural damage or failure; on the other hand, if your airspeed is too low, you may stall.

If turbulence is encountered, reduce speed to the turbulent air penetration speed, if given, or to the maneuvering speed, which is listed in the Limitations section of the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual. These speeds give the best assurance of avoiding excessive stress loads, and at the same time providing the proper margin against inadvertent stalls due to gusts.

Beware of overcontrolling in an attempt to correct for changes in attitude; applying control pressure abruptly will build up G-forces rapidly and could cause structural damage or even failure. You should watch particularly your angle of bank, making turns as wide and shallow as possible. Be equally cautious in applying forward or back pressure to keep the airplane level. Maintain straight and level attitude in either up or down drafts. Use trim sparingly to avoid being grossly out of trim as the vertical air columns change velocity and direction. If necessary to avoid excessive airspeeds, lower the landing gear.

WIND SHEAR

Wind shears are rapid, localized changes in wind direction, which can occur vertically as well as horizontally. Wind shear can be very dangerous to all aircraft, large and small, particularly on approach to landing when airspeeds are slow.

A horizontal wind shear is a sudden change in wind direction or speed that can, for example, transform a headwind into a tailwind, producing a sudden decrease in indicated airspeed because of the inertia of the aircraft. A vertical wind shear, is a sudden updraft or downdraft.

Beechcraft
Twin Engine (Piston)

Section X
Safety Information

Microbursts are intense, highly localized severe downdrafts.

The prediction of wind shears is far from an exact science. Monitor your airspeed carefully when flying near storms, particularly on approach. Be mentally prepared to add power and go around at the first indication that a wind shear is being encountered.

FLIGHT IN ICING CONDITIONS

Every pilot should be intimately acquainted with the FAA Approved National Weather Service definitions for ice intensity and accumulation which we have reprinted below:

INTENSITY

ICE ACCUMULATION

Trace

Ice becomes perceptible. Rate of accumulation slightly greater than rate of sublimation. It is not hazardous even though deicing/anti-icing equipment is not utilized, unless encountered for an extended period of time (over 1 hour).

Light

The rate of accumulation may create a problem if flight is prolonged in this environment (over 1 hour). Occasional use of deicing/anti-icing equipment removes/prevents accumulation. It does not present a problem if the deicing/anti-icing equipment is used.

Moderate

The rate of accumulation is such that even short encounters

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

become potentially hazardous and use of deicing/anti-icing equipment or diversion is necessary.

Severe

The rate of accumulation is such that deicing/anti-icing equipment fails to reduce or control the hazard. Immediate diversion is necessary.

It is no longer unusual to find deicing and anti-icing equipment on a wide range of airplane sizes and types. Since the capability of this equipment varies, it becomes the pilot's primary responsibility to understand limitations which restrict the use of his airplane in icing conditions and the conditions which may exceed the systems capacity.

Pilots and airplane owners must carefully review the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual in order to ascertain the required operable equipment needed for flight in icing conditions. In addition, they must ascertain from the same sources the limits of approval or certification of their airplane for flight in icing conditions, and plan the flight accordingly, if icing conditions are known or forecast along the route.

Every owner and pilot of an airplane should understand that it is not uncommon to find aircraft equipped with less than the full complement of available systems and equipment. For example, propellers and pitot tube may be protected, but the aircraft may not have wing boots or tail boots. The reverse might be true. Windshield, pitot and airfoil surfaces might be protected, but the propellers might not be. Before undertaking any flight into areas where icing conditions might be suspected, inspect the aircraft and review the Pilot's Operating Handbook and FAA Approved Flight Manual to be certain that you are

Beechcraft
Twin Engine (Piston)

Section X
Safety Information

supported by the full complement of required IFR and deicing/anti-icing equipment.

Remember that regardless of its combination of deicing/anti-icing equipment, any aircraft not fully equipped and functional for IFR flight is not properly equipped for flight in icing conditions. An airplane which is not approved or certificated for flight in icing conditions, or which does not have all critical areas protected in the required manner by fully operational anti-icing equipment must not be exposed to icing encounters of any intensity. When icing is detected, the pilot of such an aircraft must make an immediate diversion by flying out of the area of visible moisture or going to an altitude where icing is not encountered.

Some models of Beech airplanes were approved for flight in certain limited icing conditions under the FAA's Bureau of Flight Standards Release No. 434. Under this release, properly equipped airplanes are approved for flight in light to moderate icing conditions only. See Sections 2 and 4 of this manual for icing limitations. These aircraft are not approved for extended flight in moderate icing conditions or flights in any severe icing conditions. Flight in these conditions must be avoided.

Even airplanes fully equipped and certified for flight in the icing conditions described in Appendix C to FAR Part 25 must avoid flights into those conditions defined by the National Weather Service as "Severe". The National Weather Service definition of "Severe Icing" describes that conditions as: "the rate of accumulation is such that deicing/anti-icing equipment fails to reduce or control the hazard." No airplane equipped with any combination of deicing/anti-icing equipment can be expected to cope with such conditions. As competent pilots know, there appears to be no predictable limits for the severest weather conditions. For essentially the same reasons that

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

airplanes, however designed or equipped for IFR flight, cannot be flown safely into conditions such as thunderstorms, tornadoes, hurricanes or other phenomena likely to produce severe turbulence, airplanes equipped for flight in icing conditions cannot be expected to cope with "Severe" icing conditions as defined by the National Weather Service. The prudent pilot must remain alert to the possibility that icing conditions may become "severe" and that his equipment will not cope with them. At the first indication that such condition may have been encountered or may lie ahead, he should immediately react by selecting the most expeditious and safe course for diversion.

Every pilot of a properly fully-equipped Beech airplane who ventures into icing conditions must maintain the minimum speed (KIAS) for operation in icing conditions, which is set forth in the Normal Procedures section, and in the Limitations section, of his Pilot's Operating Handbook and FAA Approved Airplane Flight Manual. a minimum speed for flight in icing conditions is not specified in the manual, the following minimum indicated airspeeds must be maintained:

All Baron and Travel Air Models - 130 KIAS

All other BEECHCRAFT twin-engine models - 140 KIAS

The pilot must remain aware of the fact that if he allows his airspeed to deteriorate below this minimum speed, he will increase the angle of attack of his airplane to the point where ice may build up on the under side of the wings aft of the area protected by the boots.

The fact or extent of ice build-up in unprotected areas will not be directly observable from the cockpit. Due to distortion of the wing airfoil, increased drag and reduced lift, stalling speeds will increase as ice accumulates on

the airplane. For the same reasons, stall warning devices are not accurate and cannot be relied upon in icing conditions.

Even though the pilot maintains the prescribed minimum speeds for operating in icing conditions, ice is still likely to build up on the unprotected areas (the fuselage and unprotected wing leading edge inboard of the engine nacelle). Under some atmospheric conditions, it may even build up aft of the boots despite the maintenance of the prescribed minimum speed. The effect of ice accumulation on any unprotected surface is aggravated by length of exposure to the icing conditions. Ice buildup on unprotected surfaces will increase drag, add weight, reduce lift, and generally, adversely affect the aerodynamic characteristics and performance of the airplane. It can progress to the point where the airplane is no longer capable of flying. Therefore, the pilot operating even a fully-equipped airplane in sustained icing conditions must remain sensitive to any indication, such as observed ice accumulation, loss of airspeed, the need for increased power, reduced rate of climb, or sluggish response, that ice is accumulating on unprotected surfaces and that continued flight in these conditions is extremely hazardous, regardless of the performance of the deicing/anti-icing equipment.

Since flight in icing conditions is not an everyday occurrence, it is important that pilots maintain a proper proficiency and awareness of the operating procedures necessary for safe operation of the airplane and that the airplane is in a condition for safe operation.

Ensure moisture drains in the aircraft structure are maintained open as specified in the Aircraft Maintenance Manual, so that moisture will not collect and cause freezing in the control cable area. Also, control surfaces

**Section X
Safety Information**

**Beechcraft
Twin Engine (Piston)**

tab hinges should be maintained and lubricated as specified in the Aircraft Maintenance Manual.

In icing conditions the autopilot should be disengaged at an altitude sufficient to permit the pilot to gain the feel of the aircraft prior to landing. In no case should this be less than the minimum altitude specified in the Autopilot Airplane Flight Manual Supplement.

Observe the procedures set forth in your Pilot's Operating Handbook and FAA Approved Airplane Flight Manual during operation in icing conditions.

Activate your deice and anti-icing systems before entering an area of moisture where you are likely to go through a freezing level, to make sure all necessary equipment is operative.

Rapid cycling of deice boots or cycling before at least one-half inch (1/2") of ice has accumulated (measured in the chordwise direction or forward from the leading edge), may cause the ice to grow outside the contour of the inflated boots and prevent ice removal.

For any owner or pilot whose use pattern for an aircraft exposes it to icing encounters, the following references are required reading for safe flying:

The aircraft's Pilot's Operating Handbook and FAA Approved Airplane Flight Manual, especially the sections on Normal Procedures, Emergency Procedures, Abnormal Procedures, Systems, and Safety Information.

FAA Advisory Circulars 91-51 Airplane Deice and Anti-ice Systems

FAA Advisory Circulars 135-9 - Icing Limitations

Weather Flying by Robert N. Buck.

Finally, the most important ingredients to safe flight in icing conditions - regardless of the aircraft or the combination of deicing/anti-icing equipment - are a complete and current weather briefing, sound pilot judgement, close attention to the rate and type of ice accumulations, and the knowledge that "severe icing" as defined by the National Weather Service is beyond the capability of modern aircraft and immediate diversion must be made. It is the inexperienced or uneducated pilot who presses on "regardless", hoping that steadily worsening conditions will improve, only to find himself flying an airplane which has become so loaded with ice that he can no longer maintain altitude. At this point he has lost most, if not all, of his safety options, including perhaps a 180 degree turn to return along the course already traveled.

The responsible and well-informed pilot recognizes the limitations of weather conditions, his airplane and its systems and reacts promptly.

WEATHER RADAR

Airborne weather avoidance radar is, as its name implies, for avoiding severe weather--not for penetrating it. Whether to fly into an area of radar echoes depends on echo intensity and shape, spacing between the echoes, and the capabilities of you and your aircraft. Remember that weather radar detects only precipitation drops. Therefore, the radar scope provides no assurance of avoiding turbulence. The radar scope also does not provide assurance of avoiding instrument weather from clouds and fog. Your scope may be clear between intense echoes; this clear area does not necessarily mean you can fly between the storms and maintain visual sighting of them.

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

Thunderstorms build and dissipate rapidly. Therefore, do not attempt to plan a course between echoes using ground based radar. The best use of ground radar information is to isolate general areas and coverage of echoes. You must avoid individual storms from in-flight observations either by visual sighting or by airborne radar. It is better to avoid the whole thunderstorm area than to detour around individual storms unless they are scattered.

Remember that while hail always gives a radar echo, it may fall several miles from the nearest visible cloud and hazardous turbulence may extend to as much as 20 miles from the echo edge. The intensity of the radar echo from hail varies with the size and nature of the hailstone. A hailstone with a wet surface gives a strong radar return while a dry hailstone gives a relatively weak return. Avoid intense or extreme level echoes by at least 20 miles; that is, such echoes should be separated by at least 40 miles before you fly between them. With weaker echoes you can reduce the distance by which you avoid them.

Above all, remember this: never regard any thunderstorm lightly. Even when radar observers report the echoes are of light intensity, avoiding thunderstorms is the best policy. The following are some do's and don'ts of thunderstorm avoidance:

1. Don't land or take off in the face of an approaching thunderstorm. A sudden gust front of low level turbulence could cause loss of control.
2. Don't attempt to fly under a thunderstorm even if you can see through to the other side. Turbulence and wind shear under the storm could be disastrous.
3. Don't fly without airborne radar into a cloud mass containing scattered embedded thunderstorms.

Embedded thunderstorms usually can not be visually circumnavigated.

4. Don't trust visual appearance to be a reliable indicator of the turbulence inside a thunderstorm.
5. Do avoid by at least 20 miles any thunderstorm identified as severe or giving an intense radar echo. This is especially true under the anvil of a large cumulonimbus.
6. Do circumnavigate the entire area if the area has 6/10 or greater thunderstorm coverage.
7. Do remember that vivid and frequent lightning indicates the probability of a severe thunderstorm.
8. Do regard as extremely hazardous any thunderstorm with tops 35,000 feet or higher, whether the top is visually sighted or determined by radar.

If you cannot avoid penetrating a thunderstorm, the following are some do's BEFORE entering the storm:

9. Tighten your safety belt, put on your shoulder harness, and secure all loose objects.
10. Plan and hold your course to take you through the storm in minimum time.
11. To avoid the most critical icing, establish a penetration altitude below the freezing level or above the level of -15°C.
12. Verify that pitot heat is on and turn on carburetor heat or engine anti-ice. Icing can be rapid at any altitude and cause almost instantaneous power failure and/or loss of airspeed indication.

MOUNTAIN FLYING

Pilots flying in mountainous areas should inform themselves of all aspects of mountain flying, including the effects of topographic features on weather conditions. Many good articles have been published, and a synopsis

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

of mountain flying operations is included in the FAA Airman's Information Manual, Part 1.

Avoid flight at low altitudes over mountainous terrain, particularly near the lee slopes. If the wind velocity near the level of the ridge is in excess of 25 knots and approximately perpendicular to the ridge, mountain wave conditions are likely over and near the lee slopes. If the wind velocity at the level of the ridge exceeds 50 knots, a strong mountain wave is probable with extreme up and down drafts and severe turbulence. The worst turbulence will be encountered in and below the rotor zone, which is usually 8 to 10 miles downwind from the ridge. This zone is sometimes characterized by the presence of "roll clouds" if sufficient moisture is present; altocumulus standing lenticular clouds are also visible signs that a mountain wave exists, but their presence is likewise dependent on moisture. Mountain wave turbulence can, of course, occur in dry air and the absence of such clouds should not be taken as assurance that mountain wave turbulence will not be encountered. A mountain wave downdraft may exceed the climb capability of your airplane. Avoid mountain wave downdrafts.

VFR - LOW CEILINGS

If you are not instrument rated, do not attempt "VFR on Top" or "Special VFR" flight or clearances. Being caught above a solid cloud layer when an emergency descent is required (or at destination) is an extremely hazardous position for the VFR pilot. Accepting a clearance out of airport control zones with no minimum ceiling and one-mile visibility as permitted with "Special VFR" is a foolish practice for the VFR pilot.

Avoid areas of low ceilings and restricted visibility unless you are instrument rated and proficient and have an

instrument equipped airplane. Then proceed with caution and with planned alternates.

VFR AT NIGHT

When flying VFR at night, in addition to the altitude appropriate for the direction of flight, pilots should maintain a safe minimum altitude as dictated by terrain, obstacles such as TV towers, or communities in the area flown. This is especially true in mountainous terrain, where there is usually very little ground reference. Minimum clearance is 2,000 feet above the highest obstacle en route. Do not depend on your ability to see obstacles in time to miss them. Flight on dark nights over sparsely populated country can be the same as IFR, and must be avoided by inexperienced or non-IFR rated pilots.

VERTIGO - DISORIENTATION

Disorientation can occur in a variety of ways. During flight, inner ear balancing mechanisms are subjected to varied forces not normally experienced on the ground. This, combined with loss of outside visual reference, can cause vertigo. False interpretations (illusions) result, and may confuse the pilot's conception of the attitude and position of his airplane.

Under VFR conditions, the visual sense, using the horizon as a reference, can override the illusions. Under low visibility conditions (night, fog, clouds, haze, etc.) the illusions predominate. Only through awareness of these illusions, and proficiency in instrument flight procedures, can an airplane be operated safely in a low visibility environment.

Flying in fog, dense haze or dust, cloud banks, or very low visibility, with strobe lights or rotating beacons turned

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

on can contribute to vertigo. They should be turned off in these conditions, particularly at night.

All pilot's should check the weather and use good judgment in planning flights. The VFR pilot should use extra caution in avoiding low visibility conditions.

Motion sickness often precedes or accompanies disorientation and may further jeopardize the flight.

Disorientation in low visibility conditions is not limited to VFR pilots. Although IFR pilots are trained to look at their instruments to gain an artificial visual reference as a replacement for the loss of a visual horizon, they do not always do so. This can happen when the pilot's physical condition will not permit him to concentrate on his instruments; when the pilot is not proficient in flying instrument conditions in the airplane he is flying; or, when the pilot's work load of flying by reference to his instruments is augmented by such factors as turbulence. Even an instrument rated pilot encountering instrument conditions, intentional or unintentional, should ask himself whether or not he is sufficiently alert and proficient in the airplane he is flying, to fly under low visibility conditions and the turbulence anticipated or encountered.

If any doubt exists, the flight should not be made or it should be discontinued as soon as possible.

The result of vertigo is loss of control of the airplane. If the loss of control is sustained, it will result in an excessive speed accident. Excessive speed accidents occur in one of two manners, either as an inflight airframe separation or as a high speed ground impact; and they are fatal accidents in either case. All airplanes are subject to this form of accident.

For years, Beech Pilot's Operating Handbooks and FAA Approved Flight Manuals have contained instructions that

the landing gear should be extended in any circumstance in which the pilot encounters IFR conditions which approach the limits of his capability or his ratings. Lowering the gear in IFR conditions or flight into heavy or severe turbulence, tends to stabilize the aircraft, assists in maintaining proper airspeed, and will substantially reduce the possibility of reaching excessive airspeeds with catastrophic consequences, even where loss of control is experienced.

Excessive speed accidents occur at airspeeds greatly in excess of two operating limitations which are specified in the manuals: Maximum maneuvering speed and the "red line" or maximum operating speed. Such speed limits are set to protect the structure of an airplane. For example, flight controls are designed to be used to their fullest extent only below the airplane's maximum maneuvering speed. As a result, the control surfaces should never be suddenly or fully deflected above maximum maneuvering speed. Turbulence penetration should not be performed above that speed. The accidents we are discussing here occur at airspeeds greatly in excess of these limitations. No airplane should ever be flown beyond its FAA approved operating limitations.

FLIGHT OF MULTI-ENGINE AIRPLANES WITH ONE ENGINE INOPERATIVE

The major difference between flying a twin-engine and single-engine airplane is knowing how to manage the flight if one engine loses power for any reason. Safe flight with one engine inoperative requires an understanding of the basic aerodynamics involved - as well as proficiency in engine out procedures.

Loss of power from one engine affects both climb performance and controllability of twin-engine airplanes.

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

Climb performance depends on an excess of power over that required for level flight. Loss of power from one engine obviously represents a 50% loss of horsepower but, in virtually all twin-engine airplanes, climb performance is reduced by at least 80%. A study of the charts in your Pilot's Operating Handbook and FAA Approved Airplane Flight Manual will confirm this fact. Single-engine climb performance depends on four factors:

Airspeed	too little, or too much, will decrease climb performance
Drag	gear, flaps, cowl flaps, prop, and speed
Power	amount available in excess of that needed for level flight
Weight	passengers, baggage, and fuel load greatly affect climb performance

Loss of power on one engine creates yaw due to asymmetric thrust. Yaw forces must be balanced with the rudder. Loss of power on one engine also reduces airflow over the wing causing a roll toward the "dead" engine which must be balanced with the aileron. The net result of these forces cause the airplane to sideslip slightly toward the dead engine. This sideslip may be balanced by banking slightly (up to 5°) into the operating engine.

CAUTION

In the event of an engine failure with the main tanks less than one-quarter full, corrective action must be taken immediately to prevent large yaw angles from developing and causing stoppage of the remaining engine.

Airspeed is the key to safe single engine operations. For most twin-engine airplanes there is:

<u>Symbol</u>	<u>Description</u>
V _{MCA}	Airspeed below which directional control cannot be maintained
V _{SSE}	Airspeed below which an intentional engine cut should never be made
V _{YSE}	Airspeed that will give the best single engine rate-of-climb (or the slowest loss of altitude)
V _{XSE}	Airspeed that will give the steepest angle-of-climb with one engine out

MINIMUM CONTROL SPEED AIRBORNE (V_{MCA})

V_{MCA} is designated by the red radial on the airspeed indicator and indicates the minimum control speed, airborne at sea level. V_{MCA} is determined by FAA regulations as the minimum airspeed at which it is possible to recover directional control of the airplane within 20 degrees heading change, and thereafter maintain straight flight, with not more than 5 degrees of bank if one engine fails suddenly with:

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

- Takeoff power on both engines
- Rearmost allowable center of gravity
- Flaps in takeoff position
- Propeller windmilling in takeoff pitch configuration

However, sudden engine failures rarely occur with all factors listed above, and therefore, the actual V_{MCA} under any particular situation may be a little slower than the red radial on the airspeed indicator. Most airplanes with an inoperative engine will not maintain level flight at maximum power at speeds at or near V_{MCA} . Consequently, it is not advisable to fly at speeds approaching V_{MCA} , except in training situations or during flight tests. Adhering to the practice of never flying at or below the published V_{MCA} speed for your aircraft does not eliminate loss of directional control as a problem in the event of an engine failure. The pilot must be prepared to use assertive control input to maintain aircraft control following an engine failure.

**INTENTIONAL ONE-ENGINE INOPERATIVE
SPEED (V_{SSE})**

V_{SSE} is specified by the airplane manufacturer and is the minimum speed at which to perform intentional engine cuts. Use of V_{SSE} is intended to reduce the accident potential from loss of control after engine cuts at or near minimum control speed. V_{MCA} demonstrations are necessary in training but should only be made at safe altitude above the terrain and with power reduction on one engine made at or above V_{SSE} .

BEST SINGLE ENGINE RATE-OF-CLIMB SPEED (V_{YSE})

V_{YSE} is designated by the blue radial on the airspeed indicator. V_{YSE} delivers the greatest gain in altitude in the shortest possible time, and is based on the following criteria:

- Critical engine inoperative, and its propeller in the minimum drag position.

- Operating engine set at not more than the maximum continuous power.

- Landing gear retracted.

- Wing flaps up.

- Cowl flaps as required for engine cooling.

- Aircraft flown at recommended bank angle (up to 5° into operating engine).

Drag caused by a windmilling propeller, extending landing gear, or flaps in the landing position, will severely degrade or destroy single engine climb performance. Since climb performance varies widely with type of airplane, weight, temperature, altitude, and airplane configuration, the climb gradient (altitude gain or loss per mile) may be marginal - or even negative - under some conditions. Study the Pilot's Operating Handbook and FAA Approved Flight Manual for your airplane and know what performance to expect with one engine out.

BEST SINGLE ENGINE ANGLE-OF-CLIMB SPEED (V_{XSE})

V_{XSE} is used only to clear obstructions during initial climb-out as it gives the greatest altitude gain per unit of horizontal distance. It provides less engine cooling and requires more rudder control input than V_{YSE}.

SINGLE ENGINE SERVICE CEILING

The single engine service ceiling is the maximum altitude at which an airplane will climb at a rate of at least 50 feet per minute in smooth air, with one engine inoperative.

The single engine service ceiling chart should be used during flight planning to determine whether the airplane, as loaded, can maintain the Minimum En Route Altitude (MEA) if IFR, or terrain clearance if VFR, following an engine failure.

BASIC SINGLE ENGINE PROCEDURES

Know and follow, to the letter, the single-engine emergency procedures specified in your Pilot's Operating Handbook and FAA Approved Airplane Flight Manual for your specific make and model airplane. However, the basic fundamentals of all the procedures are as follows:

Maintain aircraft control and airspeed at all times. **This is cardinal rule No. 1.**

Usually, apply maximum power to the operating engine. However, if the engine failure occurs at a speed below V_{MCA} , during cruise or in a steep turn, you may elect to use only enough power to maintain a safe speed and altitude. If the failure occurs on final approach, use power only as necessary to complete the landing.

Reduce drag to an absolute minimum.

Secure the failed engine and related sub-systems.

The first three steps should be done promptly and from memory. The check list should then be consulted to be sure that the inoperative engine is secured properly and that the appropriate switches are placed in the correct position. The airplane must be banked about 5° into the

operating engine, with the "slip/skid" ball slightly out of center toward the operating engine, to achieve rated performance.

Another note of caution: Be sure to identify the dead engine, positively, before securing it. Remember: First identify the suspected engine (i.e., "Dead foot means dead engine"), second, verify with cautious throttle movement, then secure.

ENGINE FAILURE ON TAKEOFF

If an engine fails before attaining lift-off speed or below V_{MCA} , the only proper action is to discontinue the takeoff. If the engine fails after lift-off with the landing gear still down, the takeoff should still be discontinued if touchdown and roll-out on the remaining runway is still possible.

If you do find yourself in a position of not being able to climb, it is much better to reduce the power on the good engine and land straight ahead than try to force a climb and lose control.

Your Pilot's Operating Handbook and FAA Approved Airplane Flight Manual contains charts that are used in calculating the runway length required to stop if the engine fails before reaching lift-off speed and also has charts showing the single-engine performance after lift-off.

Study your charts carefully. No airplane is capable of climbing out on one engine under all weight, pressure altitude, and temperature conditions. Know, before you take the actual runway, whether you can maintain control and climb out if you lose an engine while the gear is still down. It may be necessary to off-load some weight, or wait for more favorable temperatures.

Section X
Safety Information


Beechcraft
Twin Engine (Piston)

WHEN TO FLY V_X , V_Y , V_{XSE} AND V_{YSE}

During normal two-engine operations, always fly V_Y (V_X if necessary for obstacle clearance) on initial climb out. Then, accelerate to your cruise climb airspeed, which may be V_Y plus 10 or 15 knots after you have obtained a safe altitude. Use of cruise climb airspeed will give you better engine cooling, increased inflight visibility and better fuel economy. However, at first indication of an engine failure during climb out, or while on approach, establish V_{YSE} or V_{XSE} , whichever is appropriate. (Consult your Pilot's Operating Handbook and FAA Approved Airplane Flight Manual for specifics.)

STALLS, SLOW FLIGHT AND TRAINING

The stall warning system must be kept operational at all times and must not be deactivated by interruption of circuits, circuit breakers, or fuses. Compliance with this requirement is especially important in all high performance multi-engine airplanes during engine-out practice or stall demonstrations, because the stall speed is critical in all low speed operations of high-performance airplanes.

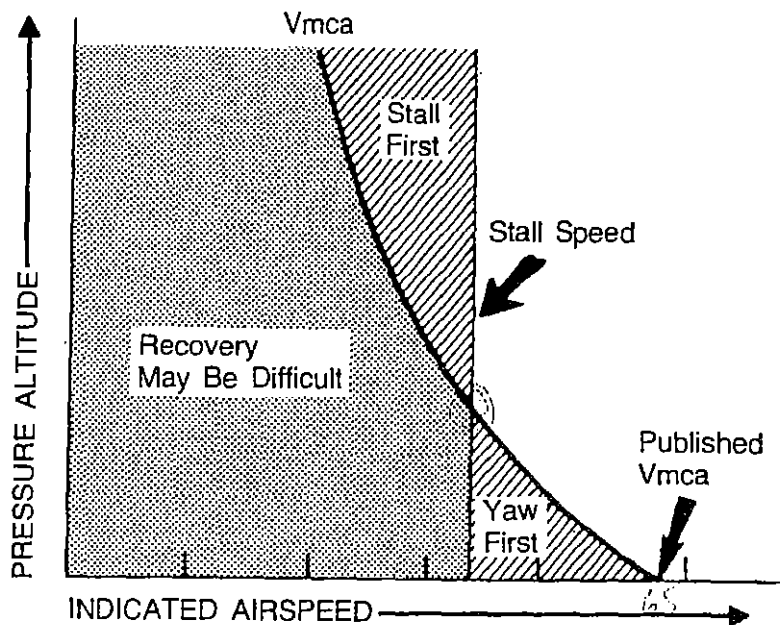

STD-601-38

Relationship Between Stall Speed and V_{MCA} for Aircraft with Normally Aspirated Engines

Training should be accomplished under the supervision of a qualified instructor-pilot, with careful reference to the applicable sections of the FAA Practical Test Standards and FAA Pilot Transition Courses for Complex Single Engine and Light Twin Engine Airplanes (AC61-9B). In particular, observe carefully the warnings in the Practical Test Standards.

The single-engine stall speed of a twin-engine aircraft is generally slightly below the power off (engines idle) stall speed, for a given weight condition. Single-engine stalls

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

should not be conducted in multi-engine airplanes by other than qualified engineering test pilots.

Engine-out minimum control speed generally decreases with altitude, while the single engine stall speed remains approximately constant for normally aspirated engines. No such demonstration should be attempted when the altitude and temperature are such that the engine-out minimum control speed is known, or discovered to be, close to the stalling speed. Loss of directional or lateral control, just as a stall occurs, is potentially hazardous.

V_{SSE}, the airspeed below which an engine should not be intentionally rendered inoperative for practice purposes, was established because of the apparent practice of some pilots, instructors, and examiners, of intentionally rendering an engine inoperative at a time when the airplane is being operated at a speed close to, or below the power-idle stall speed. Unless the pilot takes immediate and proper corrective action under such circumstances, it is possible to enter an inadvertent spin.

It is recognized that flight below V_{SSE} with one engine inoperative, or simulated inoperative, may be required for conditions such as practice demonstration of V_{MCA} for multi-engine pilot certification. Refer to the procedure set forth in the Pilot's Operating Handbook and FAA Approved Airplane Flight Manual for your aircraft. This procedure calls for simulating one engine inoperative by reducing the power level (throttle) on one engine to idle while operating at an airspeed above V_{SSE}. Power on the other engine is set at maximum, then airspeed is reduced at approximately one knot per second until either V_{MCA} or stall warning is obtained. During this transition, rudder should be used to maintain directional control, and ailerons should be used to maintain a 5° bank toward the operative engine. At the first sign of either V_{MCA} or stall warning (which may be evidenced by inability to maintain

longitudinal, lateral or directional control, aerodynamic stall buffet, or stall warning horn sound), recovery must be initiated immediately by reducing power to idle on operative engine and lowering the nose to regain V_{SSE} . Resume normal flight. This entire procedure should be used at a safe altitude of at least 5,000 feet above the ground in clear air only.

If stall warning is detected prior to the first sign of V_{MCA} , an engine-out minimum control speed demonstration cannot be accomplished under the existing gross weight conditions and should not be attempted.

SPINS

A major cause of fatal accidents in general aviation aircraft is a spin. Stall demonstrations and practice are a means for a pilot to acquire the skills to recognize when a stall is about to occur and to recover as soon as the first signs of a stall are evident. If a stall does not occur - A spin cannot occur. It is important to remember however, that a stall can occur in any flight attitude, at any airspeed, if controls are misused.

Unless your aircraft has been specifically certificated in the aerobatic category and specifically tested for spin recovery characteristics, it is placarded against intentional spins. The pilot of an airplane placarded against intentional spins should assume that the airplane may become uncontrollable in a spin, since its performance characteristics beyond certain limits specified in the FAA regulations may not have been tested and are unknown. This is why aircraft are placarded against intentional spins, and this is why stall avoidance is your protection against an inadvertent spin.

Pilots are taught that intentional spins are entered by deliberately inducing a yawing moment with the controls

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

as the aircraft is stalled. Inadvertent spins result from the same combination - stall plus yaw. That is why it is important to use coordinated controls and to recover at the first indication of a stall when practicing stalls.

In any twin engine airplane, fundamental aerodynamics dictate that if the airplane is allowed to become fully stalled while one engine is providing lift-producing thrust, the yawing moment which can induce a spin will be present. Consequently, it is important to immediately reduce power on the operating engine, lower the nose to reduce the angle of attack, and increase the airspeed to recover from the stall. In any twin engine aircraft, if application of stall recovery controls is delayed, a rapid rolling and yawing motion may develop, even against full aileron and rudder, resulting in the airplane becoming inverted during the onset of a spinning motion. Once the airplane has been permitted to progress beyond the stall and is allowed to reach the rapid rolling and yawing condition, the pilot must then immediately initiate the generally accepted spin recovery procedure for multi-engine airplanes, which is as follows:

Immediately move the control column full forward, apply full rudder opposite to the direction of the spin and reduce power on both engines to idle. These three actions should be done as near simultaneously as possible; then continue to hold this control position until rotation stops, then neutralize all controls and execute a smooth pullout. Ailerons should be neutral during recovery. THE LONGER THE PILOT DELAYS BEFORE TAKING CORRECTIVE ACTION, THE MORE DIFFICULT RECOVERY WILL BECOME.

Always remember that extra alertness and pilot techniques are required for slow flight maneuvers, including the practice or demonstration of stalls or VMCA. In addition to the foregoing mandatory procedure, always:

Beechcraft
Twin Engine (Piston)

Section X
Safety Information

Be certain that the center of gravity of the airplane is as far forward as possible. Forward C.G. aids stall recovery, spin avoidance and spin recovery. An aft C.G. can create a tendency for a spin to stabilize, which delays recovery.

Whenever a student pilot will be required to practice slow flight or single-engine maneuvers, be certain that the qualified instructor pilot has a full set of operable controls available. FAA regulations prohibit flight instruction without full dual controls.

Conduct any maneuvers which could possibly result in a spin at altitudes in excess of five thousand (5,000) feet above ground level in clear air only.

Remember that an airplane, at or near traffic pattern and approach altitudes, cannot recover from a spin, or perhaps even a stall, before impact with the ground. For twin engine aircraft, when descending to traffic altitude and during pattern entry and all other flight operations, maintain speed no lower than V_{SSE} . On final approach maintain at least the airspeed shown in the flight manual. Should a go-around be required, do not apply more power than necessary until the airplane has accelerated to V_{SSE} . Recognize that under some conditions of weight, density altitude, and aircraft configuration, a twin engine aircraft cannot climb or accelerate on a single engine. Hence a single engine go-around is impossible and the aircraft is committed to a landing. Plan your approach accordingly.

Remember that if an airplane flown under instrument conditions is permitted to stall or enter a spin, the pilot, without reference to the horizon, is certain to become disoriented. He may be unable to recognize a stall, spin entry, or the spin condition and he may be unable to determine even the direction of the rotation.

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

Finally, never forget that stall avoidance is your best protection against an inadvertent spin. MAINTAIN YOUR AIRSPEED.

DESCENT

In twin engine piston-powered airplanes, supercharged or normally aspirated, it is necessary to avoid prolonged descents with low power, as this produces two problems: (1) excessively cool cylinder head temperatures which cause premature engine wear, and (2) excessively rich mixtures due to idle enrichment (and altitude) which causes soot and lead deposits on the spark plugs (fouling). The second of these is the more serious consideration; the engine may not respond to the throttle when it is desired to discontinue the descent. Both problems are amenable to one solution: maintain adequate power to keep cylinder head temperatures in the "green" range during descent, and lean to best power mixture (that is, progressively enrich the mixture from cruise only slightly as altitude decreases). This procedure will lengthen the descent, of course, and requires some advance planning. If it is necessary to make a prolonged descent at or near idle, as in practicing forced landings, at least avoid the problem of fouled spark plugs by frequently advancing the throttle until the engine runs smoothly, and maintain an appropriate mixture setting with altitude. (Refer to pre-landing check list.)

VORTICES - WAKE TURBULENCE

Every airplane generates wakes of turbulence while in flight. Part of this is from the propeller or jet engine, and part from the wing tip vortices. The larger and heavier the airplane, the more pronounced and turbulent the wakes will be. Wing tip vortices from large, heavy airplanes are very severe at close range, degenerating with time, wind

and distance. These are rolling in nature, from each wing tip. In tests, vortex velocities of 133 knots have been recorded. Encountering the rolling effect of wing tip vortices within two minutes after passage of large airplanes is most hazardous to light airplanes. This roll effect can exceed the maximum counter-roll obtainable in a light airplane. The turbulent areas may remain for as long as three minutes or more, depending on wind conditions, and may extend several miles behind the airplane. Plan to fly slightly above and to the windward side of the other airplanes. Because of the wide variety of conditions that can be encountered, there is no set rule to follow to avoid wake turbulence in all situations. However, the Airman's Information Manual, and to a greater extent Advisory Circular 90-23, Aircraft Wake Turbulence, provide a thorough discussion of the factors you should be aware of when wake turbulence may be encountered.

TAKEOFF AND LANDING CONDITIONS

When taking off on runways covered with water or freezing slush, the landing gear should remain extended for approximately ten seconds longer than normal, allowing the wheels to spin and dissipate the freezing moisture. The landing gear should then be cycled up, then down, wait approximately five seconds and then retracted again. Caution must be exercised to insure that the entire operation is performed below Maximum Landing Gear Operating Airspeed.

Use caution when landing on runways that are covered by water or slush which cause hydroplaning (aquaplaning), a phenomenon that renders braking and steering ineffective because of the lack of sufficient surface friction. Snow and ice covered runways are also hazardous. The pilot should also be alert to the possibility of the brakes freezing.

**Section X
Safety Information**

**Beechcraft
Twin Engine (Piston)**

Use caution when taking off or landing during gusty wind conditions. Also be aware of the special wind conditions caused by buildings or other obstructions located near the runway.

MEDICAL FACTS FOR PILOTS

GENERAL

When the pilot enters the airplane, he becomes an integral part of the man-machine system. He is just as essential to a successful flight as the control surfaces. To ignore the pilot in preflight planning would be as senseless as failing to inspect the integrity of the control surfaces or any other vital part of the machine. The pilot has the responsibility for determining his reliability prior to entering the airplane for flight. When piloting an airplane, an individual should be free of conditions which are harmful to alertness, ability to make correct decisions, and rapid reaction time.

FATIGUE

Fatigue generally slows reaction time and causes errors due to inattention. In addition to the most common cause of fatigue; insufficient rest and loss of sleep, the pressures of business, financial worries, and family problems can be important contributing factors. If you are tired, don't fly.

HYPOXIA

Hypoxia, in simple terms, is a lack of sufficient oxygen to keep the brain and other body tissues functioning properly. There is a wide individual variation in susceptibility to hypoxia. In addition to progressively

insufficient oxygen at higher altitudes, anything interfering with the blood's ability to carry oxygen can contribute to hypoxia (anemias, carbon monoxide, and certain drugs). Also, alcohol and various drugs decrease the brain's tolerance to hypoxia.

Your body has no built-in alarm system to let you know when you are not getting enough oxygen. It is impossible to predict when or where hypoxia will occur during a given flight, or how it will manifest itself. Some of the common symptoms of hypoxia are increased breathing rate, a light-headed or dizzy sensation, tingling or warm sensation, sweating, reduced visual field, sleepiness, blue coloring of skin, fingernails, and lips, and behavior changes. A particularly dangerous feature of hypoxia is an increased sense of well-being, called euphoria. It obscures a person's ability and desire to be critical of himself, slows reaction time, and impairs thinking ability. Consequently, an hypoxic individual commonly believes things are getting progressively better while he nears total collapse.

The symptoms are slow but progressive, insidious in onset, and are most marked at altitudes starting above ten thousand feet. Night vision, however, can be impaired starting at an altitude of 5,000 feet. Persons who have recently overindulged in alcohol, who are moderate to heavy smokers, or who take certain drugs, may be more susceptible to hypoxia. Susceptibility may also vary in the same individual from day to day or even morning to evening. Use oxygen on flights above 10,000 feet and at any time when symptoms appear.

Depending upon altitude, an hypoxic individual has a limited time to make decisions and perform useful acts, even though he may remain conscious for a longer period. If pressurization equipment fails at certain altitudes the pilot and passengers have only a certain

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

amount of time to get an oxygen mask on before they exceed their time of useful consciousness. The time of useful consciousness is approximately 3-5 minutes at 25,000 feet of altitude for the average individual and diminishes markedly as altitude increases. At 30,000 feet altitude, for example, the time of useful consciousness is approximately 1 to 2 minutes. Therefore, in the event of depressurization, oxygen masks should be used immediately.

Should symptoms occur that cannot definitely be identified as either hypoxia or hyperventilation, try three or four deep breaths of oxygen. The symptoms should improve markedly if the condition was hypoxia (recovery from hypoxia is rapid).

Pilots who fly to altitudes that require or may require the use of supplemental oxygen should be thoroughly familiar with the operation of the aircraft oxygen systems. A preflight inspection of the system should be performed, including proper fit of the mask. The passengers should be briefed on the proper use of their oxygen system before flight.

Pilots who wear beards should be careful to ensure that their beard is carefully trimmed so that it will not interfere with proper sealing of the oxygen masks. If you wear a beard or moustache, test the fit of your oxygen mask on the ground for proper sealing. Studies conducted by the military and oxygen equipment manufacturers conclude that oxygen masks do not seal over beards or heavy facial hair.

Federal Aviation Regulations related to the use of supplemental oxygen by flight crew and passengers must be adhered to if flight to higher altitudes is to be accomplished safely. Passengers with significant circulatory or lung disease may need to use supplemental

oxygen at lower altitudes than specified by these regulations.

Pilots of pressurized aircraft should receive physiological training with emphasis on hypoxia and the use of oxygen and oxygen systems. Pilots of aircraft with pressure demand oxygen systems should undergo training, experience altitude chamber decompression, and be familiar with pressure breathing before flying at high altitude. This training is available throughout the United States at nominal cost. Information regarding this training may be obtained by request from the Chief, Civil Aeromedical Institute, Attention: Aeromedical Education Branch, AAC-140, Mike Monroney Aeronautical Center, P. O. Box 25082, Oklahoma City, Oklahoma 73125

HYPERVENTILATION

Hyperventilation, or overbreathing, is a disturbance of respiration that may occur in individuals as a result of emotional tension or anxiety. Under conditions of emotional stress, fright, or pain, breathing rate may increase, causing increased lung ventilation, although the carbon dioxide output of the body cells does not increase. As a result, carbon dioxide is "washed out" of the blood. The most common symptoms of hyperventilation are: dizziness, nausea, sleepiness, and finally, unconsciousness. If the symptoms persist discontinue use of oxygen and consciously slow your breathing rate until symptoms clear, and then resume normal breathing rate. Normal breathing can be aided by talking aloud.

ALCOHOL

Common sense and scientific evidence dictate that you must not fly as a crew member while under the influence

Section X
Safety Information

Beechcraft
Twin Engine (Piston)

of alcohol. Alcohol, even in small amounts, produces, among other things, a dulling of critical judgment; a decreased sense of responsibility; diminished skill reactions and coordination; decreased speed and strength of muscular reflexes (even after one ounce of alcohol); decreases in efficiency of eye movements during reading (after one ounce of alcohol); increased frequency of errors (after one ounce of alcohol); constriction of visual fields; decreased ability to see under dim illuminations; loss of efficiency of sense of touch; decrease of memory and reasoning ability; increased susceptibility to fatigue and decreased attention span; decreased relevance of response; increased self confidence with increased insight into immediate capabilities.

Tests have shown that pilots commit major errors of judgment and procedure at blood alcohol levels substantially less than the minimum legal levels of intoxication for most states. These tests further show a continuation of impairment from alcohol up to as many as 14 hours after consumption, with no appreciable diminution of impairment. The body metabolizes ingested alcohol at a rate of about one-third of an ounce per hour. Even after the body completely destroys a moderate amount of alcohol, a pilot can still be severely impaired for many hours by hangover. The effects of alcohol on the body are magnified at altitudes, as 2 oz. of alcohol at 18,000 feet produce the same adverse effects as 6 oz. at sea level.

Federal Aviation Regulations have been amended to reflect the FAA's growing concern with the effects of alcohol impairment. FAR 91 states:

"(a) No person may act or attempt to act as a crewmember of a civil aircraft:

Beechcraft
Twin Engine (Piston)

Section X
Safety Information

Within 8 hours after the consumption of any alcoholic beverage;

While under the influence of alcohol;

While using any drug that affects the person's faculties in any way contrary to safety; or

While having .04 percent by weight or more alcohol in the blood.

(b) Except in an emergency, no pilot of a civil aircraft may allow a person who appears to be intoxicated or who demonstrates by manner or physical indications that the individual is under the influence of drugs (except a medical patient under proper care) to be carried in that aircraft."

Because of the slow destruction of alcohol by the body, a pilot may still be under influence eight hours after drinking a moderate amount of alcohol. Therefore, an excellent rule is to allow at least 12 to 24 hours between "bottle and throttle," depending on the amount of alcoholic beverage consumed.

DRUGS

Self-medication or taking medicine in any form when you are flying can be extremely hazardous. Even simple home or over-the-counter remedies and drugs such as aspirin, antihistamines, cold tablets, cough mixtures, laxatives, tranquilizers, and appetite suppressors, may seriously impair the judgment and coordination needed while flying. The safest rule is to take no medicine before or while flying, except after consultation with your Aviation Medical Examiner.

SCUBA DIVING

Flying shortly after any prolonged scuba diving could be dangerous. Under the increased pressure of the water, excess nitrogen is absorbed into your system. If sufficient time has not elapsed prior to takeoff for your system to rid itself of this excess gas, you may experience the bends at altitudes even under 10,000 feet, where most light planes fly.

CARBON MONOXIDE AND NIGHT VISION

The presence of carbon monoxide results in hypoxia which will affect night vision in the same manner and extent as hypoxia from high altitudes. Even small levels of carbon monoxide have the same effect as an altitude increase of 8,000 to 10,000 feet. Smoking several cigarettes can result in a carbon monoxide saturation sufficient to affect visual sensitivity equal to an increase of 8,000 feet altitude.

A FINAL WORD

Airplanes are truly remarkable machines. They enable us to shrink distance and time, and to expand our business and personal horizons in ways that, not too many years ago, were virtually inconceivable. For many businesses, the general aviation airplane has become the indispensable tool of efficiency.

Advances in the mechanical reliability of the airplane we fly have been equally impressive, as attested by the steadily declining statistics of accidents attributed to mechanical causes, at a time when the airframe, systems and power plants have grown infinitely more complex. The explosion in capability of avionics systems is even more remarkable. Radar, RNAV, LORAN, sophisticated

Beechcraft
Twin Engine (Piston)

Section X
Safety Information

autopilots and other devices which, just a few years ago, were too large and prohibitively expensive for general aviation size airplanes, are becoming increasingly commonplace in even the smallest airplanes.

It is thus that this Safety Information is directed to the pilot, for it is in the area of the skill and proficiency of you, the pilot, that the greatest gains in safe flying are to be made over the years to come. Intimate knowledge of your aircraft, its capabilities and its limitations, and disciplined adherence to the procedures for your aircraft's operation, will enable you to transform potential tragedy into an interesting hangar story when - as it inevitably will - the abnormal situation is presented.

Know your aircraft's limitations, and your own. Never exceed either.

Safe flying,

.....BEECH AIRCRAFT CORPORATION

**Section X
Safety Information**

**Beechcraft
Twin Engine (Piston)**

(This Page Intentionally Left Blank)

Duchess Be-76 Multi Engine Procedures Discussion

General Information

The information contained in this document should be studied by all applicants undergoing initial or recurrent training to insure that they are familiar with all WVFC procedures and is to be used **in addition** to appropriate check list.

Pre-flight

OBJECTIVE: To develop the trainee's ability to conduct a thorough, systematic walk around inspection.

DESCRIPTION:

- Prior to entering the cockpit, visually check the fuel tanks for fuel level and to determine if there is a need to order fuel.
- Enter the cockpit and check for required documents
- Verify that the gear selector handle is down and avionics master is in the OFF position, turn the battery master, all light switches and PITOT heat switches on
- Perform a walk around to check the lights, don't forget the stall warning vanes
 - Check the left one at this point and after turning off all lights and extending flaps you can quickly check the right stall warning vane before turning the battery master off. (The right stall warning is only activated when flap is extended to at least (16)degrees).
- Verify the master switch in OFF position, exit the cockpit from the pilot side and start the walk around in a counter clockwise direction beginning with checking the flap and flap actuating arm, hinges and pins, check the Aileron for free and correct movement and check the hinges, pins and actuating rod
- Inspect the wing tip, wing leading edge and wing under side should for any possible damage
- Check the fuel tank vent and drain the sump, PITOT heat
- Check the cowling for proper security and drain the fuel selector valve sump
- Check the props, air intake, accessory belt, check the engine oil for proper level (6-8 quarts)
- Inspect the cowl flaps and under side of the engine
- Inspect the landing gear and drain the cross feed line sumps
- Inspect the nose gear assembly, gear door and the nose cone
- Check the heater fresh air intake, combustion air intake fuel drains and exhaust
- Perform the same inspection on the right wing
- Check the empennage, the battery drain and vent
- Inspect the static port

Multi Engine General operating guidelines and procedures cont.

Pre-Flight

- Inspect the tail section and the static port on the right side, visually inspect the cabin air intake on dorsal fin and cabin exhaust outlet
- Verify that the baggage compartment door is closed and secured.
- After verifying with your checklist, at this point your exterior inspection is complete.

Pre Start

- Verify that the gear extension tool is available, seatbelts, doors are secure, avionics are off and circuit breakers are in and again verify that the gear selector handle is in down position
- Exercise the fuel selector valves for proper operation
- Verify cowl flaps open, Carburetor heats off, electrical switches off and turn the battery master and alternator switches on
- Verify the gear position lights and under voltage lights are illuminated.
- Proceed with engine start, taxi and run up check list.

Taxi:

- Mixture must be leaned for ground operations and minimal power should be used for taxi as to avoid excessive use of brakes.
- Use of differential power for turns while the airplane is at full stop will impose unnecessary side loads on the nose gear assembly so therefore should be avoided.

Take-off:

- All available runway should be used for take-offs, hold the brakes until approximately 75% power is achieved
- Check the engine gauges for normal indications before releasing the brakes and applying full power as to detect a possible engine failure before take-off run has started.

Climb out:

The blue line airspeed must be maintained until reaching pattern altitude or if departing until reaching 1000' AGL, at this point complete the climb check-list (1000' check-list), this should consist of:

- Pitch for 100 KTS
- Reduce power to 25" and 2500 RPM
- Aux. Fuel pumps off one at the time and check for fuel pressure
- Landing/taxi lights off

Throughout climb monitor the engine gauges for any unusual indications

BE-76 Multi Engine General operating guidelines and procedures cont.

Cruise:

Refer to pilot operating handbook for appropriate power settings and complete the cruise checklist.

Descent:

- Plan your descent well in advance as to avoid extended flights at power settings below 20", this would be a good setting for en route descents.
- Generally if you plan five miles for every 1000' of altitude to be lost you should have no problem maintaining safe engine temperatures while descending.

Traffic pattern entry and landing:

- You should plan as to enter the traffic pattern at or below 120 KTS and the airplane stage cooled
- Down wind leg abeam the mid field extend the landing gear and verify three greens and no red, abeam your aim point reduce power to 15", extend 10' of flaps and pitch for 100 KTS, extend to 20'
- Turn base and pitch for 90 KTS, turn final extend full flaps and maintain 85 KTS until short final
- Reduce power gradually as to cross threshold at your reference speed and power to idle as you begin your flare to landing.

Instructors General operating guidelines

Pre-flight

- The instructor must be present during the pre-flight to supervise and to assure that the pre-flight is properly conducted by the student.
- Student must be able to identify all pre-flight items on the airplane.
- Minimum fuel level for take-off on the BE-76 is 30 GAL. Since it is impossible to determine the quantity below that level.

Pattern Work

- All landings at runways shorter than 4000' feet are restricted to full stop only.
- All landings following a single engine approach must be to a full stop.
- All engine failures are simulated in the pattern by reducing the throttle.
- Up wind engine cuts are allowed at or above 500' feet AGL.
- Turns in the pattern during single engine operations should be restricted to a maximum of 15 degrees.

En route operations

- For the purpose of training all engine failures below 3000' feet should be considered altitude critical and therefore must be simulated by retarding the throttle, accordingly the student should react to this situation by feathering the inoperative engine rather than trying to trouble shoot.
- Complete shut down of one engine must be performed at altitudes no lower than 5000' feet AGL and Within reach of a suitable runway.
- VMC demonstration must only be performed with simulated engine failure and at an altitude of 5000' feet.

Duchess BE-76

MULTI-ENGINE MANEUVERS

FLOW CHECKLIST

Steep Turns

1. Breakers Visually Checked
2. Trim..... Set
3. Fuel Selectors..... Both On
4. Cowl Flaps Both Half
5. Carb Heat Both Off
6. Throttles..... 15" MP
Props 2300 RPM
7. Landing Gear..... Up
8. Aux Pumps Both On
9. Mags & Masters..... Both/Both
10. Flaps 0*
11. Mix Both Full Rich
12. Throttles..... As Req to Maintain **120 KIAS**

Slow Flight

1. Breakers Visually Checked
2. Trim..... Set
3. Fuel Selectors..... Both On
4. Cowl Flaps Both Open
5. Carb Heat Both Off
6. Throttles..... 15" MP
7. Landing Gear..... Down Below **140 KIAS**
8. Aux Pumps Both On
9. Mags & Masters..... Both/Both
10. Flaps Down in 10* increments
11. Mix Both Full Rich
12. Props Both High RPM Below **100 KIAS**
13. Throttles..... As Req to Maintain **80 KIAS**

Duchess BE-76

MULTI-ENGINE MANEUVERS

FLOW CHECKLIST

Power Off Stall

1. Breakers Visually Checked
2. Trim..... Set
3. Fuel Selectors..... Both On
4. Cowl Flaps Both Closed
5. Carb Heat Both Off
6. Throttles..... 15" MP
7. Landing Gear..... Down Below **140** KIAS
8. Aux Pumps Both On
9. Mags & Masters.....Both/Both
10. Flaps Down in 10* Increments
11. Mix Both Full Rich
12. Props Both High RPM Below **100** KIAS
13. Throttles..... Both Idle
14. Yoke Relax Back Pressure
15. Throttles..... Both Slow Advance to **71** KIAS
16. Throttles.....Both Full After **71** KIAS

Power On Stall

1. Breakers Visually Checked
2. Trim..... Set
3. Fuel Selectors..... Both On
4. Cowl Flaps Both Open
5. Carb Heat Both Off
6. Throttles..... 12" MP
7. Landing Gear..... Up
8. Aux Pumps Both On
9. Mags & Masters.....Both/Both
10. Flaps 0*
11. Mix Both Full Rich
12. Props Both High RPM Below **100** KIAS
13. Throttles..... Hold Power Til ~75 KIAS
14. Yoke Pitch Up
15. Throttles..... 21" MP
16. Yoke Pitch Down at Buffet

Duchess BE-76

MULTI-ENGINE MANEUVERS

VMC DEMONSTRATION

1. Breakers visually check
2. Trim set
3. Fuel selectors on
4. Cowl flaps left closed, right open
5. CARB heats left on, right off
6. Throttles..... both 15"
7. Landing gear.....up
8. AUX pumpson
9. MAGS and masters both on
10. Flapsup
11. Mixturesboth rich
12. Propsboth full forward
13. Throttlesleft idle, right full open
while maintaining directional control using rudder pressure
with maximum 5 degrees of bank towards the good
engine
14. Establish 85 knots
15. Right hand on the good throttle
16. Start increasing back pressure slowly at about one knot
per second
17. At first sign of loss of directional control, good throttle back
to idle, simultaneously relax back pressure to a negative
angle of attack
18. As airplane recovers from VMC, advance good throttle
half way until reaching 71 knots (V_{sse}), then full forward
as you recover to straight and level flight, remember to
increase rudder pressure as throttle is advanced.

Duchess BE-76

Multi Engine Air Start

- A. Fuel SelectorON
- B. ThrottleSet
- C. Aux Fuel pumpON
- D. MagnetoBoth
- E. Airspeed100KTS
- F. Prop controlFULL
forward until engine windmills, then back to Mid
range.
- G. Oil pressureAbove red
radial
- H. MixtureFULL rich
- I. Throttle15"MAP
- J. Propeller2300
- K. Aux fuel pumpOff
- L. Alternator switchON
- M. Oil temp and oil pressureCheck
- N. Cylinder Head Temp200°F
- O. Carburetor HeatOFF
- P. PowerAs required
and trim.